

Montageinfo

Replacing the mixer glass


Re:

all automatic feeders except for SM4 and SA4

Date


February 18, 2005

Replacement

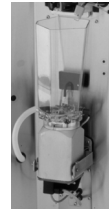

Replacing the mixer glass

1. Remove the intensive mixer from the chassis of the automatic feeder.
2. Loosen the nuts with which the mixer glass is fastened to the motor frame. Take the mixer glass off.
3. Remove the old sealing compound from the headless pins.
4. Wind the new sealing compound around the headless pins.
5. Put the new mixer glass on.
6. Tighten the nuts.

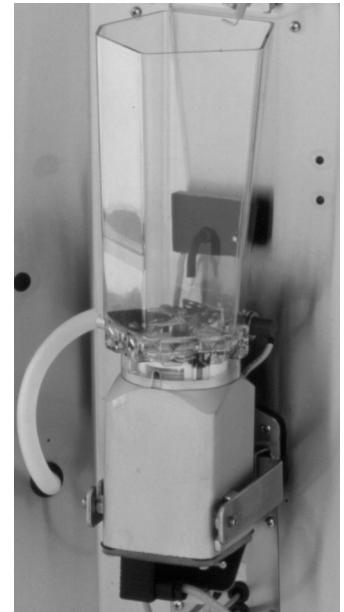

Caution: do not tighten the nuts too much as the mixer glass might be damaged.