

# Original Operating Manual

**Automatic calf feeder**  
**Type COMPACT smart Combi**  
Program version 1.01 and higher

**TAK5-CS1-25 / VDW5-CS1-25**





## Table of contents

<b>1</b>	<b>Introduction</b>	<b>7</b>
1.1	Automatic feeder	7
1.2	Overview of the automatic feeder	9
1.2.1	Front and right side view of automatic feeder	9
1.2.2	Left side view of the automatic feeder	10
1.2.3	Heat exchanger with separate heating circuits for milk and water	12
1.3	Technical data	13
1.3.1	Electrical connection	13
1.3.2	Dimensions of the automatic feeder	13
1.3.3	Weight	13
1.3.4	Water connection	13
1.3.5	Milk connector	14
1.3.6	Heat exchanger	14
1.3.7	Milk powder container	14
1.3.8	Number of feeding stations and animals	14
1.4	Abbreviations	15
1.5	Manufacturer's contact details	16
<b>2</b>	<b>Important safety information</b>	<b>17</b>
2.1	Intended use	17
2.2	Your requirements	17
2.3	Residual risk which can arise from the automatic feeder	17
2.3.1	Material damage caused by the automatic feeder	19
2.4	Your obligations when handling the automatic feeder	19
2.5	What hazard warnings are provided?	20
2.5.1	Components of a hazard description	20
2.5.2	Hazards causing death or injury	21
2.5.3	Material damage	22
2.6	Safety labels on the automatic feeder	22
2.6.1	Warning signs on the machine	23
2.7	Safety equipment on the automatic feeder	24
<b>3</b>	<b>Hygiene</b>	<b>27</b>
<b>4</b>	<b>Operating the automatic feeder</b>	<b>29</b>
4.1	The Auto LED	29
4.2	Offline mode	29
4.3	Automatic mode	30
4.4	Hand terminal	30
4.4.1	The 15-key hand terminal	31
4.4.2	Data backup	33
4.5	Menu structure	33
4.5.1	Symbols	34
4.5.2	Navigation	36
4.5.3	Menus	37
<b>5</b>	<b>Running the automatic feeder</b>	<b>41</b>
5.1	Operating modes	41
5.1.1	Rationed mode	41
5.1.2	Ad lib mode (emergency mode)	41
5.2	CalfCloud	42

5.3	Routine tasks .....	43
<b>6</b>	<b>Cleaning the automatic feeder .....</b>	<b>45</b>
6.1	Cleaning agents .....	46
6.2	Preparing for cleaning .....	46
6.2.1	Cleaning programs that start automatically .....	46
6.2.2	Cleaning programs that are started manually .....	46
6.2.3	Manual cleaning .....	47
6.3	Cleaning the automatic feeder .....	47
6.3.1	Basic settings .....	47
6.3.2	Cleaning the mixer .....	48
6.3.3	Cleaning the heat exchanger .....	51
6.3.4	Cleaning cycle .....	54
6.3.5	Rinsing the hose .....	56
6.3.6	Cleaning the powder discharge opening .....	56
6.3.7	Thorough cleaning of the powder container with the dosing unit .....	57
6.3.8	Cleaning the detergent pump with detergent lance .....	58
<b>7</b>	<b>Transmitter and animal management .....</b>	<b>61</b>
7.1	Managing transmitters .....	61
7.1.1	Basics .....	61
7.1.2	Creating transmitter numbers .....	62
7.1.3	Assigning animal numbers .....	63
7.1.4	Editing transmitter or animal numbers .....	64
7.1.5	Deleting the transmitter number when canceling an animal .....	65
7.1.6	Retrieving transmitter statistics .....	65
7.2	Registering animals .....	66
7.2.1	Registering animals manually .....	66
7.2.2	Registering animals automatically .....	67
7.3	Canceling animals or animal groups .....	68
7.3.1	Canceling an individual animal's registration .....	68
7.3.2	Canceling a group registration .....	69
7.3.3	Canceling the registration of weaned animals .....	69
7.4	Transferring animal registrations .....	70
<b>8</b>	<b>Feeding .....</b>	<b>71</b>
8.1	Replenishing feed .....	71
8.1.1	Filling the milk powder container .....	71
8.1.2	Filling the milk tank .....	71
8.2	Feed preparation .....	72
8.2.1	MP mode .....	72
8.3	Feed distribution .....	74
8.4	Feeding .....	74
8.4.1	40FIT feeding .....	75
8.4.2	Interval feeding program .....	75
8.4.3	Preferred feeding .....	76
8.4.4	Extra portions .....	76
8.5	Checking and changing feeding data for individual animals .....	77
8.5.1	Group membership .....	77
8.5.2	Feed quantity .....	78
8.5.3	Feed concentration .....	78
8.5.4	Milk ratio .....	79
8.5.5	Weight .....	79
8.5.6	Shortening or lengthening total feeding duration .....	79
8.6	Feeding plans .....	80

8.6.1	Changing the default quantity plan . . . . .	81
8.6.2	Changing the default concentration plan . . . . .	83
8.6.3	Changing the default milk ratio plan . . . . .	85
8.6.4	Changing the default quantity limitation plan . . . . .	86
8.7	Winter feeding plan . . . . .	88
8.8	Alarm levels . . . . .	88
<b>9</b>	<b>Animal control . . . . .</b>	<b>91</b>
9.1	Animal list . . . . .	91
9.2	Entitlement . . . . .	93
9.3	Alarm . . . . .	95
9.4	Plan over date . . . . .	96
9.5	40FIT . . . . .	97
9.6	Marked . . . . .	99
9.7	New . . . . .	102
9.8	Double . . . . .	103
9.9	Unknown . . . . .	104
9.10	All . . . . .	105
9.11	Total consumption . . . . .	105
	9.11.1 Consumption of all calves . . . . .	105
	9.11.2 Consumption of individual calves . . . . .	105
	9.11.3 Prepared feed portions . . . . .	106
	9.11.4 Consumption of a group . . . . .	106
9.12	Print . . . . .	106
9.13	Searching for animals . . . . .	106
<b>10</b>	<b>Care and maintenance . . . . .</b>	<b>109</b>
10.1	Daily care and maintenance tasks . . . . .	110
10.2	Weekly care and maintenance tasks . . . . .	112
10.3	Care and maintenance tasks required every 4 months . . . . .	112
	10.3.1 Manually calibrating liquid and powder components . . . . .	112
	10.3.2 Replacing hoses and teats . . . . .	117
10.4	Annual care and maintenance tasks . . . . .	117
<b>11</b>	<b>Faults and warnings . . . . .</b>	<b>119</b>
11.1	Faults . . . . .	119
	11.1.1 Heating . . . . .	119
	11.1.2 Temperature too high . . . . .	120
	11.1.3 Heat exchanger not filled . . . . .	121
	11.1.4 Water shortage . . . . .	121
	11.1.5 Mixer emptying . . . . .	122
	11.1.6 Heating . . . . .	123
	11.1.7 Milk/circ. valve . . . . .	123
	11.1.8 Boiler temperature sensor . . . . .	123
	11.1.9 Calibration . . . . .	124
	11.1.10 Station/drain valve . . . . .	124
	11.1.11 Uncontrolled output . . . . .	124
11.2	Warnings . . . . .	125
	11.2.1 Identification . . . . .	125
	11.2.2 Mixer emptying . . . . .	125
	11.2.3 Mixer temperature sensor . . . . .	126
	11.2.4 Milk empty . . . . .	126
	11.2.5 Unknown transmitters . . . . .	127
	11.2.6 Calibration . . . . .	128
	11.2.7 Calibration scale . . . . .	128

11.2.8	Circulation pump	128
11.2.9	Double animal number	128
11.2.10	Machine capacity	129
11.2.11	Check SD card	129
11.3	Other faults and messages	130
11.3.1	Automatic feeder	130
11.3.2	Hand terminal	130
11.3.3	Bootloader	131
11.4	Service messages	132
<b>12</b>	<b>Disposal</b>	<b>133</b>
12.1	Disposing of residual cleaning agent	133
12.2	Disposing of hoses	133
12.3	Disposing of cables	133
12.4	Disposing of the hand terminal	133
12.5	Processor board	134
12.6	Disposing of the automatic feeder	134
<b>13</b>	<b>Appendix</b>	<b>135</b>
13.1	Standard feeding plans	135
13.2	Basic principle of interval feeding	137
13.3	Milk powder (MP) conversion table	137
13.4	Automatic feeder material list	138
13.5	Care and maintenance schedule / routine work	138
13.5.1	Important safety information	139
13.5.2	Maintenance intervals and activities	139

# 1 Introduction

This chapter explains how your automatic feeder is designed and how to run it safely as intended.

- > Read the operating manual carefully before commissioning the automatic feeder and ask your service technician to explain anything that is unclear to you before commissioning.
- > Do not operate the automatic feeder until you have read and understood the safety chapter (see chapter 2 Important safety information, page 17). Resolve any questions with your service technician before commissioning the feeder.
- > The operating manual for the automatic feeder, the operating manuals of all additional equipment to be connected and the safety data sheets for cleaning agents must be kept readily available at all times and passed on to the next user.
- > Observe all of the warnings and safety instructions in this operating manual.
- > If your automatic feeder has additional equipment, you must also observe the separate operating manuals and the safety warnings and safety instructions for the additional equipment.

## 1.1 Automatic feeder

Modern calf rearing businesses primarily use feeding systems with individual animal identification functions. Calves are identified via their collar transponders or electronic earmarks and fed based on their individual requirements.

Feed is always prepared fresh and dispensed to calves in small portions at the temperature and concentration that you have specified.

The hand terminal provides quick and easy access to the controls of the automatic feeder when you are right near your animals. You can connect the automatic feeder to your PC and then control the feeder from your computer.


**Your advantages:**

1. Added functions eliminate cumbersome routine tasks and save you time.
2. Automatic cleaning programs improve feed hygiene.
3. The hand terminal gives you quick access to important animal data.
4. The animal control list provides a clear and easy way of monitoring animals.
5. The automatic feeder offers you a wide range of options for feeding plans and recipes.
6. You can expand the functionality of the automatic feeder by integrating concentrate feeders and PC programs with graphical analyses.
7. The automatic feeder's rugged and reliable design makes it easier to use in pens.
8. The automatic feeder can be integrated into the feeding systems of well-known dairy equipment manufacturers.



## 1.2 Overview of the automatic feeder

### 1.2.1 Front and right side view of automatic feeder

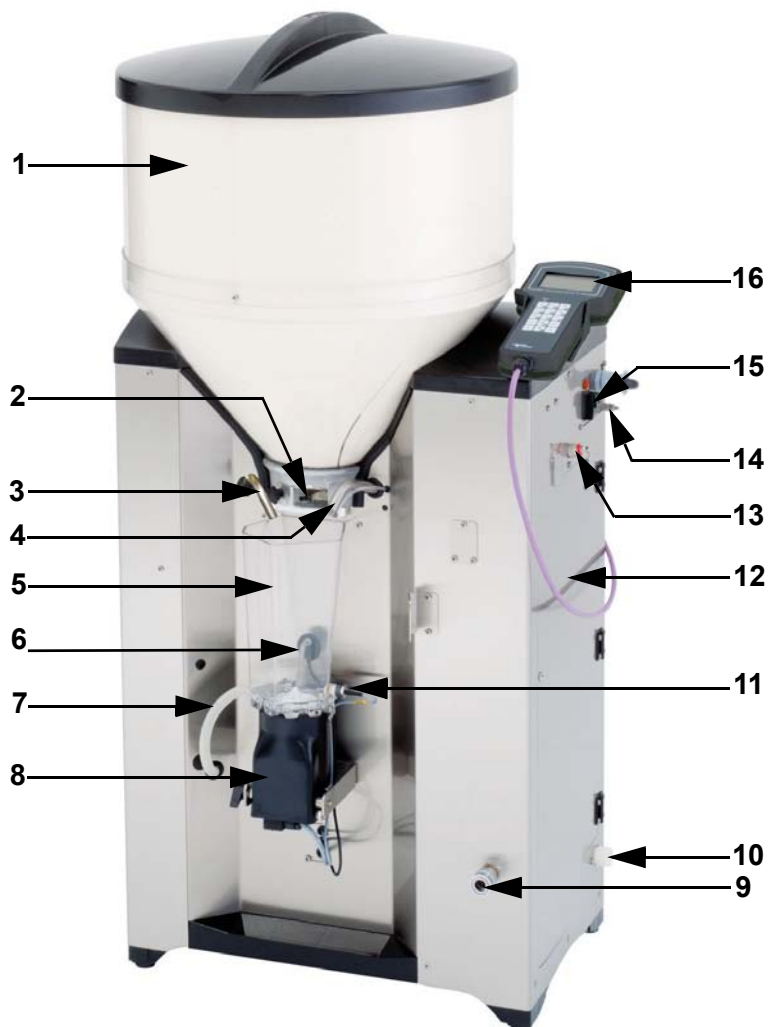


- |   |                               |
|---|-------------------------------|
| 1 Milk powder container                       | 9 Milk connector              |
| 2 Milk powder discharge                       | 10 Water connection           |
| 3 Water supply                                | 11 Temperature sensor         |
| 4 Milk feed                                   | 12 Right door                 |
| 5 Mixer jar                                   | 13 Nozzle for sponge cleaning |
| 6 Rod electrode                               | 14 Ground connection screw    |
| 7 Hose connection from mixer to station valve | 15 Control switch             |
| 8 Mixer motor                                 | 16 Hand terminal              |


### 1.2.2 Left side view of the automatic feeder

The name plate is located above the left side door on the outside of the automatic feeder. It contains information about the manufacturer, type and number of the automatic feeder, information about connecting the feeder to the power supply as well as its certification. An example of a name plate is shown below.

#### Name plate

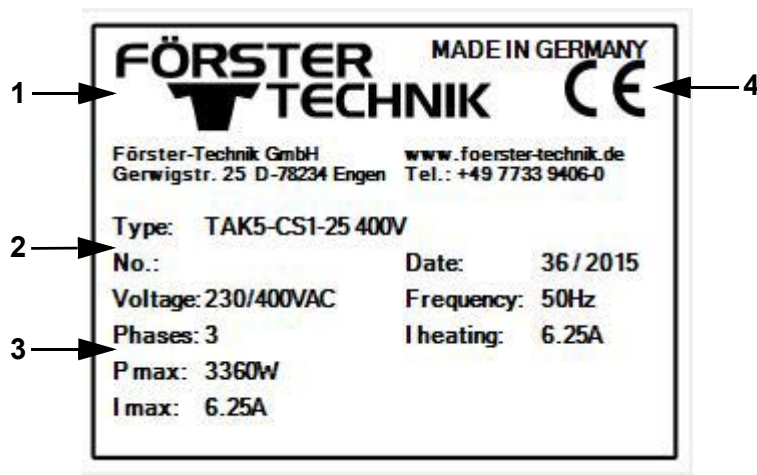


- 1 Name and address of the manufacturer
- 2 Type and number of the automatic feeder
- 3 Information on the connection to the power supply
- 4 The automatic feeder's certification

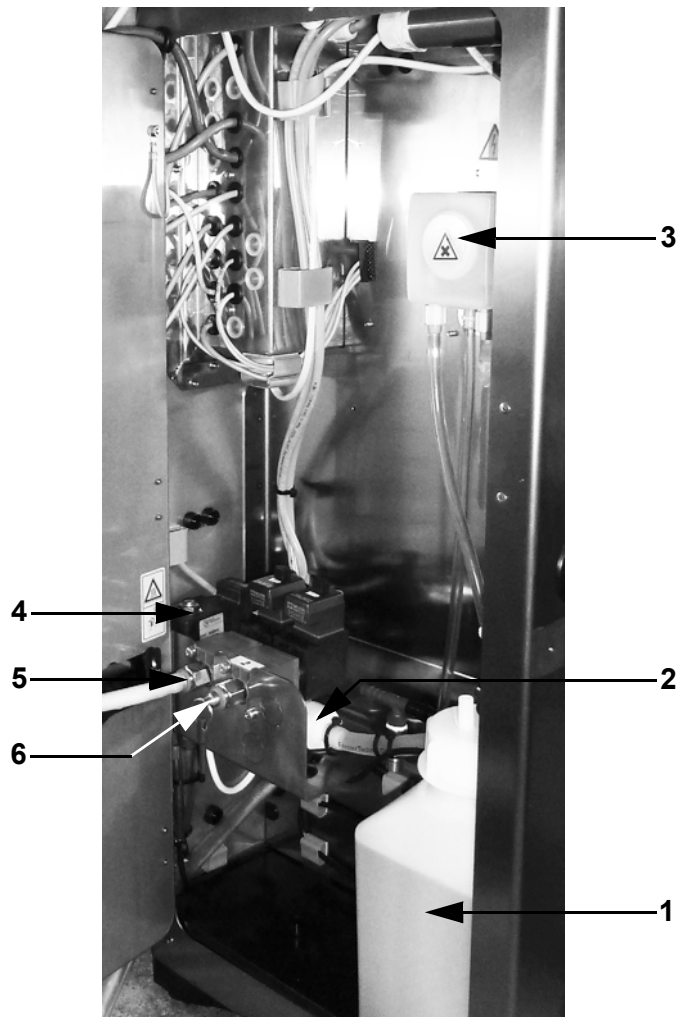**Behind the left side door**

- 1 Storage container for detergent
- 2 Feeding pump
- 3 Detergent dosing pump
- 4 Mixer drain valve
- 5 Feeding box valve(s)

### 1.2.3 Heat exchanger with separate heating circuits for milk and water

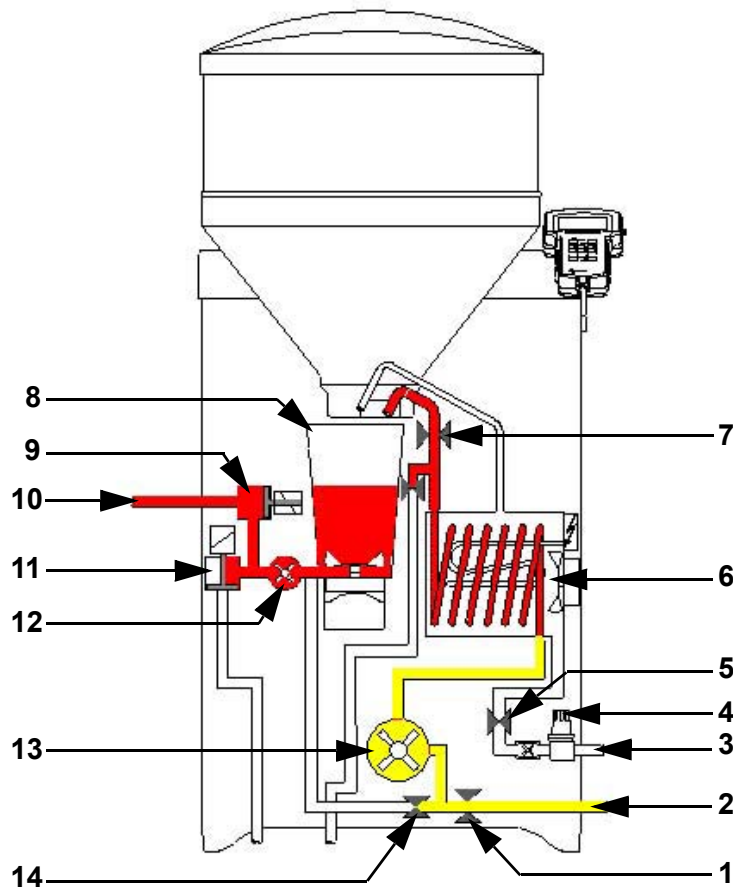


- |  |   |
|--|---|
| 1 Milk valve                               | 8 Mixer   |
| 2 Hose connection for milk tank            | 9 Feeding box valve                                   |
| 3 Hose connection for water pipe           | 10 Hose connection between feeding box valve and teat |
| 4 Volume control valve                     | 11 Mixer drain valve                                  |
| 5 Boiler water valve                       | 12 Feeding pump                                       |
| 6 Heat exchanger with stainless steel coil | 13 Milk pump  |
| 7 Ball valve                               | 14 Circulation valve                                  |

## 1.3 Technical data

### 1.3.1 Electrical connection

**Note:** The specifications for the electrical connection to your automatic feeder are on its name plate above the left side door on the outside (see **1.2.2** Left side view of the automatic feeder, page 10).

### 1.3.2 Dimensions of the automatic feeder

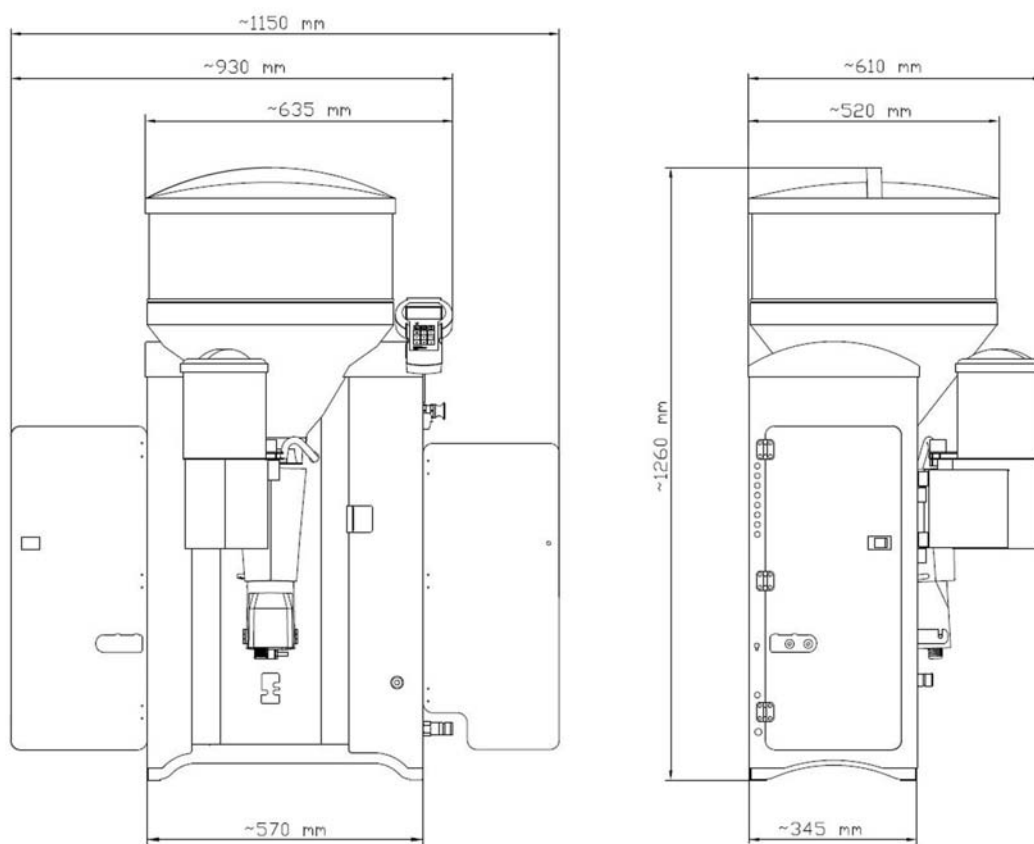

Depth when the fly screen door is opened ~ 690 mm

### 1.3.3 Weight

Approx. 80 kg.

### 1.3.4 Water connection

Water is connected via a 3/4 inch hose and with a 3/4 inch screwed connection.

**ATTENTION** The water should be of drinking water quality. Please bear in mind that high calcium, iron and manganese concentrations cause premature wear. In these cases it makes sense to install appropriate filtration systems.

### 1.3.5 Milk connector

Milk is connected via a 1/2 inch hose and with a 1/2 inch screwed connection.

### 1.3.6 Heat exchanger

The stainless steel coil holds 0.25 l of milk.

### 1.3.7 Milk powder container

The milk powder container with attachment holds approximately 35 kg of milk substitute.

### 1.3.8 Number of feeding stations and animals

Feeding stations	Calves per feeding station	Calves per device
Max. 2	Max. 25	Max. 50

## 1.4 Abbreviations


Below is a list of the abbreviations used in this operating manual.

Abbreviation	Meaning
add. disp.	Additive dispenser
abs.	Absolute
Ball valve	Ball valve
bo	Boiler
C	Concentrate
cl.mixer	Cleaning the mixer
comp. factor	Compensation factor
conc./concentr.	Concentration
dos.	Dosage
Drnk spd.	Drinking speed
Drain via teat	Drain via teat
dr. time	Drain time
EI	Electrolyte
Elec.	Electrode
F / f	40FIT feeding principle
Full mixer	Mixer full
gradient	Gradient control
gr. A (B)	Group A (B)
HE	Heat exchanger
IFS-TR / IFS-4 / -KF	Intelligent feeding station feed / quadruple compact unit / concentrate
Inc./Red.	Increase/reduction
l. service	last service
IV	Interval feeding program
MAP	Manual feeding pump
MP	Milk substitute
max	Maximum
Min. temp.	Minimum temperature
No.	Number
n. service	next service
P 1-5	Periods 1 - 5
R	rationed feeding principle
R1-4	Prescription 1 to 4
servo	Servo control
sw.off del.	Switch-off delay
sw. on del.	Switch-on delay
Temp.	Temperature
TR	Feeding box
T. slider	Teat slider
w. add.	With additive
w/o add.	Without additive
water bo.	Boiler water

## 1.5 Manufacturer's contact details

Please contact us if you have any questions about our products or require technical support. When you contact us, always specify the model, serial number and program version of your automatic feeder so that we can tailor our service to your unit.

The device number and model are located on the name plate on the left of the automatic feeder housing. When commissioning your automatic feeder, ask your service technician for the device number and model.

You can call up the program version via your hand terminal. The menu item for the program version can be found under  > **Diagnosis > Version > Feeder**. When commissioning your automatic feeder, ask your service technician for the version of your program.

You can note the device type, serial number and program version in the fields provided.

Device type:

Serial number:

Program version:

### Our contact details:

Förster-Technik GmbH  
Gerwigstrasse 25  
D-78234 Engen, Germany  
Tel: +49/ (0)7733/ 9406- 0  
Fax: +49/ (0)7733/ 9406- 99  
info@foerster-technik.de  
www.foerster-technik.de



## 2 Important safety information

This chapter outlines:

- The hazards caused by your automatic feeder and how to avoid them.
- The safety labels attached to the automatic feeder and what they mean.
- How to operate the automatic feeder safely.

The automatic feeder is state of the art and is produced in compliance with recognized safety regulations. However, hazards and adverse effects may arise when using it. Both warning signs directly on the automatic feeder and warning notices in this manual provide warning of these hazards.

### 2.1 Intended use

The automatic feeder may only be used to prepare, heat, and dispense liquid feeds, for example milk, for calves.

### 2.2 Your requirements

You must have experience in calf rearing, many years of professional experience in agriculture and an excellent command of technical agricultural practice.

You must be familiar with accident prevention regulations and the generally recognized safety regulations.

### 2.3 Residual risk which can arise from the automatic feeder

**Hazards to health caused by the automatic feeder:**

**⚠ WARNING** The automatic feeder is electrically powered. You must observe the general precautions for handling electrical equipment:

- Read the operating manual before operating the automatic feeder.
- Keep children away from the automatic feeder.
- Do not touch any moving parts of the automatic feeder, for example the mixer blades.
- Only use genuine spare parts from the manufacturer.

- Turn off the automatic feeder and disconnect the power plug before carrying out any maintenance or cleaning work on the automatic feeder.
- If you are operating the automatic feeder outside of closed spaces, you must protect it against rain and moisture, for example with a roof.
- The following specific hazards are associated with the automatic feeder's electrical system:
  - **Electrical breakdown.** If there is an electrical or voltage breakdown, electric current flows through parts of the automatic feeder that are normally insulated. Touching the unit can cause a fatal electric shock. The automatic feeder must be checked regularly for electrical safety in compliance with national regulations (repeated inspection). Make sure that a 30 mA residual current device (RCD) is installed.
  - **Short circuit, indirect contact.** If there is a short circuit, current at many times the level of the operating current can flow. Touching the unit can cause a fatal electric shock. Make sure you install a fuse (provided by the customer) corresponding to the rating on the name plate and a 30 mA residual current device (RCD) in compliance with local regulations.
- The solenoid valves and the pipes to the valves can reach temperatures of up to 70°C. Touching them can cause burns. Do not touch the solenoid valves and pipes during operation.
- Liquid at temperatures of up to 70°C can spray out of the pipes to the valves. This can cause scalding. Do not touch the pipes during operation. Carry out the recommended maintenance on the hoses.
- The mixer and powder supply may start up unexpectedly if a calf which is entitled to feed approaches the unit. This can crush or chop off fingers or hands. Never reach into the area of the mixer or powder supply while the automatic feeder is in operation. Only use the scraper supplied to clean the powder discharge opening.
- **Poisoning.** Additives that are fed to the calves may contain substances that are hazardous to human health. Avoid direct contact and always wear protective gloves and goggles when handling these substances.
- **Chemical burns.** The cleaning agent used to clean the automatic feeder contains caustic substances. These can cause severe injuries to the hands or eyes. Avoid direct contact and

always wear chemical-proof protective gloves and goggles when handling the cleaning agent.

- **Excessive strain.** The automatic feeder weighs 80 kg. Never attempt to carry it by yourself as this can cause excessive physical strain.

### 2.3.1 Material damage caused by the automatic feeder

The automatic feeder can cause the following types of material damage:

- **Infection.** Improper cleaning or incorrect operation can result in calves becoming infected by pathogens from the automatic feeder. This can lead to medical costs or to the death of the calves.
- **Corrosion.** Improper cleaning or maintenance can result in the automatic feeder ceasing to function correctly.
- **Loss of stability.** The automatic feeder must be set up on a level surface. Otherwise, the automatic feeder can tip over and suffer damage.

## 2.4 Your obligations when handling the automatic feeder

- Prevent misuse by children.
- Carefully read the operating manual before starting to use your automatic feeder and ask your service engineer to explain anything that you do not understand before you use it for the first time.
- Follow the health and safety and accident prevention regulations.
- Only clean the automatic feeder with the cleaning agents recommended in this manual (see **6.1 Cleaning agents, page 46**).
- When cleaning the automatic feeder, observe the safety instructions stipulated in the safety data sheet for the cleaning agent.
- Wear the safety equipment specified in the safety data sheet for the cleaning agent, such as goggles and chemical-proof protective gloves, when cleaning the automatic feeder.
- Only operate the automatic feeder if it is in faultless condition and is fully functional.
- Only operate the automatic feeder if the safety equipment is fitted and intact.

- Regularly check the fitted safety equipment to ensure that it is working properly. You will find a care and maintenance schedule in the appendix (see **13.5.2** Maintenance intervals and activities, page **139**), which provides recommendations of how often to check the various safety devices.
- Visually inspect the automatic feeder for possible damage. You will find a care and maintenance schedule in the appendix (see chapter **13.5.2** Maintenance intervals and activities, page **139**), which provides recommendations of how often you should check different parts of the automatic feeder.
- Repair any damage to the automatic feeder, or if you are not authorized to or capable of doing this yourself, have it repaired by a service engineer.
- Never carry out any unauthorized modifications to the automatic feeder.
- Keep all safety labels on the automatic feeder in a legible condition. Replace damaged or illegible safety labels immediately. You can order new safety labels from Förster-Technik GmbH.
- Only use genuine accessories, spare parts, and wearing parts. These are available from your dealer.

## **2.5 What hazard warnings are provided?**

Hazards are indicated directly on the automatic feeder by safety labels (warning signs, instruction and prohibition notices), and in the operating manual by specially marked hazard descriptions.

The warnings for hazards that can cause death or injury to people are emphasized more than those for material damage, for example through the colors, hazard words or symbols used.

Safety labels are an important element of the overall automatic feeder safety concept. They provide warnings about hazards and explain how to avoid them.

Make sure that all the specified safety labels are fitted to your automatic feeder and that they are in a legible condition. If the safety labels are difficult to read, replace them immediately.


New safety labels are available from Förster-Technik GmbH.




### **2.5.1 Components of a hazard description**

A hazard description is always made up of the following elements:

- The hazard word (Danger, Warning, Caution, Attention).
- The nature of the hazard (what could happen?).
- The location of the hazard (where can it occur?).
- The actions to take to prevent the hazard (what do I need to do?).

### 2.5.2 Hazards causing death or injury

Depending on their severity and the probability of them occurring, hazards that can cause death or injury to people are indicated by a hazard symbol  (warning triangle with exclamation mark) and the following hazard words:

- The word **DANGER** indicates an imminent hazard that will lead to death or serious injury.
  - Warning signs on automatic feeder: **DANGER** (white text on red background).
  - Operating manual:  (white text on black background).
- The word **WARNING** indicates a potentially hazardous situation that could lead to death or serious injury.
  - Warning signs on automatic feeder: **WARNING** (black text on orange background).
  - Operating manual:  (white text on black background).
- The word **CAUTION** indicates a potentially hazardous situation that could lead to minor injury.
  - Warning signs on automatic feeder: **CAUTION** (black text on yellow background).
  - Operating manual:  (white text on black background).

**The automatic feeder can cause the following hazards that can result in death or injury:**

- Electrical breakdown.
- Short circuit, indirect contact.
- Electric shock.
- Spraying of liquids at high pressure.
- Burns, scalding.
- Unintentional, unexpected start-up.

- Excessive strain.
- Crushing, clipping, cutting or cutting off.
- Health hazards.
- Chemical burns.

### 2.5.3 Material damage

The word **Attention** indicates possible material damage. The automatic feeder or an object in its vicinity may be damaged, for example a calf.

- Prohibition notice on the automatic feeder: a pictogram crossed out in red in a white circle with a red border indicates something you are not allowed to do.
- Operating manual: **ATTENTION** (white text on black background).

**The automatic feeder can cause the following material damage:**

- Infection.
- Corrosion.
- Loss of stability.

## 2.6 Safety labels on the automatic feeder

Different safety labels are attached at the hazardous points on the automatic feeder. Warning signs, prohibition and instruction notices.

### What are warning signs?

Warning signs consist of:

- A pictogram in a yellow triangle illustrating the potential hazard.

### What are prohibition notices?



Prohibition notices show a pictogram of the prohibited action in a red crossed out circle. See adjacent example. They illustrate what you are not allowed to do. In the example, the crossed out hose means that you are not allowed to use high pressure cleaners.

### What are instruction notices?



Instruction notices show a pictogram of what you are being instructed to do in a blue circle. They illustrate what you have to do. In the example, the pictogram means that you must always disconnect the plug first.


### Other labels



Grounding label You will see this label at the points where you have to ground the equipment.

## 2.6.1 Warning signs on the machine

### Danger of death by electric shock

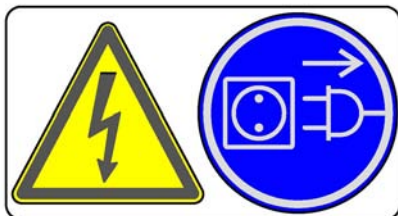

### Burns / scalding



### Health hazards due to additives



### Chemical burns caused by cleaning agents



### Automatic startup



### Do not spray the equipment down



### Grounding label



## 2.7 Safety equipment on the automatic feeder

The automatic feeder may only be operated if the safety equipment is complete and intact. The automatic feeder has the following safety equipment:

- Safety signs (warning signs, instruction and prohibition signs).
- The heater's safety temperature limiter. This shuts down the heater in the event of overheating (temperature rises above 70°C). The heater may only be reactivated by a service engineer.



- Safety grid for the powder hopper attachment. The safety grid prevents people from being injured by the rotating tools in the hopper, for example when adding milk powder. It must always be installed when the unit is operating.
- The scraper next to milk powder discharge. The powder discharge opening may only be cleaned with the scraper. This prevents finger and hand injuries caused by the powder conveyor starting up automatically.

The safety devices at the machine are an important part of the safety concept and help prevent accidents.

- Do not remove or change the safety devices without observing the corresponding safety instructions.
- Put the machine into service only after all safety devices have been attached and are in protection position.

### **Safety temperature limiter**

The heating of the automatic feeder is equipped with a safety temperature limiter which is triggered in the event of overheating (70°C) and consequently shuts down the heating.

The safety temperature limiter is triggered if the water gets too hot or if the heater is running dry.

The heater may only be reactivated by a service engineer.

### **Safety grid for powder hopper attachment**

The protective grid for the powder hopper attachment prevents you from being injured by the rotating tools in the powder hopper, for example, when filling in milk powder.




1 Protective grid

**⚠ WARNING** There is a risk of injury due to rotating tools. The safety grid must always be installed when the unit is operating.

### Scraper next to milk powder discharge

The powder discharge opening may only be cleaned with the scraper. This prevents finger and hand injuries caused by the mixer starting up automatically.

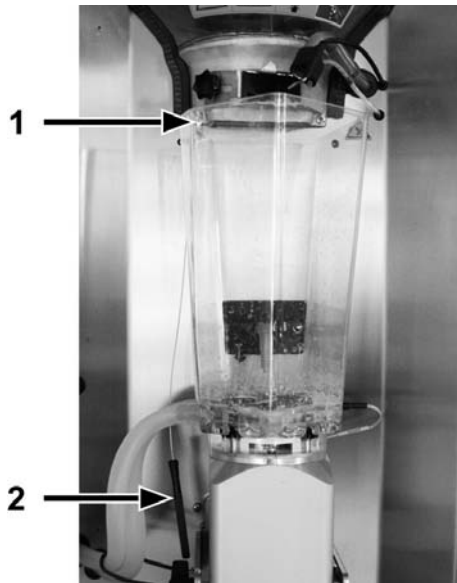

- 1 Mount for scraper
- 2 Scraper

**⚠ WARNING** There is a risk of injury due to automatic start-up. Do not reach into the hazardous area of the mixer. The mixer can start up automatically at any time, crushing or cutting off your fingers. Always turn off the automatic feeder with the control switch and disconnect the power plug. Only use the scraper supplied to clean the powder discharge opening.

### 3 Hygiene

As a farmer with experience in calf rearing, you understand how unhygienic conditions affect the health of your calves. Diarrhea and respiratory infections are frequently occurring infectious diseases in calves.

Every sick calf involves additional costs, for example for veterinarians and medication, and requires extra time for care.

The younger the calf, the weaker its immune system, and the more prone to infection it will be.

The possibility of infection can never be completely eliminated, but it can be minimized by taking measures to ensure good hygiene.

Maintaining cleanliness is one important and easy measure that helps prevent infectious diseases.

Through proper cleaning at regular intervals, every calf-rearing business can reduce the risk of infection for its calves and save money as a result.

**Measures to ensure hygienic conditions save time and money.**

**What are infections?** An infection occurs when germs invade and multiply in a host.

Germs are all around us. However, they are not dangerous until they multiply in great numbers. The risk of infection increases with the number of germs.

When germs get into your animal feed, such as milk, they can spoil the feed and make it inedible.

When germs get into your calves, for example from infected feed or other infected calves, your calves can become sick and die.

Both situations result in costs that you can minimize by taking measures to ensure hygienic conditions.

As a farmer, it is your job to identify sources of infection and bring them under control.

**So how do you prevent infections?** By keeping animals in good conditions, with good drinking water and feed quality and, most importantly, through cleanliness.

**Proper cleaning is an important way of ensuring hygienic conditions and also prevents infections.**

If the automatic feeder is not cleaned or is cleaned improperly, germs, which are abundant in the environment, can enter the nutrient-rich feed and multiply. When they drink the feed, calves can become infected, sick and even die.

Proper cleaning of the automatic feeder reduces the number of germs and therefore the risk of infection.

The cleaning (see **6** Cleaning the automatic feeder, page **45**) chapter explains how to clean the automatic feeder properly. The appendix contains a table of suggestions of how to clean the different parts of the automatic feeder (see chapter **13.5.2** Maintenance intervals and activities, page **139**).

## 4 Operating the automatic feeder

This chapter explains how to operate your automatic feeder using the hand terminal.

The hand terminal is directly connected to your automatic feeder by a cable. You switch it on and off together with the automatic feeder. It remains in operation as long as the automatic feeder is switched on.

**Note:** After the hand terminal has been switched on, the version of the hand terminal's program first briefly appears in the display, before the automatic feeder carries out a test routine. Do not press any buttons on the control panel during these initial routines.

- You monitor and control the automatic feeder (the **feeding pump**, for example) directly via the keys of the hand terminal.
- You monitor and change the settings of the automatic feeder and the values for your calves via menus. The menus and sub-menus are arranged so that you can find the necessary settings quickly and easily. With a click of a button, you can access the most important menus, such as **Animal control**, **Main menu** and **Manual functions** as well as the **Animal list**.

You can run the automatic feeder in offline mode or in automatic mode.

### 4.1 The Auto LED

The Auto LED (light-emitting diode) of your hand terminal displays important information about the status of the automatic feeder:

- In automatic mode, the LED lights up green.
- In offline mode, the LED is not lit up.
- In event of faults or warnings, the LED flashes.

### 4.2 Offline mode

In offline mode, you do things that you cannot do while the unit is in operation, such as recalibrate feed components. When the automatic feeder switches from automatic to offline mode, the Auto LED goes out.

You switch to offline mode when you open a menu that requires offline mode, such as the calibration menu.

1. In the corresponding menu, press .

2. Confirm the message **Exit automatic mode?** message by choosing .

The Auto LED on your hand terminal goes out.

3. Perform the desired action.

### 4.3 Automatic mode

You perform most routine tasks, such as feeding, in automatic mode. In automatic mode, the Auto LED lights up green.

You end automatic mode by pressing  and by confirming the message **Exit automatic mode?** with .

After a prolonged period of inactivity, the automatic feeder automatically returns to automatic mode. This time period is defined during commissioning. The default setting is 20 minutes.

**You switch from offline mode to automatic mode as follows:**


1. Press  until the message **Start automatic mode?** appears in your display.
2. Press .

You are now in automatic mode again. The Auto LED lights up green.

### 4.4 Hand terminal


The hand terminal is directly connected to the automatic feeder by a cable. The lighting of the display switches off when the unit is not used for a long period. This saves power.

#### 4.4.1 The 15-key hand terminal

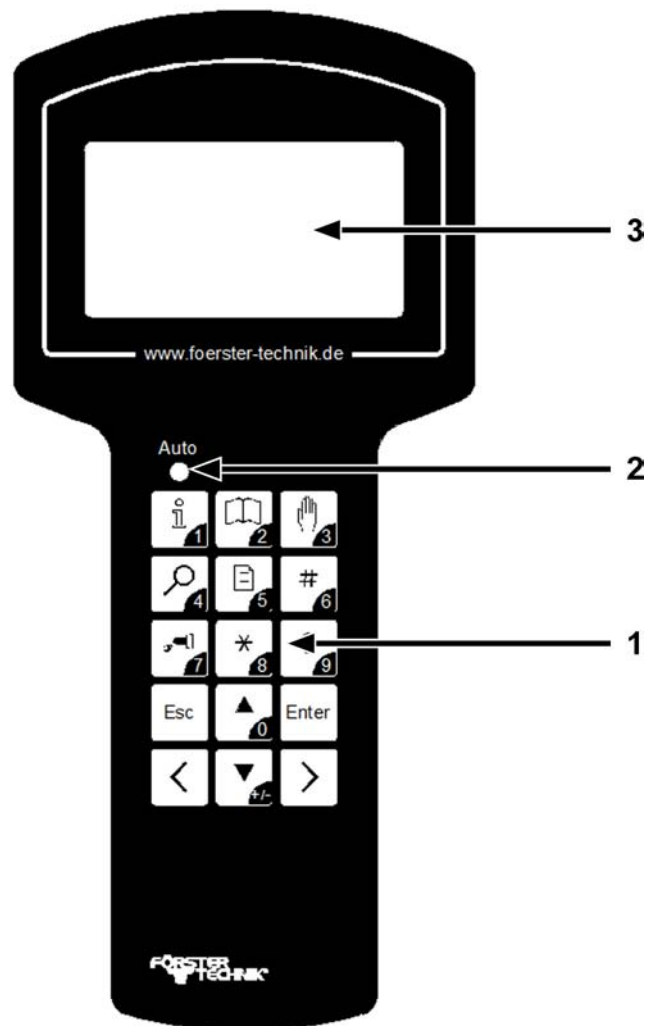

- 1 Keypad
- 2 Auto LED
- 3 Display

## Keypad

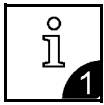

With this key, you open the **Animal control** menu or enter the number 1.



With this key, you open the **Main menu** or enter the number 2.




With this key, you open the **manual functions** menu or enter the number 3.



With this key, you open the **Search functions** or enter the number 4.




With this key, you open the **Animal list** or enter the number 5.

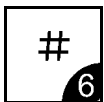

Key 6 is a freely selectable **function key**. With this key, you can also enter the number 6.




With this key, you activate the **feeding pump** or enter the number 7.

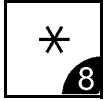

This key is assigned 2 functions:

- You press this key to select a calf in submenus in which an animal number is displayed. An asterisk (\*) is displayed in front of the animal number of a selected calf. You deselect the calf by pressing this key again.
- In the overview menu in automatic mode, you use this key to toggle between the four-line (large font) and the eight-line (small font) display.


With this key, you can also enter the number 8.

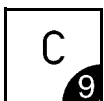

This key is assigned 2 functions depending on the menu you are currently in:


- You use this key to delete warnings and alarms.
- In the overview menu of automatic mode, you use this key to bring warnings to the foreground.

With this key, you can also enter the number 9.

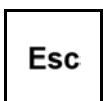

You use this key to go backward within the menu structure. You return to the starting menu by pressing this key multiple times.



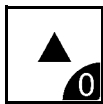


You use this button to move the cursor upward and choose items from a list, for example [yes] or [no]. With this key, you can enter the number 0.




With this key you move the cursor downward and select items from a list. You use this key to change the sign of a number, for example from +1 to -1. This is how you enter negative numbers.



You use this key to confirm your selection and open a menu or an input field. An [input field] is indicated by square brackets.

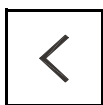

You use this key to scroll between pages on the screen or list items to the left and jump to the start of a list.

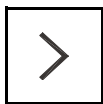




You use this key to scroll between pages on the screen to the right and jump to the end of a list.



#### 4.4.2 Data backup


The automatic feeder performs an automatic data backup at night. You can also start the backup manually. The data of the automatic feeder can be stored on an SD card.

#### 4.5 Menu structure

The automatic feeder is controlled using menus, submenus and lists. You control your automatic feeder by switching to lists via menus and submenus. In these lists, you can view and change values. The menu structure makes it easier to find a list quickly.

The menus that you require most frequently, such as **Animal control** , **Main menu**  and **Manual functions**  can be directly accessed with the press of button.

Experience shows that the **Animal list** is the list you will need most often . You can also access the animal list directly via the  key. You can change this default setting. You can also access the animal list via the animal control menu.

You can also assign an additional  key according to your needs in Device data under Function keys.

If you cannot see all the menus or submenus presented here, this is either because your automatic feeder is not equipped with the component in question, or the component was not activated during setup.

**Note:** If you know that your automatic feeder has a component that is not being displayed, contact your service technician so that he/she can adjust your setup. Never adjust the setup yourself.

**ATTENTION** Changing the setup can cause the automatic feeder to malfunction. If the automatic feeder malfunctions, your calves could suffer from malnutrition. Malnutrition can cause impaired growth and development, increased susceptibility to illness or even the death of your calves.

#### 4.5.1 Symbols

Different symbols are displayed in front of and in several menus, submenus and lists.

##### 4.5.1.1 Arrows




In automatic mode, arrow heads are shown in front of menus:


- ► A solid arrow head indicates that the menu contains submenus.
- ▷ An empty arrow head means that you can change settings here or start actions.

##### 4.5.1.2 Angle brackets

< > Angle brackets around a menu or list mean that you can choose between menu options or list items. For example, you can select the appropriate calf from a list of animal numbers using the calf's animal number. If you see angle brackets at the top of the display, it means you can scroll left and right.

##### 4.5.1.3 Square brackets

[ ] Values or terms are in square brackets. When you press  the value / list item begins to flash in the input field. You can now use the number keys to enter values or use   to select values from a list, such as [yes] or [no].

**Note:** If you enter a value in an input field and the value is too high or too low, this value will automatically be set to the highest (too high) or lowest (too low) possible value after you press .

##### 4.5.1.4 Rod electrode free/covered

The following symbols appear at the top right of your display when animals are being fed in feed mode or when the mixer is being drained.



This symbol indicates that the mixer jar is full. The tip of the rod electrode is in the liquid.



This symbol indicates that the mixer jar is empty. The rod electrode is free of the liquid.

#### 4.5.1.5 Animal identification and feed consumption



The antenna symbol after a station number, such as TR 1 for feeding box 1, indicates that a calf has been identified at this station.

✓ A check mark after the antenna symbol means that calf identified at this station may consume feed here.



A lock symbol after the antenna symbol means that calf identified at this station may not consume feed here. For example, this could be because the concentration of feed in the mixer jar does not match the feed settings for the identified calf.

- A hyphen after the station number indicates that no calf was identified at this station.

#### 4.5.1.6 Plan tendency

The arrow to the right next to the animal number indicates the feeding phase the selected calf is now in.

↗ The feed quantity increases continuously, for example at the beginning of the feeding plan.

→ The feed quantity remains constant, for example in the middle of the feeding plan.

↘ The feed quantity is continuously reduced, for example at the end of the feeding plan.

f The calf is in the 40FIT period.

#### 4.5.1.7 Marking

\* Marked calves are indicated by an asterisk to the left of the animal number.

#### 4.5.1.8 Alarms

! An exclamation mark to the left of the animal number indicates that a calf has triggered an alarm.

#### 4.5.1.9 CalfCloud

C This symbol is displayed in the first line of automatic mode if a connection to the CalfCloud exists.

#### 4.5.1.10 Sleep mode

The Förster-Technik logo shows you that no key has been pressed on the hand terminal for a longer period of time. The hand terminal is in sleep mode,

#### 4.5.2 Navigation


You use the hand terminal's keys to navigate through menus, submenus and lists.

By choosing   you can:

- Move between the different submenus of a menu.
- Move between the items in a list, for example between **[yes]** and **[no]**.

By choosing   you can:

- Scroll through a list, for example through animal numbers. At the end of the list, the message "end of the list" will appear in the display.
- When you enter numbers, switch between whole numbers, for example from 1 to 2 to 3.
- Jump to the last menu item.

By choosing  you can:


- Confirm an entry.
- Acknowledge a prompt or message shown on the display.
- Confirm a selection.
- Open menus and submenus.
- To open input fields, which are indicated by square brackets.
- Switch from the number before the decimal place to the number after the decimal place in input fields.

By choosing  you can:

- Go back one menu, each time you press the key. You return to the starting menu by pressing this key multiple times.
- Exit the input field or return, without saving, to the number before the decimal place in an input field.


### 4.5.3 Menus

#### 4.5.3.1 Animal control

You can choose  to open the **Animal control** menu. This menu contains all the submenus you require for daily calf monitoring. The numbers next to the submenus indicate the number of calves recorded in the submenu concerned.

- **Animal list.** You will see a table that shows your calves, sorted by different parameters, such as visits to the feeding box.
- **Entitlement.** You will see a list of your calves, sorted by feed entitlement.
- **Alarm.** You will see a list of the calves that have triggered an alarm.
- **Plan over date.** You will see a list of the calves that have a "plan over" date.
- **Additive** (optional) You will see a list of the calves that receive an additive.
- **40FIT Period.** You will see a list of the calves which are currently in the 40FIT period.
- **Marked.** You will see a list of calves that you have marked.
- **New.** You can view the newly registered calves here.
- **Double.** Here you assign a new animal number to calves that have been assigned a double animal number.
- **Unknown.** Here you can check whether and when your automatic feeder recorded unknown animal numbers. You can correctly register the identified calves.
- **All.** You will see a list of all calves.
- **Total consumption.** Several lists are displayed with the consumption amounts of all calves, individual calves and individual groups.
- **Print.** Here you can print out the alarm list and the feed list.


#### 4.5.3.2 Main menu


You can choose  to open the main menu. This menu contains all submenus that you require for the daily operation of the automatic feeder.

- **Animal management**
- **Feeding**



- **Calibration**
- **Device data**
- **Cleaning**
- **Diagnosis**

#### 4.5.3.3 Manual functions

You can choose  to open manual functions. Here you can start certain functions of the automatic feeder manually. For example, you can manually empty the mixer or dispense extra portions.

If you press , the automatic feeder switches from automatic to manual mode. The LED extinguishes and the automatic feeder is in offline mode.

The automatic feeder automatically returns to automatic mode after 20 minutes of inactivity. The Auto LED lights up green.

You can also actively switch the automatic feeder back to automatic mode. Press  until the message **Start automatic mode?** appears in the display. Confirm the message by choosing . The automatic feeder will return to automatic mode. The Auto LED lights up green.

You can control the following functions manually:

- **Extra portion.** Here you can dispense extra portions with or without additives.
- **Mixer: empty?.** The mixer is drained via the mixer drain valve.
- **Milk draining.** Water is used to drain milk from the heat exchanger here.
- **Milk: start?.** You open the milk valve and start the milk pump here.
- **Boiler water: start?.** Here you add water from the boiler to the mixer.
- **Powder: start?.** You start dispensing powder here.
- **Additive 1: start?.** This is where you start the dispensing for .
- **Mixer: start?.** You start the mixer here.
- **Feeding box.** You open the feeding box valve(s) here.
- **HE: fill?.** You automatically fill the heat exchanger with water here.

- **Hoses: open?** Here you can open several valves simultaneously in order to completely drain all the lines of the automatic feeder of water.





## 5 Running the automatic feeder

### 5.1 Operating modes

You can run your automatic feeder in **rationed mode** or **ad lib mode** (emergency mode).

#### 5.1.1 Rationed mode

In **rationed mode**, the automatic feeder uses animal identification. You can custom-feed your calves.

When calves are registered in a group, they receive feed according to that group's feeding plan. You can also feed individual calves differently from the group feeding plan. For example, you can feed extra portions to a single calf.

If the mixer jar is empty and a calf entitled to feed enters the feeding box and is identified, the automatic feeder prepares a feed portion that is specially adjusted for that calf.

- If the calf finishes this portion and is still entitled to feed, a second portion is prepared.
- If the calf is no longer entitled to feed, the feeding box valve is closed after the mixer is emptied and closed after a drain time that you have defined. You define the drain time together with your service technician during commissioning.
- If a calf stops feeding before finishing its portion, the feeder handles the remaining feed as follows:
  - The remaining feed is dispensed to each calf entitled to feed. The remaining feed is booked for the calf that actually finishes it.
  - Feed that remains in the mixer jar is automatically evacuated after a period that you define in **Device data > Portion > Draining**.


**Note:** This function should not be disabled. Otherwise, the risk of infection could increase.

#### 5.1.2 Ad lib mode (emergency mode)

In **ad lib mode**, the feeder does not use animal identification. Whenever the mixer jar is empty, i.e., when the rod electrode is not covered by feed in the mixer jar, the automatic feeder prepares a portion of feed. Since the automatic feeder is not using animal identification, custom feeding is not possible. You can only feed calves together if they are the same age and have the same feed entitlement.

If there are several feeding stations, then the respective feeding box valves are opened.

**⚠ WARNING** Beware of the risk of burns on feeding box valves. During prolonged ad lib mode, feeding box valves become hot. You can burn your fingers or hand when touching these valves. For this reason, push the suction hose directly onto the mixer jar spout and disconnect the connector from the feeding box valve.

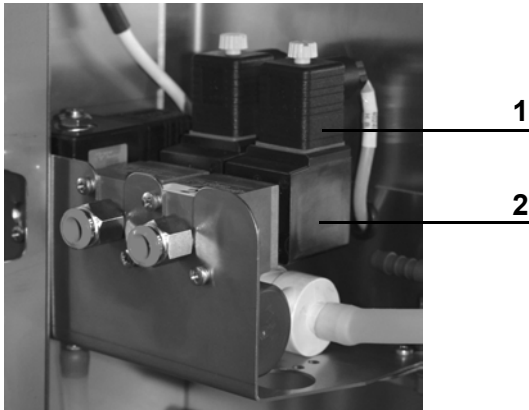


1	Female power connector
2	Box valve

**⚠ ATTENTION** Cleaning agent that enters the feed can be hazardous to the health of calves. Therefore, always disable all time-controlled cleaning menus and calibrations during ad lib mode.

## 5.2 CalfCloud

In this menu you can find the CalfCloud settings.

1. Move via  > **Device data** to the submenu **Cloud**.

- In **start?** you can establish the connection between the Cloud and the automatic feeder.
- Press . The fault menu **last error** will appear. The following error messages can be displayed:
  - **none.** There is no error.
  - **no eth. cable.** No Ethernet cable is connected. If necessary, contact your service technician.

- **no internet.** There is no Internet connection. If necessary, contact your service technician.
- **connect.error.** Connection fault to the server. If necessary, contact your service technician.
- In **terminate?** you terminate the connection to the Cloud and thus also the data transmission.
- **Status** shows you the current status of the connection to CalfCloud. **Online**, **offline** or **reconnecting** can be displayed.
- **Auth-Token** shows you the authentication key of the automatic feeder.

**Note:** With this token you can add the automatic feeder to the Cloud.

### 5.3 Routine tasks

Daily running of the automatic feeder involves routine tasks such as cleaning, feeding, animal control and care and maintenance. This chapter explains how the automatic feeder facilitates these routine tasks for you. See the appendix for check lists (see chapter **13.5.2** Maintenance intervals and activities, page **139**) with the necessary cleaning and maintenance tasks.

#### Daily tasks:

- Clean the automatic feeder.
- Feed calves.
- Animal monitoring.
- Care and maintenance.

#### Weekly tasks:

- Clean the heat exchanger with a sponge.
- Care and maintenance.

#### Tasks required every 4 months:

- If the automatic feeder does not have a mixer scale, recalibrate the water, milk, milk substitute and cleaning agent.

- If the automatic feeder does not have a mixer scale, recalibrate the cleaning agent.
- Care and maintenance.
- Replace wearing parts.

**Annual tasks:**

- Thoroughly clean the automatic feeder.
- Replace wearing parts.
- Care and maintenance.

## 6 Cleaning the automatic feeder

You must clean all parts of the automatic feeder that come into contact with liquid or powder animal feed.

The type of feed you are using also plays a role here. For example, raw milk contains more germs than pasteurized milk. Therefore, if you are feeding raw milk, you must clean the feeder more often than if you are using pasteurized milk.

Note: If you have installed additional devices such as an additive dispenser, you must also follow the cleaning instructions in the operating manual for these devices.

### Cleaning methods

You can use a range of cleaning methods, which you can also combine:

- You can clean some parts, such as the mixer, using programs that run automatically.
- You can clean some parts, such as the heat exchanger, using programs that are started manually.
- You can clean parts such as the powder container manually.

### Remember:

- You must follow all safety instructions in the safety data sheet for the cleaning agent you are using.
- You must always wear the protective gear, such as protective goggles and gloves, specified in the safety data sheet for the cleaning agent you are using.
- Undiluted cleaning agent may not be drained into the ground water or sewage system. Observe the recommendations in the safety data sheet for your cleaning agent and contact your water utility company and your sewage disposal company to find out which regulations apply to you.
- Observe the cleaning intervals recommended by the manufacturer of the cleaning agent as well as those recommended in this operating manual. (See chapter **13.5.2** Maintenance intervals and activities, page **139**).
- Only use the cleaning agents recommended in this operating manual.

- Observe the manufacturer's guidelines regarding the amount, temperature and concentration of cleaning agent used.
- Do all of the cleaning recommended in this operating manual.

**ATTENTION** Never use cleaning agents containing chlorine, as they can attack the materials of the automatic feeder and impair its function (see chapter **13.4** Automatic feeder material list, page **138**). If this happens, your calves may not receive enough feed. This can lead to malnutrition, which can cause impaired growth and development, increased susceptibility to illness or even the death of your calves.

## 6.1 Cleaning agents

Only use one of the following cleaning agents:

- HyClean K45

You can purchase this cleaning agent from your dealer.

**⚠ WARNING** Beware of **Chemical burns** from cleaning agents. The cleaning agent can cause chemical burns to your eyes or hands. Always wear goggles and protective gloves when using cleaning agents. Follow all the safety instructions listed in the safety data sheet for the cleaning agent and wear the specified safety equipment.

## 6.2 Preparing for cleaning

### 6.2.1 Cleaning programs that start automatically

**⚠ WARNING** Beware of **Chemical burns** from cleaning agents. The cleaning agent can cause chemical burns to your eyes or hands. Always wear goggles and protective gloves when using cleaning agents. Follow all the safety instructions listed in the safety data sheet for the cleaning agent and wear the specified safety equipment.

Fill the detergent tank with cleaning agent.

### 6.2.2 Cleaning programs that are started manually

**⚠ WARNING** Beware of **Chemical burns** from cleaning agents. The cleaning agent can cause chemical burns to your eyes or hands. Always wear goggles and protective gloves when using cleaning agents. Follow all the safety instructions listed in the safety data sheet for the cleaning agent and wear the specified safety equipment.

**Prepare for cleaning as follows:**

1. Measure the necessary amount of cleaning agent. Consult the data sheet for the cleaning agent to determine the quantity recommended by the cleaning agent manufacturer.
2. Prepare the cleaning agent next to the automatic feeder.

**6.2.3 Manual cleaning**

- Powder discharge opening.  
The scraper for cleaning is attached to the powder discharge opening.
- Powder container and dosing tongue.

**Prepare for cleaning as follows:**

1. Turn off the automatic feeder with the control switch and disconnect the power plug.
2. Empty the powder container.
3. Have a damp cloth ready to clean the outside of the automatic feeder.

**ATTENTION** Damage to the housing of the automatic feeder causes corrosion and impairs its function. Never use a high-pressure spray to clean the automatic feeder.




**6.3 Cleaning the automatic feeder****You clean the automatic feeder as follows:**

- Clean the mixer.
- Clean the heat exchanger.
- Cleaning cycle.
- Clean the suction hose.
- Rinse the hose.
- Clean the powder container and dosing unit.
- Detergent pump with detergent lance.

**6.3.1 Basic settings**

In the **Settings** menu, you define values for the cleaning temperature, detergent amount and teat cleaning.

You define basic settings as follows:

1. Choose  > **Cleaning** > **Settings** to go to the **Temperature** submenu.
2. In the **Temperature** menu, you enter the desired temperature. You can enter values between 10 °C and 58 °C. The default setting is 45 °C.  
**Note:** Consult the data sheet for the cleaning agent to determine the temperature recommended by its manufacturer and enter this value.
3. In the **Detergent** menu, you enter the desired amount of detergent. You can enter values between 0 ml/l and 25 ml/l. The default setting is 0 ml/l.  
**Note:** Consult the data sheet for the cleaning agent to determine the amount recommended by its manufacturer and enter this value.
4. In the **Clean teat** menu, choose   [yes] if you want to rinse the inside of the teat with clean water. The water is pumped through the suction hoses and drained via the teat. The default setting is [no].  
**Note:** Teat cleaning is important step to prevent infections and should therefore should always be selected.

### 6.3.2 Cleaning the mixer

You can clean the mixer automatically (at scheduled intervals) or manually, with or without detergent. A cleaning cycle consists of:

- **Pre-cleaning.**
- **Main cleaning** with the addition of cleaning agent. Cleaning will start automatically.
- **Rinsing.**

#### 6.3.2.1 Mixer is cleaned automatically at scheduled intervals

**Note:** You do not have to set automatic mixer cleaning if you have set daily cleaning for the heat exchanger. The mixer is always cleaned when the heat exchanger is cleaned.

Cleaning agent is added automatically. You must check each day to ensure that the cleaning agent container is full and that the detergent is dispensed into the mixer.

**⚠ WARNING** Beware of **Chemical burns** from cleaning agents. The cleaning agent can cause chemical burns to your eyes or hands. Always wear goggles and protective gloves when using




cleaning agents. Follow all the safety instructions listed in the safety data sheet for the cleaning agent and wear the specified safety equipment.

**Note:** The cleaning water is evacuated via the mixer drain valve.

**You select automatic mixer cleaning as follows:**

Two automatic mixer cleaning cycles at 07:00 hours and 22:00 hours are preset.

1. Choose  > **Cleaning** > **Mixer** to go to the **Clean mixer** submenu.

2. You can start automatic cleaning in the **start?** menu.

2.1 Enter the required amount of detergent and confirm by choosing .

**Note:** Consult the data sheet for the cleaning agent to determine the amount recommended by its manufacturer and enter this value.

3. In the **Cleaning/day** menu, you enter the required number of cleaning cycles. You can set a maximum of four cleaning cycles.

**Note:** You should define at least one cleaning cycle per day in order to prevent unhygienic conditions.

4. In the **Cleaning 1** menu, you enter the desired time of day.

5. Repeat step 4 for additional **cleaning times**.

6. Activate or deactivate the **drainage mode** via the menu option with the same name. Drainage mode is activated by default.

If drainage mode is activated, then each time that the mixer is emptied to evacuate a residual portion to all of the available stations, all of the feeding box valves will be opened for one minute to allow the liquid remaining in the hoses to be drained.




**Note:** Start the cleaning at a time when there is minimal entitlement to feed so that your calves do not have to wait too long for feed.

**Note:** If there is still feed in the mixer jar at the set cleaning time, automatic cleaning will be postponed by a maximum of one hour. After that, any remaining feed will be evacuated via the mixer drain valve and the cleaning cycle will be started.

### 6.3.2.2 Manually starting mixer cleaning

To prevent unhygienic conditions when automatic mixer cleaning is disabled, perform an automatic cleaning at least 2 times a day without adding cleaning agent, and every other day with manually added cleaning agent.

You start manual mixer cleaning as follows:

1. Choose  > **Cleaning** > **Mixer** to go to the **Clean mixer** submenu.
2. Press  in the **start?** menu.
  - 2.1 Enter the required amount of detergent and confirm by choosing .





**Note:** Start the cleaning at a time when there is minimal feed entitlement so that your calves do not have to wait too long for feed.




### 6.3.2.3 Cleaning the mixer jar manually

You must clean the mixer jar manually if it is visibly dirty, if you have disabled automatic cleaning or perform automatic cleaning less than twice a day.

**⚠ WARNING** There is a risk of injury due to automatic start-up. The automatic feeder automatically prepares a feed portion when it detects a calf entitled to feed. The stirring blades in the mixer jar start automatically and can crush or cut off your hand or fingers. Always turn off the automatic feeder with the control switch and disconnect the power plug before manually cleaning the mixer.



You clean the mixer manually as follows:

1. Press .
2. Confirm **Exit automatic mode?** by choosing .
3. Press  and confirm **water bo. start?** by choosing .





The mixer jar is filled with water.
4. Confirm **Mixer: empty?** by choosing .
5. Press  and confirm **water bo. start?** by choosing . Fill two-thirds of the mixer jar with water.
6. **⚠ WARNING** Beware of **Chemical burns** from cleaning agents. The cleaning agent can cause chemical burns to your eyes or hands. Always wear goggles and protective gloves

when using cleaning agents. Follow all the safety instructions listed in the safety data sheet for the cleaning agent and wear the specified safety equipment.

Pour the prepared quantity of cleaning agent into the mixer.

7. Turn off the automatic feeder with the control switch and disconnect the power plug.
8. Clean the mixer jar with a soft brush or a soft sponge.
9. Empty the mixer jar by tipping out the contents into the drain or gully.
10. Insert the power plug again and turn on the automatic feeder again using the control switch.
11. Press  and confirm **water bo. start?** by choosing .

The mixer jar is filled with water.

12. Confirm **Mixer: start?** with  to clean the mixer with clean water.
13. Confirm **Mixer: empty?** by choosing .
14. Press  until the message **Start automatic mode?** appears in your display.
15. Confirm **Start automatic mode?** by choosing .

The automatic feeder is now operating in automatic mode again.

### 6.3.3 Cleaning the heat exchanger


Liquid feed is constantly flowing through the heat exchanger, causing milk deposits to form. These milk deposits are an ideal breeding ground for germs. Therefore, clean the heat exchanger thoroughly with water and cleaning agent every day.

**⚠ WARNING** Beware of **Chemical burns** from cleaning agents. The cleaning agent can cause chemical burns to your eyes or hands. Always wear goggles and protective gloves when using cleaning agents. Follow all the safety instructions listed in the safety data sheet for the cleaning agent and wear the specified safety equipment.


#### 6.3.3.1 Cleaning the heat exchanger automatically at scheduled intervals

The default setting is to automatically clean the heat exchanger twice a day (at 07:00 hours and at 22:00 hours).

You set automatic heater exchanger cleaning as follows:

1. Choose  > **Cleaning** > **Heat exchanger** to go to the **Clean heat exchanger** submenu.

2. You can start automatic cleaning in the **start?** menu.

2.1 Enter the required amount of detergent and confirm by choosing .

3. In the **Cleaning/day** menu, you enter the required number of cleaning cycles. You can define up to 4 cleaning cycles per day.



**Note:** You should define at least one cleaning cycle per day to prevent unhygienic conditions.

4. In the **Cleaning 1 to 4** menu, you enter the required time of day.

**Note:** Start the cleaning at a time when there is minimal entitlement to feed so that your calves do not have to wait too long for feed.

**Note:** If you dispense milk from a tank, you must clean the heat exchanger once more, as soon as the tank is empty.

**You set an additional automatic heater exchanger cleaning cycle as follows:**


1. In the **Milk empty** menu, choose   to select **[yes]**.


Each time the milk in the tank is used up, the additional automatic heat exchanger cleaning cycle will be started.

### 6.3.3.2 Cleaning the heat exchanger manually

If you have disabled automatic heat exchanger cleaning, you must manually clean the heat exchanger at least once per day.

**You set heat exchanger cleaning manually as follows:**

1. Choose  > **Cleaning** > **Heat exchanger** to go to the **Clean heat exchanger** submenu.

2. Confirm **Start?** by choosing .

3. In the **Detergent** menu, you enter the required amount.

The manual cleaning of the heat exchanger will start.

### 6.3.3.3 Cleaning the heat exchanger manually with a sponge


If you have disabled automatic heat exchanger cleaning, you must manually clean the stainless steel coil of the heat exchanger using the sponge ball **once a day**. The sponge ball serves as a mechanical cleaning tool that removes deposits and residual milk.


If you have enabled automatic heat exchanger cleaning, you must clean the heat exchanger **once a week** with the sponge. By doing this, you can determine whether your cleaning measures are effective.

If visible milk deposits are flushed into the mixer jar during the sponge cleaning process, your cleaning measures are not sufficient. Do the following:


- Make sure that sufficient cleaning agent is available.
- Check whether the concentration of the cleaning agent corresponds to the manufacturer's recommendations.
- Check whether the detergent pump is working.
- Clean more frequently.

**You manually set heat exchanger cleaning with a sponge as follows:**

1. Have the sponge ball, which comes with your automatic feeder, ready.
2. Choose  > **Cleaning** > **Sponge** to go to the **Clean with sponge** submenu.
3. On the automatic feeder, open the metal plug for the sponge cleaning procedure. (See pictures below)

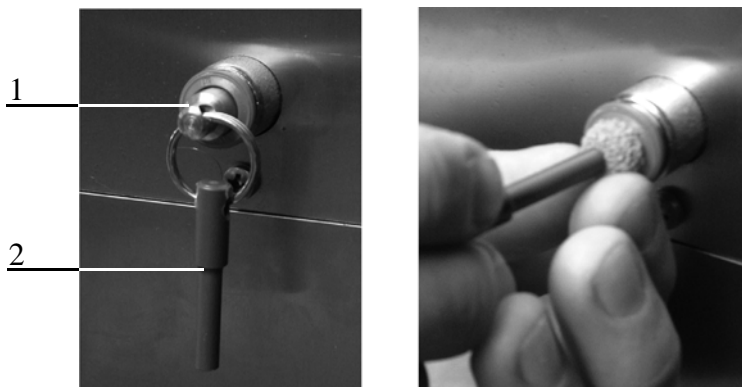

1	Metal plug
2	Tappet

4. Push the red sponge ball into the opening using the plunger.
5. Close the metal plug again.
6. Confirm the display message **Sponge inserted?** by choosing .

Water pushes the sponge through the stainless steel coil of the heat exchanger, removing tough deposits.

7. If the message **Sponge in mixer?** appears in the display, you can press  to repeat cleaning or press  to stop cleaning.

**Note:** Repeat cleaning until the sponge is in the mixer.

8. If the message **Sponge removed?** appears in the display, remove the sponge ball from the mixer jar and confirm the display message by choosing .

The cleaning water is automatically evacuated.

9. Clean the sponge ball and store it in a dry place.


10. Press  and confirm **Suck in milk?** by choosing  to fill the heat exchanger with milk.

**Note:** If you can see dirt or deposits in the cleaning water, you must repeat the cleaning procedure immediately. Visible deposits in the rinsing water indicate that you are not cleaning the heat exchanger frequently enough. Therefore, you must clean the heat exchanger more frequently than before.

#### 6.3.4 Cleaning cycle

In a cleaning cycle, you simultaneously clean the suction hoses and the automatic feeder.

You require the flushing adapter and the hose nozzles shown below. These items come with the automatic feeder.

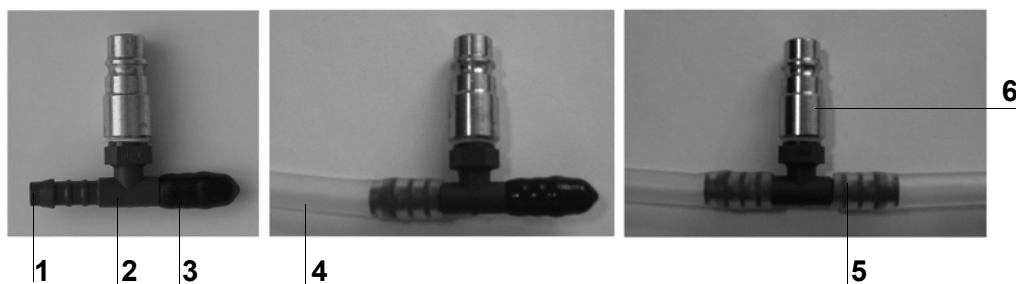







1 Hose nozzle	4 Suction hose (first station)
2 Cleaning adaptor	5 Suction hose (second station)
3 Rubber closing cap	6 Coupling for milk supply

Run the cleaning cycle at least **once a day** if automatic mixer cleaning is not enabled.

Run the cleaning cycle at least **once a week** if automatic mixer cleaning is enabled.

**You set the cleaning cycle as follows:**

1. Choose  > **Cleaning** to go to the **Circuit cleaning** submenu.
2. In the **Water/box** menu, you enter the desired amount of water. You can enter values from 0.5 l to 1.5 l. The preset default value is 1 l.  
**Note:** The longer the hoses, the higher the value you must select.
3. Confirm **Start?** by choosing .  
The message **Exit automatic mode?** appears in the display.
4. Confirm **Exit automatic mode?** by choosing .
5. In the **Detergent** menu you enter the desired amount of detergent. Use the amount recommended in the data sheet for your cleaning agent.  
The automatic feeder will start the **Pre-cleaning**. After the mixer has been automatically evacuated, clear instructions are shown in the display. Follow these instructions:
  - 5.1 On all feeding boxes, disconnect the suction hoses from the spouts that lead to the teats.
  - 5.2 Push these suction hoses onto the plastic hose nozzle of the cleaning adapter.
  - 5.3 Position the cleaning adapter with the connected hoses so that the rinsing water can drain directly into the gully.
6. Choose  to confirm that the instructions have been followed.  
The automatic feeder continues the **pre-cleaning**. When pre-cleaning is completed, further instructions will appear in the display. Follow these instructions:
  - 6.1 Disconnect the milk hose from the milk connector of the automatic feeder.
7. Choose  to confirm that the instructions have been followed.  
The automatic feeder will start the **main cleaning cycle**. The remaining time appears in the display. When the main cleaning cycle is completed, further instructions appear in the display. Follow these instructions:
  - 7.1 Disconnect the flushing adapter and the connected hoses from the milk connector.
  - 7.2 Position the cleaning adapter with the connected hoses so that the rinsing water can drain directly into the gully.

8. Choose  to confirm that the instructions have been followed.

The automatic feeder will start the **rinsing** cycle.

8.1 Reconnect the milk hose to the automatic feeder.

8.2 Once the cleaning is finished, push the suction hoses back onto the hose nozzles of the respective teats.

9. Press  until the message **Start automatic mode?** appears in the display.

10. Confirm **Start automatic mode?** by choosing .

The automatic feeder is now operating in automatic mode again.






### 6.3.5 Rinsing the hose

The suction hose from the automatic feeder to the teat can be automatically rinsed after each visit by the calf. This improves hygienic conditions by preventing the suction hose from clogging.

If a calf has finished the last portion of its feed entitlement, 0.25 l of warm water is dispensed into the mixer jar. If the calf drinks this warm water, this rinses the suction hose and removes residual milk from it.

**Note:** Hose rinsing is usually not enabled until the 14th day of the feeding plan because young calves typically do not like to drink water.

#### You set hose rinsing as follows:

1. Choose  > **Cleaning** to go to the **Hose rinsing** submenu.
2. In the **Group** menu, choose   to select a group (A, B, C or D) from the input field.
3. In the **activated** menu, choose   [yes] to enable rinsing and [no] to disable rinsing.
4. In the **as of plan day** menu, enter the day on which you want hose rinsing to start. The default setting is 14.

Hose rinsing is now enabled or disabled.

### 6.3.6 Cleaning the powder discharge opening

Check the powder discharge opening for milk powder deposits each day. Remove milk powder deposits immediately. By doing this, you prevent the powder discharge opening from clogging and dispensing insufficient milk powder.



**ACHTUNG** Insufficient milk powder in the feed causes undernourishment or malnutrition in your calves. This can cause impaired growth and development, increased susceptibility to illness or even the death of your calves. Check the powder discharge opening every day.

**To clean the powder discharge opening, proceed as follows:**

1. Turn off the automatic feeder using the control switch and disconnect the power plug.

**⚠ WARNING** There is a risk of injury due to automatic start-up. Do not reach into the hazardous area of the mixer. The mixer can start up automatically at any time, crushing or cutting off your fingers. Switch off the automatic feeder using the control switch, disconnect the power plug and only use the supplied scraper to clean the powder discharge opening.

2. Clean the powder outlet using the supplied scraper. Catch the loosened deposits and milk powder and dispose of them.
3. Reconnect the power plug.
4. Switch on the automatic feeder again using the control switch.
5. Calibrate the milk powder (MP) (see chapter **10.3.1** Manually calibrating liquid and powder components, page **112**).
6. Start automatic mode. Press  until the message **Start automatic mode?** appears in the display and confirm it by choosing .

### 6.3.7 Thorough cleaning of the powder container with the dosing unit

During thorough cleaning of the powder container, milk powder deposits inside the powder container and dosing unit are removed. Thorough cleaning is required:



- If you shut down the automatic feeder.
- If you recommission the automatic feeder.
- If the feed that was added is contaminated with germs.

**⚠ DANGER** Lethal electric shock. The electrical components of the automatic feeder are live. Before opening the powder container, always turn off the automatic feeder using the control switch and disconnect the power plug.

**⚠ WARNING** There is a risk of injury due to automatic start-up. Do not reach into the hazardous area of the powder mixing unit. The powder mixing unit can start up automatically at any time,

crushing or cutting off your fingers. Turn off the automatic feeder with the control switch and disconnect the power plug before reaching into the powder container.

**To clean the powder container, proceed as follows:**

1. Turn off the automatic feeder with the control switch and disconnect the power plug.
2. Remove the screws that hold the safety grid and remove it.
3. Clean the safety grid with a damp cloth.
4. Empty the powder container.
5. Remove the dosing tongue. To do this, remove the star nut located to the right of the powder discharge.
6. Clean the dosing tongue with a damp cloth and then dry the dosing tongue.
7. Use a dry brush and the supplied cleaning scraper to remove the milk powder deposits in the powder container and at the powder discharge opening.
8. Reinstall the dry dosing tongue. Retighten the star nut located to the right of the powder discharge.
9. Reinstall the safety grid. Retighten the screws.
10. Only add milk powder (MP) to the powder container if you want to recommission the automatic feeder immediately.
11. Connect the power plug and turn on the automatic feeder again using the control switch.
12. Enable milk powder dosing to fill the dosing star and the dosing unit.
  - 12.1 Go to  > **Diagnosis** to go to the **Powder motor** submenu and press  to start the motor.
13. Calibrate the milk powder (MP) (see chapter **10.3.1** Manually calibrating liquid and powder components, page **112**).











The automatic feeder is now ready for operation again.

### **6.3.8 Cleaning the detergent pump with detergent lance**

When the detergent is changed or the detergent use is interrupted, the detergent pump and the detergent lance must be cleaned.









**⚠ WARNING** **Chemical burns** due to the cleaning agents used. The cleaning agent can cause chemical burns to your eyes or hands. Always wear safety glasses and safety gloves when working with cleaning agents. Observe all safety instructions listed in the safety data sheet of the cleaning agent and wear the safety equipment required there.

### 6.3.8.1 Changing the detergent


1. Terminate the automatic mode by pressing  and confirm **Terminate automatic mode?** with .
2. Remove the detergent lance from the detergent container and firmly close the container.
3. Rinse the detergent lance with clear water.
4. Fill a bucket with clear water and put the detergent lance into the bucket.
5. Move via  > **Diagnosis** into the submenu **Motors**.
6. Confirm **Detergent start?** with  and keep the key pressed until approx. 1 liter of water has been dosed. The detergent pump is activated and the supply line thus rinsed.
7. Press  and confirm **Mixer: empty?** with .
8. Bore a hole for the detergent lance into the lid of the new detergent container.
9. Secure the detergent lance to the lid of the detergent container.  
**Note:** Small vent holes in the lid prevent the contraction of the detergent container. Please refer to the manufacturer's instructions and national regulations.
10. Place the detergent container in the place provided for it.
11. Move via  > **Diagnosis** to the submenu **Motors**.
12. Confirm **Detergent start?** with  and keep the key pressed until the supply line is filled with the new detergent.
13. Carry out mixer cleaning (see **6.3.2.2** Manually starting mixer cleaning on page **50**).
14. Calibrate the detergent (see **10.3.1** Manually calibrating liquid and powder components on page **112**).
15. Start the automatic mode. Press  until **Automatic mode start?** is displayed and confirm with .

### 6.3.8.2 Discontinuing the detergent use

**Note:** If you discontinue the use of the detergent, you must manually clean the system.

1. Terminate the Automatic mode by pressing  and confirming the message **Automatic mode terminate?** with .
2. Remove the detergent lance from the detergent container and firmly close the container.
3. Rinse the detergent lance with clear water.
4. Fill a bucket with clear water and put the detergent lance into the bucket.
5. Move via  > **Diagnosis** into the submenu **Motors**.
6. Confirm **Detergent start?** with  and keep the key pressed until approx. 1 liter of water has been dosed. The detergent pump is activated and the supply line thus rinsed.
7. Press  and confirm **Mixer: empty?** with .
8. Carry out mixer cleaning (see **6.3.2.2** Manually starting mixer cleaning on page **50**).
9. Start the Automatic mode. Press  until **Automatic mode start?** is displayed and confirm with .


## 7 Transmitter and animal management

All menus for management of the list of all transmitters and the calves registered at the feeder can be found via  > **Animal management**.

### 7.1 Managing transmitters

#### 7.1.1 Basics

##### 7.1.1.1 Identification process at the station

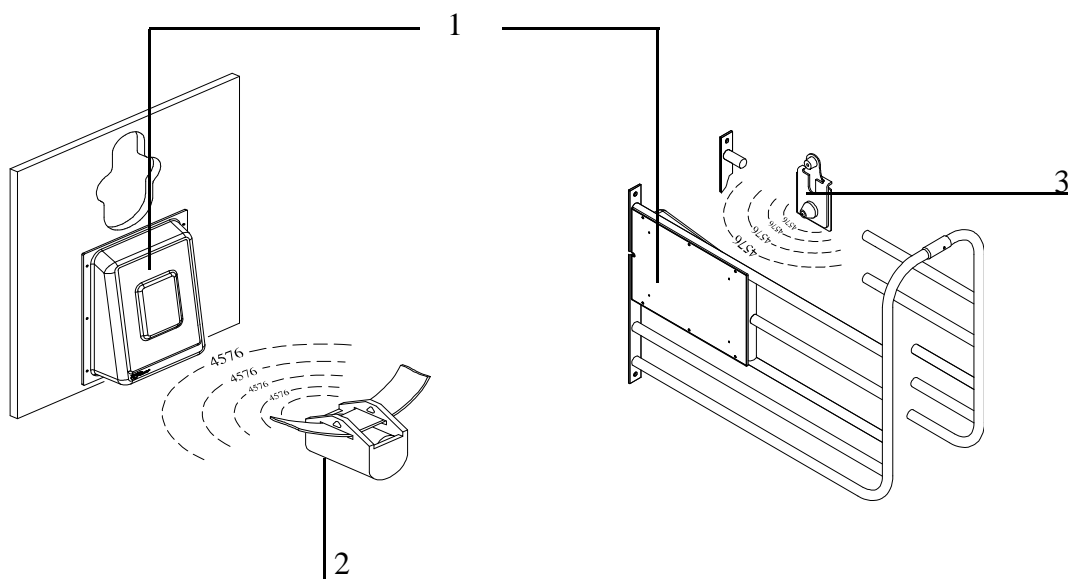

1	Antenna
2	Collar transmitter
3	Earmark transmitter

For identification purposes, each calf wears a collar with a transmitter or an earmark with a transmitter. The transmitter has a multi-digit number, which is also usually stamped into the transmitter housing. This **transmitter number** is sent from the transmitter to the antenna, which is part of the feeding box.

##### 7.1.1.2 Relationship between transmitters and animal numbers

The multi-digit transmitter number is not well suited for quickly locating individual calves. For this reason, a calf is issued an animal number along with the transmitter number. The animal wears this animal number on an easily readable collar, or the animal number is put on the ear-

mark where it can be easily read. Up to 250 different animal numbers of up to six digits can be assigned to the calves.




### 7.1.2 Creating transmitter numbers

When the feeder is commissioned, existing transmitters have to be created once in the system. When you do this, each transmitter number is assigned one animal number of no more than six digits. These animal numbers are then available and can be used to register the calves.

#### 7.1.2.1 Reading transmitter numbers

When creating new transmitter numbers, it is a good idea to have these read by the feeder. This saves you from typing in the numbers and eliminates the possibility of typing errors.



**To set up the reading of transmitter numbers by the feeder, proceed as follows:**

1. Choose  > **Animal management** > **Transmitters** to go to the **New** submenu.
2. Hold a transmitter next to the identification unit of a feeding box.  
The number of the transmitter will be read in and displayed in the line after **No. †**. At the same time, the animal number to be newly assigned will be suggested in the **Animal no.** line.  
**Note:** You can affect the suggested animal number by selecting an assignment scheme for the animal numbers in the **No.** line.
3. Check whether the suggested **animal number** is correct and, in the line **accept?**, press .
- Note:** Make sure that the correct feeding box is selected in the **Stations** menu.
4. In order to allocate the newly read transmitter number to the displayed animal number, confirm the security prompt **Create new no. xxx for animal xx?** by choosing .

#### 7.1.2.2 Manually entering transmitter numbers

Instead of reading the transmitters, you can also manually type in the transmitter numbers, if necessary

**You manually enter transmitter numbers as follows:**

1. Choose  > **Animal management** > **Transmitters** to go to the **New** submenu.
2. Enter the transmitter number in the **No.** menu and confirm it by choosing .

3. In the **Animal No.** menu, check the suggested animal number and confirm it by choosing .
4. Confirm **accept?** by choosing .
5. In order to allocate the newly read transmitter number to the displayed animal number, confirm the security prompt **Create new no. xxx for animal xx?** by choosing .


### 7.1.3 Assigning animal numbers

If the transmitter numbers are automatically read when new numbers are created, an animal number will be automatically suggested. You can choose from two schemes for the assignment of numbers.

#### 7.1.3.1 Consecutive assignment of animal numbers

There is a counter which counts up for each new transmitter number as it is read. In this way, all of the transmitter numbers that are registered by the identification function are linked to consecutive animal numbers; e.g., from 1 to 50.

**You set up consecutive assignment of animal numbers as follows:**

1. Choose  > **Animal management > Transmitters** to go to the **New** submenu.
2. Select the **consecutive** option in **No.**
3. If necessary, in **next**, specify the animal number at which you want automatic reading of transmitters to start.

**Note:** If you use collars, it makes sense to start with 1 and read in the transmitters in order.

#### 7.1.3.2 Assignment of animal numbers based on transmitter numbers

More and more often, calves are already equipped with an electronic earmark transmitter when they are born and keep this earmark their whole lives. The automatic feeder program has been adapted for this type of transmitter so that the registration process of the transmitters and calves can take place completely automatically.

**You set up automatic assignment of animal numbers as follows:**

1. Choose  > **Animal management > Transmitters** to go to the **New** submenu.
2. Select the **automatic** option in **No.**

3. In **Range** , define the part of the transmitter number that you would like to use as the animal number. The animal number can have a maximum of six digits.

**For example:5-2** means that, counting from the right, the second to the fifth digits of the transmitter number will be used as the animal number. **6-1** means that, counting from the right, the first to the sixth digits of the transmitter number will be used as the animal number.


#### 7.1.4 Editing transmitter or animal numbers

If necessary, (e.g., if a transmitter is lost), a transmitter number can be subsequently changed or deleted.

##### 7.1.4.1 Changing the transmitter number


###### Manually changing the transmitter number

You manually change a transmitter number as follows:

1. Choose  > **Animal management** > **Transmitters** to go to the **Edit** submenu.
2. Select the transmitter number to be changed.
3. Change the transmitter number in the **No.** menu and confirm by choosing .

###### Reading the new transmitter number for the change

You read a new transmitter number as follows:


1. Choose  > **Animal management** > **Transmitters** to go to the **Edit** submenu.
2. Select the transmitter number to be changed.
3. Confirm **read?** by choosing .

A new menu is displayed, and the transmitter number flashes in the first line.

4. Hold the transmitter that you want to read next to the identification unit.  
The number is automatically accepted in the first line.
5. Confirm **accept?** by choosing .

##### 7.1.4.2 Changing the animal number

Like the transmitter number, the animal number can also be changed.


1. Choose  > **Animal management** > **Transmitters** to go to the **Edit** submenu.
2. Select the animal number you would like to change.



3. In the **Animal No.** menu, change the animal number that is currently allocated to the transmitter and confirm by choosing .

#### 7.1.4.3 Deleting transmitter numbers


You delete transmitter numbers as follows:

1. Choose  > **Animal management** > **Transmitters** to go to the **Edit** submenu.
2. Select the transmitter number to be deleted and confirm **Delete** by choosing .

**Note:** You can only delete transmitter numbers of calves that are not registered (= status: available).


#### 7.1.5 Deleting the transmitter number when canceling an animal

Generally, the collars (or earmarks) with the respective transmitters remain at the organization and are reused after the calf is taken out of the pen and its registration is canceled. For this reason, the default setting when canceling the registration of a calf is to not delete its transmitter number. If the calf's transmitter is, however, **not** reused but rather stays with the calf, (life-long earmark), make the following setting in the feeder:

1. Choose  > **Animal management** > **Cancel** to go to the **Settings** submenu.
2. Select the **yes** option in **Delete no.** When a calf's registration is canceled, the transmitter number is also deleted along with the animal number. This prevents an accumulation of unused transmitter numbers, which would use up the available storage space.

#### 7.1.6 Retrieving transmitter statistics

You retrieve a transmitter statistic as follows:

1. Choose  > **Animal management** > **Transmitters** to go to the **Information** submenu.
2. An overview of the transmitters created in the system is displayed. The following is shown in the displayed list:
  - In the **Registered** menu, you check the number of registered transmitters or calves.
  - In the **Available** menu, you check the number of available transmitters.
  - In the **Free** menu, you check how many transmitters you can still create.

## 7.2 Registering animals

Calves are only fed at the feeder if they are also registered there. You can either manually register each calf or instruct the feeder to automatically register the calves. In the latter case, the calf is registered as soon as it enters the feeding station for the first time. This means that the manual registering of the calves is not needed.


During registration, the calf is allocated to one of four groups, A to D. The calf will then be fed in accordance with the feed, concentration and milk ratio plans of this group.

The group to which you allocate the calves depends solely on the feed quantity, concentration and milk ratio that you want to feed the calves. In this case, it does not matter which station the calves consume their feed in or which bay the calves have been housed in.

If you house two groups of animals, and one group will receive milk only and the other will receive MP only, allocate these calves to different feeding groups.

### 7.2.1 Registering animals manually

You register animals manually as follows:

1. Choose  > **Animal management** > **Register** to go to the **Animal** submenu.
2. Select one of the available (not yet registered) animal numbers.
3. In the **Group** menu, select the group to which the calf is to be allocated.
4. If the total feeding duration for the animal is to be shortened, you can set this under **Correction days** (see 8.5.6 Shortening or lengthening total feeding duration on page 79).
5. Confirm **Register?** with .
6. Confirm the prompt **Register animal xx in group X?** with .

**Note:** On its registration day, the animal receives the exact amount of feed, spread over the course of the day, as intended for the first day according to the feeding plan. If you have entered correction days, the animal will receive the feed that is intended for the corresponding day.

**Note:** For the next manual registration, the values last set will again be shown and can be used or changed for the current animal.

## 7.2.2 Registering animals automatically

If an animal that is not yet registered enters the feeding station for the first time, it can then be automatically registered. For automatic registration, three different modes can be set which are described in detail in the following three sub-sections. The following table presents an overview of this.


### Overview of the three modes for automatic registration

Automatic registration mode	Transmitter number being identified	
	available	unknown
deactivated	Warning <b>Unknown transmitters</b>	Warning <b>Unknown transmitters</b>
available transmitters	Animal will be registered	Warning <b>Unknown transmitters</b>
all transmitters	Animal will be registered	Transmitter is created, new animal number is assigned, animal is registered

### 7.2.2.1 Deactivating automatic registration

Automatic registration is deactivated by default. You can restore this setting at any time:

You deactivate automatic registration as follows:


1. Choose  > **Animal management** > **Register** to go to the **Automatic** submenu.
2. Select **Mode no** and confirm by choosing . Automatic registration is then deactivated.

**Note:** When the registration function is deactivated, the **unknown transmitters warning** will be triggered if an unregistered calf enters a station.

### 7.2.2.2 Only automatically register available transmitters

Automatic registration shortens the registration process for the calves. When doing this, you can specify that only calves can be registered whose transmitter numbers are already in the system. If an available transmitter number is registered in the identification unit, the corresponding calf will be automatically registered. Calves or transmitter numbers that have not yet been created in the system will trigger the **Unknown transmitter number** warning.

Proceed as follows to set up automatic registration of available transmitters:

1. Choose  > **Animal management** > **Register** to go to the **Automatic** submenu.
2. In **Mode** select the **available** option.

3. In **Group**, choose the group in which you want to automatically register the calves.


**Note:** The registration of calves that are to be removed should only be canceled after they have left the bay, as they will otherwise automatically be reregistered when they enter the station and will then be returned to the start of the feeding plan.

### 7.2.2.3 Creating transmitter numbers and automatically registering calves

To shorten the registration process even more, you can specify that calves can also be registered if their transmitter numbers are not known in the system. This eliminates the need for reading or manual entry of transmitter numbers. In this case, if an unknown transmitter number is registered in the identification unit, this transmitter number is automatically created in the system and a new animal number is issued and registered at the same time.

**Note:** When creating new transmitters and animal numbers, the animal number will either be produced consecutively or as a part of the transmitter number (see **7.1.3 Assigning animal numbers** on page **63**).

Proceed as follows to create transmitter numbers and automatically register calves:

1. Choose  > **Animal management** > **Register** to go to the **Automatic** submenu.
2. In the **Mode** menu, select the **All** option.
3. In the **Group** menu, choose the group in which you want to automatically register the calves.


**Note:** Calves **without collars** should never be in the bay. They could push other animals out of the way and steal remaining amounts of feed.

## 7.3 Canceling animals or animal groups

Individual calves or a group of calves that are no longer being fed according to the plan must be removed from the pen compartment and their registration canceled. The same applies to calves whose feeding plan has expired.

### 7.3.1 Canceling an individual animal's registration

You cancel an individual animal's registration as follows:

1. Choose  > **Animal management** > **Cancel** to go to the **Animal** submenu.
2. Select the required animal number.


3. In the **Plan end** menu, you check how much longer the calf is to be fed according to the plan.
4. In the **MP** menu, you can check how much milk powder the calf has consumed from the start of registration to its cancellation.
5. In the **Milk** menu, you can check how much milk the calf has consumed from the start of registration to its cancellation.
6. Confirm **cancel?** by choosing  in order cancel a calf.

**ATTENTION** There is a risk of malnutrition if calves do not receive any feed. Malnutrition can cause impaired growth and development, increased susceptibility to illness or even death of the calves. You must use an alternative method to supply your calves with feed.

**Note:** If you have chosen the value **All** or **Available** for the **automatic registration mode**, you should remove unregistered calves from the bay, because otherwise they will be automatically registered again.


### 7.3.2 Canceling a group registration

You can cancel a group registration as follows:

1. Choose  > **Animal management** > **Cancel** to go to the **Group** submenu.
2. Select the required group.
3. In the **Registered** menu, you can see how many calves are being fed according to the corresponding plan.
4. In the **Weaned** menu, you can see how many calves have already finished the feeding plan and therefore no longer receive any feed.
5. Confirm **Cancel?** by choosing  if all calves of the group are to be canceled regardless of whether they are registered or weaned calves.
6. Confirm the security prompt **Cancel animals in group?** by choosing .

### 7.3.3 Canceling the registration of weaned animals



You can cancel the registration of weaned calves as follows:

1. Choose  > **Animal management** > **Cancel** to go to the **Weaned animals** submenu.
2. Confirm **Cancel?** by choosing  if you want to cancel weaned calves.
3. Confirm the security prompt **Cancel animals?** by choosing .

## 7.4 Transferring animal registrations

You can transfer calves registered at an automatic feeder to another group at any time.

**To transfer a registered calf to another group, proceed as follows:**

1. Choose  > **Animal management** to go to the **Transfer** submenu.
2. Select the required calf.
3. Select the required feeding group in the **Group** menu.
4. Confirm the prompt **Register animal xx in group X?** by choosing .

**Note:** When registration is transferred, the feeding day is retained; the calf will **not** be reset to the start of the feeding plan (= to plan day 1).

## 8 Feeding

You may only use the automatic feeder to prepare liquid feed for your calves.

**Note:** If you have installed additional peripheral devices such as the additive dispenser, you must also follow the instructions in the operating manual for these devices.

### 8.1 Replenishing feed

To ensure that the automatic feeder can prepare feed, you must make sure that the powder container and milk tank are always

#### 8.1.1 Filling the milk powder container

Only add milk powder (MP) that is suitable for feeding calves.

**ATTENTION** Make sure that no paper or other foreign bodies enter the powder container. The dosing mechanism could otherwise be damaged or the dosage accuracy impaired. As a result, your calves could receive insufficiently concentrated feed and would not be supplied with any or sufficient feed. This can lead to malnutrition, which can cause impaired growth or development, increased susceptibility to illness or even the death of your calves.

**ATTENTION** If the powder hopper is empty, no warning is displayed. Feeder operation is continued without a milk substitute. This can result in your calves only receiving water. This can lead to malnutrition, which can cause impaired growth and development, increased susceptibility to illness or even the death of your calves.

#### 8.1.2 Filling the milk tank

Ensure that the milk you are feeding is always clean. Straw, hay or other foreign matter impair the functioning of the automatic feeder.

**Note:** Use a low-speed intermittent stirrer for cow's milk and flocculated milk to prevent the milk from creaming. Stirrers that run constantly or at high speed churn the milk into butter.

Cool the milk or acidify it with formic acid.

**Note:** When setting the concentration, always follow the instructions of the formic acid manufacturer.

**ATTENTION** Only heat milk in the automatic feeder if its acidification process has been fully completed. The stainless steel coil of the heat exchanger could become clogged.

## 8.2 Feed preparation

During preparation of feed, the liquid components are dispensed first. These components are supplied from the boiler or the heat exchanger to the mixer jar and are heated up in the process.

Water that is heated in the heat exchanger transfers its heat to the liquid (milk or water) in the stainless steel coil of the heat exchanger. A circulation pump keeps the boiler water in motion. To save energy, the circulation pump does not operate continuously. It only switches on in the following situations:

- Every 10 minutes for 30 seconds.
- When a calf consumes its portion.
- When a cleaning cycle is run.

If the mixer jar is filled up to the rod electrode with fluid (water or milk), milk substitute (MP) will be dispensed from the powder container into the mixer jar according to the feeding plan.

### 8.2.1 MP mode or milk mode

In the **Feed** menu you set the type of feed to be dispensed:

- The automatic feeder dispenses MP feed only [**MP only**].
- If you want the combined automatic feeder to dispense MP feed only, always configure this via **Operating modes**.

**ATTENTION** The automatic feeder will malfunction if you set the feeder type to **Powder** during setup. This can lead to malnutrition. Malnutrition can cause impaired growth and development, increased susceptibility to illness or even the death of your calves.


- The amount of water specified in the feeding plan is heated up in the heat exchanger and dispensed into the mixer jar.
- The amount of milk substitute specified in the feeding plan is dispensed into the mixer jar from the powder container.
- The mixer mixes this portion into a homogeneous liquid.
- The automatic feeder dispenses milk and MP feed [**MP/milk**].



The automatic feeder can add milk substitute to milk or dilute milk with water in order to obtain the concentration you require.

- The amount of water specified in the feeding plan is heated up in the heat exchanger and dispensed into the mixer jar.
- The amount of milk specified in the feeding plan is channeled from the storage container into the heat exchanger, heated up and dispensed into to the mixer jar.
- The amount of milk substitute specified in the feeding plan is dispensed into the mixer jar from the powder container.
- The mixer mixes this portion into a homogeneous liquid.

**You set the feeding mode as follows:**

1. Press  > **Device data** > **Operating modes** > **Feed**.

2. In the **Feed** menu, select the **MP** option or **MP/milk**.

**Note:** If you choose **MP/milk**, further menus will be displayed:

3. In the **Milk empty:** menu, select

- **Stop.** When the milk tank is empty, the automatic feeder automatically switches completely off.

**ATTENTION** Your calves will not receive any feed if feeder operation is interrupted. This can lead to malnutrition. Malnutrition can cause impaired growth and development, increased susceptibility to illness or even the death of your calves. You must immediately refill an empty milk tank or use an alternative method to provide your calves with feed.

- **MP.** When the milk tank is empty, the automatic feeder switches to MP mode.

**ATTENTION** Your calves will not receive any feed if feeder operation is interrupted. This can lead to malnutrition. Malnutrition can cause impaired growth and development, increased susceptibility to illness or even the death of your calves. You must ensure that the storage container for milk substitute is always filled with milk substitute.

4. In the **Dry matter** menu, you enter the desired value for the milk substitute. You can enter values between 5 and 255 g. The default value is 150 g.

5. The degree of milk dry matter is compared to the concentration plan every day. If the feed concentration in the concentration plan is greater than the DS content of the milk, then MP will be added to the mixer jar until the set concentration is reached. If the concentration is lower than the DS content of the milk, then the milk or milk/MP feed mixture will be diluted with water.
6. In the **Draining** menu, you specify how long a warm portion of milk should remain ready for consumption in the stainless steel coil of the heat exchanger before it is replaced with a water portion. You can enter values between 0 and 3 hours. The default value is 1 hour. The pause time starts after the last milk portion has been dispensed. If the value 0 is selected, then **Draining** is deactivated.

**ATTENTION** Warm milk that remains too long in the stainless steel coil of the heat exchanger is a breeding ground for germs. Do not change the default value, if possible.

**ATTENTION** Warm milk that remains too long in the stainless steel coil of the heat exchanger can thicken and block the heat exchanger. This can lead to malnutrition. Malnutrition can cause impaired growth and development, increased susceptibility to illness or even the death of your calves. Do not change the default value, if possible.

### 8.3 Feed distribution

For an internal station, feed is distributed in **preference mode**.

In preference mode, one animal is always fed after the other. When the calf sucks the feed, the mixed feed in the mixer is conveyed to the sucking teat via the suction hoses and the opened feeding box valve.

### 8.4 Feeding

When you register your calves for the automatic feeder, you assign them to a group (A, B, C or D). Calves in the same group are usually fed according to the feeding plan of their group. See the appendix for examples of default feeding plans (see chapter **13.1** Standard feeding plans, page **135**).

You can also choose between rationed feeding and 40FIT feeding.

### 8.4.1 40FIT feeding

A key goal of calf rearing is to ensure that calves get off to the best possible start in life and to prepare them for optimum performance as milk cows later in life. Intensive feeding in the first 40 days of life is an important prerequisite in reaching this goal.

By changing the feeding plan to 40FIT/ rationed, you can activate the 40FIT function in any period. During this period, feed is freely available to calves all day long. The defined feed quantity is only a reference value for calculating alarm levels and is not a limit.

To ensure that the calves do not eat too much, the amount consumed per visit is limited by the defined maximum quantity. In addition, a blocking period can be defined during the 40FIT feeding phase. This means that the calf can only consume the defined maximum quantity during this period. After the subsequent blocking period, the maximum quantity can be consumed again, and the remaining amounts from the previous blocking period are not carried over.

If a feeding period is defined as rationed, the feed quantity to which the calf is entitled is spread across multiple intervals.

The standard A and B feeding plans correspond to the 40FIT feeding concept. The standard A and B feeding plans correspond to the rationed feeding concept.

**Note:** Contact your feed consultant to find out which feeding plan is best for your calves.

### 8.4.2 Interval feeding program

The feed quantity to which the calf is entitled each day is spread across multiple intervals. (**Interval feeding program**). Feed entitlements are saved from interval to interval and can be consumed at any time once a **minimum saved amount**. Without a minimum saved amount, the calves would consume feed portions that are too small. The feed portion is not released until the minimum saved amount defined in the feeding plan has been reached. As a result, the minimum saved amount lets you indirectly define the number of meals that a calf receives. From 8 pm to midnight, a calf can consume the rest of the feed to which it is entitled, even if it has not reached the minimum saved amount. By defining the maximum amount in the plan, you ensure that a calf does not eat too much. You use the **maximum amount** in the feeding program to define how much feed a calf can consume at once. The interval feeding concept is tailored to the needs of your calves. You can set up the feeding plan so that young calves are supplied with several small portions, e.g., 1.5 liters of feed 4 times a day, at the beginning of the feeding period. When the calves get older, you reduce the number of feeding times by






increasing the minimum saved amount to 1 feeding time per day. The increasing intervals between the feeding times encourage the consumption of concentrate and roughage. At the same time, you reduce the tendency toward cross-sucking. See the appendix for an example of an interval program (see chapter **13.2** Basic principle of interval feeding, page **137**). After consuming its maximum quantity, a calf is excluded from feed distribution for 2 hours, and saved feed quantities are retained.

### 8.4.3 Preferred feeding

You can give preference to certain calves for the consumption of feed. If a preferred calf enters a feeding box, its feed is immediately dispensed. You can give calves preference based on the following criteria:

- Calves that have triggered an **alarm**.
- All calves up to a certain **feeding day**.
- One **station** and all calves that feed there.




You set a preference as follows:




1. Choose  > **Feeding** to go to the **Priority** submenu.
2. In the **Alarm** menu, choose   [yes] to prefer or [no] in order not to prefer calves with alarm messages.
3. In the **till feed day** menu, enter the feeding day until which you want to give a calf preference.
4. In the **Box** menu, choose   to select the feeding box at which preferred feeding is to take place, or select [none].

### 8.4.4 Extra portions

You can manually start the preparation of extra portions at any time. Extra portions are dispensed to a calf in addition to the daily quantity to which it is entitled according to the quantity plan. These portions are not offset against the quantity plan.

You enable dispensing of extra portions as follows:

1. Choose  to go to the **Extra portion** submenu.
2. In the **Output** menu, choose   to select the output location:




- In the **Bucket** menu, you output the feed portion into a prepared bucket via the gully drain.
  - In the **Mixer** menu, you output the extra portion into the mixer.
    - Transfer the contents of the mixer manually.
    - After each partial portion, confirm **Mixer empty?** by choosing .
  - In the **Station X** menu, you output the extra portion via the selected valve outlet.
    - Select a **feeding box**.
    - Disconnect the hose from the valve outlet
    - Drain the feed into a container suitable for feeding calves.
3. In the **Set quantity** menu, specify the quantity for the extra portion. You can enter values between 0.3 and 65 liters. The default setting is 5 liters.
  4. In the **Temperature** menu, specify the required temperature for the extra portion. The temperature may not exceed **45°C** . The default setting is the value that you defined in  > **Device data > Portion > Set temp..**
  5. In the **Concentr.** menu, specify the required concentration for the extra portion to be mixed. You can enter values between 5 and 255 g/l. The default setting is 150 g/l.
  6. In the **Milk ratio** menu, specify the milk ratio for the extra portion. You can enter values between 0% and 100%. The default setting is 100%.
  7. In the **Additive** menu (optional), specify the amount of additive for the extra portion. You can enter values between 1 and 99 g/l.
  8. Confirm **Start?** by choosing  in order to start dispensing the extra portion.




## 8.5 Checking and changing feeding data for individual animals

In the **Single animal** menu, you check and change feeding parameters for individual calves.

### 8.5.1 Group membership


You allocate a registered calf to a group as follows:

1. Choose  > **Feeding** to go to the **Animal** submenu.
2. Choose   to select the required animal number.

3. In the **Group** menu, choose   to select A, B, C or D.  
The prompt **Transfer animal no. in group [A, B, C or D] ?** will appear.
  4. Confirm the message by choosing .
- The calf is registered in the required group.

### 8.5.2 Feed quantity


You change the feed quantity for an individual calf as follows:

1. Choose  > **Feeding** > **Animal** to go to the **Feed** submenu.
2. In the **Deviation** menu, enter the number of days (validity period) on which the calf is to receive a modified feed quantity. You can enter values between 0 and 99. The default setting is 0 days.
3. In the **Quantity** menu, you enter the additional feed quantity that the selected calf is to receive. You can enter values between 0 and 25 l. Use the **(+/-)** key to enter a minus sign (-) in front of the number, for example -2 l, in order to reduce the feed quantity and a plus sign (+), for example +2 l, to increase it. The default setting is 0.0 liters.
4. In the **Plan** menu, you can check the feed quantity to which the calf is entitled according to the plan.
5. In the **Feed** menu, you can check the feed quantity to which the calf is entitled for the defined period.

After the validity period, your corrections will expire and the calf will again be fed according to the feeding plan of its group.

### 8.5.3 Feed concentration

You change the feed concentration for an individual calf as follows:

1. Choose  > **Feeding** > **Animal** to go to the **Conc.** submenu.
2. In the **Deviation** menu, enter the number of days (validity period) on which the calf is to receive a modified feed concentration. You can enter values between 0 and 99. The default setting is 0 days.
3. In the **Quantity** menu, you enter the required change in concentration. You can enter values between 0 and 255 g/l. Use the **(+/-)** key to enter a minus sign (-) in front of the number, for

example -10 g/l, in order to reduce the concentration and a plus sign (+), for example +10 g/l, to increase the concentration. The default setting is 0 g/l.


4. In the **Plan** menu, you can check the feed concentration to which the calf is entitled according to the plan.
5. In the **Concentration** menu, you can check the feed concentration to which the calf is entitled after the change.

After the validity period, your corrections will expire and the calf will again be fed according to the feeding plan of its group.

#### 8.5.4 Milk ratio


Here you can view the milk ratio but you cannot change it.

You check the milk ratio as follows:

1. Choose  > **Feeding** to go to the **Animal** submenu.
2. In the **Milk ratio** menu, you can view the milk ratio percentage

#### 8.5.5 Weight





You set the weight as follows:

1. Choose  > **Feeding** to go to the **Animal** submenu.
2. In the **Weight** menu, you set the weight of the animal.

#### 8.5.6 Shortening or lengthening total feeding duration

You can shorten or lengthen the total feeding duration for a calf. To do this, you must "move" the animal to the desired plan day.

You change the total feeding duration as follows:

1. Choose  > **Feeding** to go to the **Animal** submenu.
2. Choose   to select the required animal number.
3. In the **Plan day** menu, you can check which day the calf is on in the feeding plan.
4. Confirm **Plan day** by choosing .
5. In the **Feed. day** menu, you can check the number of days that have passed since the calf was registered.

6. In the **Correction** menu, you enter the number of days by which you want to reduce or extend the feeding duration according to the group feeding plan for the calf. The maximum possible extension corresponds to the number of feeding days.  
**Note:** To extend the feeding duration, use the (+/-) key to enter a negative number such as -2. To shorten the feeding duration, use the (+/-) key to enter a positive number such as +2.
7. In the **Plan day** menu, you can check the calf's new plan day.
8. In the **Plan end** menu, you can view the number of days after which the feeding plan will end.
9. In the **Feed** menu, you can check the feed quantity that the calf will receive on the current day (today).
10. In the **Conc.** menu, you can view the feed concentration that the calf will receive on the current day (today).
11. In the **Milk ratio** menu, you can check the milk ratio that calf will receive on the current day (today).
12. In the **Initial** menu, the calf's initial weight is shown.
13. In the **Date** menu, the calf's arrival date is shown.

## 8.6 Feeding plans

The following plans are taken into account when the feed is prepared:


- Quantity plan
- Concentration plan
- Quantity limitation plan
- Milk ratio plan

When you registered your calves for the automatic feeder, you assigned them to a group (A, B, C or D). A quantity plan, a concentration plan, a quantity limitation plan and a milk ratio plan are created for each group.

If you are running an automatic feeder with animal identification, calves from different feeding groups, for example group A and group B, can be housed in the same bay or consume feed at the same station.



Below is an example of a feeding plan.

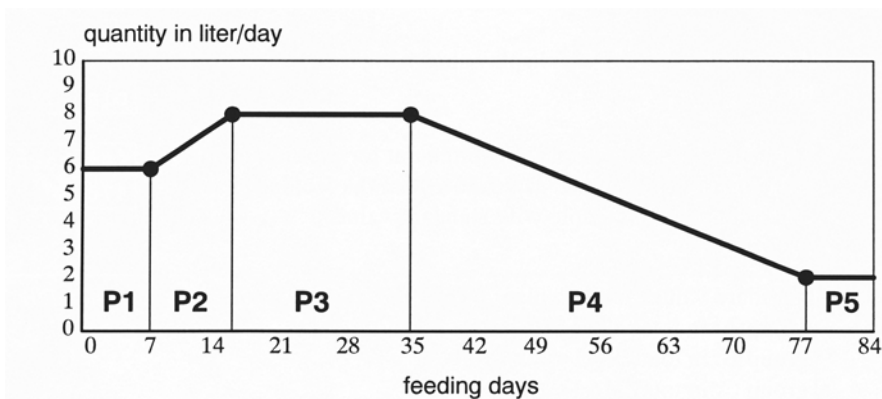

You can divide each feeding plan into up to 5 periods (P 1, P 2, P 3, P 4 and P 5).

The day on which a calf is registered corresponds to the first day of its feeding plan (if no correction days were entered).

Your automatic feeder has preset default plans. You can find the default feeding plans in the appendix of this operating manual (see chapter **13.1** Standard feeding plans, page **135**).

These default plans are based on general experience. Only change default plans if, based on your experience in calf rearing and your rigorous monitoring efforts, you are certain that your calves will not suffer from undernourishment or malnutrition. Malnutrition can cause impaired growth or development, increased susceptibility to illness or even the death of your calves.


### 8.6.1 Changing the default quantity plan





You can alter the default quantity plan according to 2 different feeding principles: the 40FIT feeding principle (F) or the rationed feeding principle (R).

Depending on the feed entitlement, the feed is distributed across one or more portions. These portions can vary in size. Only the feed amount that is actually consumed is recorded.






**ATTENTION** If you deviate from a default quantity plan, a calf may not receive sufficient feed. This can lead to malnutrition, which causes impaired growth and development, increased susceptibility to illness or even the death of your calves. Consult your feed consultant before making changes that could have harmful effects.

**Proceed as follows to change a default quantity plan based on the 40FIT feeding concept:**

1. Choose  > **Feeding** > **Plans** > **Feed** to go to the **Quantity** submenu.

2. Choose   to select the desired group.  
Groups A and B are assigned to 40FIT plans by default.  
The feeding plan of this group is shown in the display.
3. Choose   to select the feeding concept for the group: **40FIT/rationed**
4. In the **Days (P 1)** column, you enter the length of the feeding period. You can enter values from 2 to 99. The default setting is 35 days.
5. In the **from (P 1)** column, you enter the starting value for the feeding quantity. You can select values from 0.1 to 25.5 liters in 0.1 liter increments. The default setting is 8 liters.  
**Note:** The quantity entered here is not a limit, but a reference value for calculating alarm levels for 40FIT feeding (F) or as a limit for rationed feeding (R).  
**Note:** Observe the table in chapter 8.6.2 Changing the default concentration plan, page 83.
6. In the **to (P 1)** column, you enter the final value for the feeding quantity. You can select values from 0.1 to 25.5 liters in 0.1 liter increments. The default setting is 6 liters.  
**Note:** The quantity entered here is not a limit, but a reference value for calculating alarm levels for 40FIT feeding (F) or as a limit for rationed feeding (R).  
**Note:** Observe the table in chapter 8.6.2 Changing the default concentration plan, page 83.
7. Activate 40FIT feeding at the end of a period by choosing **F** or activate rationed feeding by choosing **R**.  
If necessary, repeat steps 1 to 7 for **P 2** to **P 5**.
8. In **Duration**, you can check the total duration of the feeding plan.
9. In **Quantity**, you can check the total feed quantity that a calf will receive according to this plan.  
**Note:** This quantity is a guide value for 40FIT feeding.

**Proceed as follows to change a default quantity plan based on the rationed feeding concept:**

1. Choose  > **Feeding > Plans > Feed** to go to the **Quantity** submenu.
2. Choose   to select the desired group.  
Groups C and D are assigned to rationed feeding plans by default.  
The default feeding plan of this group is shown in the display.
3. Choose   to select the feeding concept for the group: **rationed**

4. In the **Days (P 1)** column, you enter the length of the feeding period. You can enter values from 2 to 99. The default setting is 2 days.
5. In the **from (P 1)** column, you enter the starting value for the feeding quantity. You can select values from 0.1 to 25.5 liters in 0.1 liter increments. The default setting is 5 liters.  
**Note:** The quantity entered here serves as a limit.  
**Note:** Observe the table in chapter **8.6.2** Changing the default concentration plan, page **83**.
6. In the **to (P 1)** column, you enter the final value for the feeding quantity. You can select values from 0.1 to 25.5 liters in 0.1 liter increments. The default setting is 5 liters.  
**Note:** The quantity entered here serves as a limit.  
**Note:** Observe the table in chapter **8.6.2** Changing the default concentration plan, page **83**.
7. If necessary, repeat steps 4 to 6 for **P 2** to **P 5**.
8. In the **Duration** menu, you can check the total duration of the feeding plan.
9. In the **Quantity** menu, you can check the total feed quantity that a calf will receive according to this plan.

### 8.6.2 Changing the default concentration plan

There is a concentration plan for every feeding plan. Just like the feeding plan, the concentration plan can be divided into 5 periods. The default setting is one period, **P 1**. The length of the quantity plan periods is, however, not bound to the length of the feeding plan periods.

For example, if you want to keep the feed concentration the same for all feeding periods, in **P 1** in the **Days** column, you can enter the same number that is specified for the total number of feeding days in the **Duration** menu option.

The default milk substitute concentration is **150 g/l**. Periods **P 2** to **P 5** are not activated by default.

**Note:** Many milk powder manufacturers recommend the **MP concentration** (MP = milk substitute) **per liter of feed** on their packaging. However, the program of the automatic feeder requires you to enter the **MP concentration per liter of water**. To make this conversion easier, use the following conversion table, which is also included in the appendix (see chapter **13.3** Milk powder (MP) conversion table, page **137**).

Required concentration (in g/l feed)	Setting in concentration plan (in g/l water)	Dry matter (in %/l feed)
100	111	10.0
105	117	10.5
110	124	11.0
115	130	11.5
120	136	12.0
125	143	12.5
130	149	13.0
140	163	14.0
150	176	15.0
160	190	16.0
170	205	17.0
180	220	18.0
190	235	19.0
200	250	20.0

**For example:** The feed concentration specified on the of the milk substitute (MP) package is **130 g/l feed**. When you enter the feed concentration plan in your automatic feeder, enter **149 g/l (water)** according to the conversion table.

Required concentration (in g/l of feed)	Setting in concentration plan (in g/l of water)	Dry matter (in %/l feed)
125	143	12.5
130	149	13.0
140	163	14.0


\*) Guide value

**ATTENTION** If you deviate from the default concentration plan, a calf could receive feed which is insufficiently concentrated. This can lead to malnutrition, which causes impaired growth and development, increased susceptibility to illness or even the death of your calves. Ensure that the changes will not having any harmful effects, for example by rigorously monitoring your calves.

Calves that only receive milk or milk substitute must be registered in different feeding groups because there is only one default concentration plan per group.

The length of the concentration plan periods does not have to match the length of the quantity plan periods. If the concentration plan is shorter than the quantity plan, at the end of the concentration plan a message will appear in the display of your hand terminal. The concentration of the last feeding portion fed to the calf will be maintained until the end of the quantity plan.

**You change a default concentration plan as follows:**

1. Choose  > **Feeding > Plans > Feed** to go to the **Concentration** submenu.

2. Choose   to select the desired group (A, B, C or D).

The default concentration plan of this group will be shown in the display.

**Note:** Unlike for the quantity plan, only P 1 is assigned by default. However, here too, you can activate up to 5 periods (**P 1 to P 5**). If you activate a period, for example P 2, the following period P 3 will automatically become visible.

3. In **P 1**, you enter the duration (**Days** column) of the change in concentration and the respective starting value (**from** column) and final value (**to**) of the feed concentration. You can enter values between 5 and 255 g. The default setting is 150 g.
4. If necessary, repeat step 3 for **P 2 to P 5**.
5. In **Duration**, you can check the total duration of the concentration plan.
6. In **Quantity**, you can check how many kilograms of milk substitute (MP) a calf will receive according to the modified plan.

### 8.6.3 Changing the default milk ratio plan

You use the milk ratio plan to define the following:

- The milk ratio of the feed.
- The amount of milk feed received by calves in a group.
- The amount of the time calves in a group receive milk feed.

**Note:** A milk ratio plan with one period (**P 1**) (**100% milk feed**) is the default setting. You can divide the milk ration plan into a maximum of 5 periods (**P 1 to P 5**). You can set the following milk ratios:

- 0% milk ratio, meaning only milk substitute (MP).
- 30 to 70% milk ratio, meaning milk and milk substitute (MP).
- 100% milk ratio, meaning milk only.




In **P 1 (Days)** enter the total number of days (**Duration**) of the feeding plan in order to dispense feed with a constant milk ratio during the entire feed period. The total number of days can be found in the **Duration** menu option.

The length of the milk ratio plan periods does not have to match the length of the quantity plan periods. If the milk ratio plan is shorter than the quantity plan, at the end of the milk ratio plan

a plan over date message will appear in the display of your hand terminal. The milk ratio of the last feeding portion fed is maintained until the end of the quantity plan.

**ATTENTION** If you deviate from the default milk ratio plan, a calf could receive an insufficient quantity or concentration of feed. This can lead to malnutrition, which causes impaired growth and development, increased susceptibility to illness or even the death of your calves. Ensure that the changes will not have any harmful effects, for example by rigorously monitoring your calves.

**You change a default milk ratio plan as follows:**

1. Choose  > **Feeding > Plans > Feed** to go to the **Milk ratio** submenu.
2. Choose   to select the desired group (A, B, C or D).  
The default milk ratio plan of this group is shown in the display.
3. In the **Days (P 1)** column, you specify how long you want the change to the milk ratio to last.
4. In the **from (P 1)** column, you enter the starting value for the milk ratio.
5. In the **to (P 1)** column, you enter the final value for the milk ratio.  
The cursor will jump to the next feeding period (**P 2**).
6. If necessary, repeat steps 3 to 5 for **P 2** to **P 5**.
7. In the **Duration** menu, you can check the total duration of the milk ratio plan.
8. In the **Quantity** menu, you can check the total feed quantity in liters that a calf will receive according to this plan.

#### 8.6.4 Changing the default quantity limitation plan






In the quantity limitation plan, you use entitlement intervals to define the number of meals (amount consumed) a calf receives per day.

**Note:** You can increase or reduce the feed quantity in steps of 0.1 l. Depending on the feed entitlement, the feed is distributed across one or more portions. These portions can vary in size.

To prevent overeating, the amount consumed is limited by the maximum quantity defined in the feeding plan. This means that the calves receive no more than the maximum feeding quantity at each meal.

**ATTENTION** If you deviate from the default quantity limitation plan, a calf may not receive sufficient feed. You may not reduce the defined quantity limitation values any further, especially toward the end of the feeding period. This can lead to malnutrition, which causes impaired growth and development, increased susceptibility to illness or even the death of your calves. Ensure that the changes will not have any harmful effects, for example by rigorously monitoring your calves.

**You change a default quantity limitation plan as follows:**

1. Choose  > **Feeding** > **Plans** > **Feed** to go to the **Limitation** submenu.
2. Choose   to select the desired group (A, B, C or D).  
The default quantity limitation plan for this group will be shown in the display.
3. In the **Days (P 1)** column, you enter the duration of the change. You can enter values between 1 and 99 days. The default setting is 14 days.
4. In the **Min (P 1)** column, you enter the minimum saved amount in liters. You can enter values between 0.2 and 9.5 liters. The default setting is 2 liters.
5. In the **Max (P 1)** column, you enter the maximum amount in liters. You can enter values between 2.5 and 9.5 liters. The default setting is 2.5 liters.  
The cursor will jump to the next feeding period (**P 2**).
6. Repeat steps 3 to 5 for **P 2** to **P 5**.
7. In the **Block 40FIT** line, you enter the amount of time that a calf in the 40FIT period is blocked after consuming its maximum quantity. You can enter values between 00:30 hours and 02:30 hours. The default setting is 02:00 hours.
8. In the **Duration** line, you can check the total duration of the quantity limitation plan in days.
9. In the **Start time** line, you enter the time from which the saving of the feed quantity should begin. The time is calculated from 00:00. By choosing   you can set a deviation of +2 or - 2 hours.

**Note:** If you feed your calves according to the 40FIT principle, or if you use an electrolyte as an additive, you cannot set the start time.




## 8.7 Winter feeding plan

If your automatic feeder features MultiReader identification with an integrated temperature sensor, you can define a winter feeding plan for your calves. You can adjust the feed quantity or concentration so that your calves receive more feed when temperatures drop.

If the ambient temperature rises above a temperature limit that you define, the winter feeding plan is automatically disabled.

**Note:** The winter feeding plan can only be defined for all calves (regardless of feeding group), not for individual calves.

You set the winter feeding plan as follows:

1. Choose  > **Feeding** > **Plans** to go to the Winter feeding plan submenu.
2. In the line labeled **Check temperature?**, check whether the MultiReader identification system is equipped with a temperature sensor so that it can measure the temperature.  
**Note:** If the message **No measurement possible** appears, you will not be able to activate the Winter feeding plan.
3. In the **Active** menu item, you choose   [yes] to activate the winter feeding plan and [no] to deactivate the winter feeding plan. The default setting is [no].
4. In the **Current temp.** menu option, you can check the current temperature at a time of 00:00.
5. In the **Ø temp.** menu option, you can check the average temperature over the last 3 days.
6. In the **Status** menu option, you can check whether an increase has been entered (**Increase on**).
7. In the **Limit temp.** menu option, you specify the minimum temperature at which you want feed to be increased.
8. In the **Increase** menu option, you specify the percentage by which you want to increase the feed quantity or feed concentration.




## 8.8 Alarm levels

You use alarm levels to determine the time or value that triggers an alarm. Alarm levels are defined for groups. You can set alarm levels for:



- Feed consumption.
- Drinking speed.
- Feeding break.

**You set alarm levels as follows:**


1. Choose  > **Feeding > Alarm level** to go to the **Feed** submenu.
2. Choose   to select the desired group (A, B, C or D).
3. In the **after** menu, you enter the amount of time (hours) that can pass after a feed release before an alarm is triggered. The setting applies to the current day. The preset default value is 3 hours. You can enter values from 0 to 9 hours.
4. In the **as of** menu (only for 40FIT), you enter the earliest time of day at which an alarm is triggered if the percentage entered for feed consumption is not reached. The setting applies to the current day. The default setting is 12:00 hours and 30%. You can enter times from 08:00 to 12:59 and 0 to 99%.
5. In the **yesterday** menu, you enter the minimum percentage of feed a calf must have consumed yesterday so that no alarm is triggered. The preset default value is 80 %. You can enter values from 0 to 99%.
6. In the **Dr. speed** menu, you enter the percentage of drinking speed that a calf must reach so that no alarm is triggered. The preset default value is 70 %. You can enter values from 0 to 99%. The average, drinking speed of a particular calf on the current day (today) is compared to its average drinking speed on the last 3 days. If the entered value is not reached, an alarm will be triggered.
7. In the **break w.o. add.** menu, you specify how often a calf may interrupt its feeding (that is, drink less than its entitled quantity) before an alarm is triggered. The default setting is 3 breaks. You can enter values from 0 to 99.



## 9 Animal control

You can use your automatic feeder to monitor animals.

**Note:** You can only obtain information about calves if you run your automatic feeder with animal identification.

Choose  to go to the menus for animal control. The number next to the submenus shows the number of calves recorded in the relevant menu.

### 9.1 Animal list


In the animal list menu, you can list your calves in a table sorted by parameters. The table is sorted in ascending order by the first column of the first parameter. Parameters sorted in ascending order. This means that the calf with the greatest need for monitoring is at the very top of the table. The following parameters can be displayed:



- Feed consumption as a percentage
- Feed consumption in liters
- Drinking speed as a percentage
- Animal visits
- Breaks

		column 1	column 2		
1/118		cons.	dr.sp		
▶ 799 ↘A2	29	56	✓	✓+	
744 fA1	29	✓	✓+	✓+	
715 →A1	50	91	91	91	
737 ↗A1	✓	56	✓+	74	
742 fA1	✓	81	✓	✓+	
743 →A1	✓	85	✓+	✓+	
795 →D2	✓	✓	✓	✓	


**Note:** You can also access the **animal list** directly via the  key.


Here is how you define which parameters are displayed in the two columns of the animal list:

1. Choose  > **Device data** to go to the **Animal list** submenu.


2. In **Column 1** or **Column 2**, choose   to select the parameter to be displayed in the respective column.

You call up an animal list as follows:

1. Choose  to go to the **Animal list** submenu.
2. In the top line, from left to right, you can check the following:

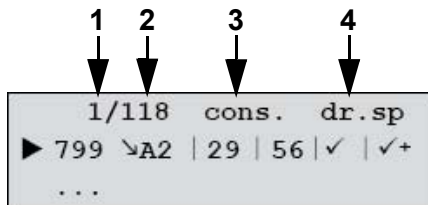

- The number of the calf you have selected in the list, counting from the top (1).
  - How many calves are registered (2).
  - The two parameters you have chosen (3 & 4).
3. You can view the following in the subsequent lines, from left to right:

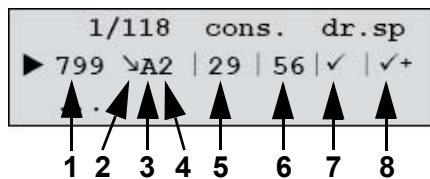

- The animal number (1).
- The plan tendency (2).
- The group to which the calf concerned has been assigned (3).
- The last feeding box visited (4).
- Parameter 1. The current value (today) is in the column on the left (5). Yesterday's value is in the column on the right (6).

**Note:** The parameter for feed consumption is simply today's value (consumption until present time) in liters with two decimal places.

- Parameter 2. The current value (today) is in the column on the left (7). Yesterday's value is in the column on the right (8).

**Note:** If there is a check mark instead of a number, then the value is 100%. A

check mark followed by a plus indicates a value greater than 100% (only for drinking speed and visits).

```

1/118  cons.  dr.sp
▶ 799  >A2 | 29 | 56 | ✓ | ✓+
...

```

**Example:** The calf shown with the number 799 is in the weaning phase (reduced plan tendency), has been assigned to group A and has visited feeding box 2. At present, the calf has consumed only 29% of its feed entitlement, yesterday it was only 56%. The current value for drinking speed is 100% (✓); yesterday it was more than 100% (✓+).

4. By choosing , you can go to the detailed view for the currently marked animal. By choosing   you can scroll to the other animals.

```

!< 3469>A1  ↗  6.0 1
▶ cons. %:    25  100
break off:   1    0
speed. %:    85  100
visit:       3    6
C 1 %:       99  100
weight kg:   117 116
w. gain:     600 400
feed. day:   77

```

**Note:** In each line, by pressing , detailed information can be called up.

## 9.2 Entitlement

Here you can check your calves' feed entitlement.

**You check feed entitlements as follows:**

1. Choose  to go to the **Entitlement** submenu.
2. From left to right in the top line, you can view the **animal number**, the **plan tendency** and the **feed quantity** scheduled for the current day (today) according to the plan.
3. Choose   to select a calf.
4. Here you can check whether the selected calf is entitled to feed and the amount of feed to which it is still entitled.
  - **Variant 1:** The calf has a feed entitlement. In the **as of** menu, you can check the earliest time of day at which the calf has a feed entitlement and the feed quantity

saved by this time, for example **starting at 1:45 pm, 2.0 liters.**

- **Variante 2:** The calf has a feed entitlement, for example **starting 10:15 am, 0.0 liters or block.**
- **Variante 3:** The calf has saved more feed that it may consume at once and it consumed less than its maximum quantity during its last visit to the feeding box. You can check the latest time of day at which the calf can consume the difference between the consumed quantity and the maximum quantity, for example **up to 11:30 am, 1.5 liters.**

**Note:** You can delete the feed block by pressing . Confirm **Delete block?** by choosing .

5. In the **Cons. %** menu, you can check the percentage of feed that a calf has consumed today (left column) and yesterday (right column).
6. In the **Cons. L** menu, you can check the number of liters that a calf has consumed today (left column) and yesterday (right column).
7. In the **Break** menu, you can see how often a calf stopped feed consumption today (left column) and yesterday (right column). A calf interrupts feeding if it has consumed less than the quantity to which it is entitled per visit.
8. In the **Visit** menu, you can see how often a calf visited the feeding box today (left column) and yesterday (right column).
  - In the **Last** menu, you can check the time of day at which the calf last visited the feeding box.

You can view the last 10 visit times with entitlement and the consumption in liters by choosing .

- In the **With entitlement** menu, you can see how often a calf visited the feeding box today (left column) and yesterday (right column) with its feed entitlement.
- In the **Without entitlement** menu, you can see how often a calf visited the feeding box today (left column) and yesterday (right column) without a feed entitlement.







### 9.3 Alarm

You define limits for parameters that are used to monitor a calf's feed intake. If a calf exceeds or falls below these limits, an alarm will be triggered. You can define limits for the following parameters:

- Feed consumption as percentage of the daily amount.
- Number of feeding breaks.
- Drinking speed.

The procedure is described in detail in chapter **8.8** Alarm levels, page **88**.

**You check alarm animals as follows:**

1. Choose  to go to the **Alarm** submenu.  
A table will appear in the display.
  2. From left to right in the top line, you can view the **animal number**, the **plan tendency** and the **feed quantity** scheduled for the current day (today) according to the plan.
  3. Choose   to select a calf.  
You will see the individual alarms.
  4. In the **Cons. %** menu, you can check feed consumption for today (left column) and yesterday (right column). Confirm **Cons. %** by choosing .
- You can view more detailed information about feed consumption for today (left column) and yesterday (right column). You can make changes in the submenus (Feed I and Cons. g/l)
- In the **Cons. %** menu, you can check the percentage of feed that a calf has consumed today (left column) and yesterday (right column).
  - In the **Cons. L** menu, you can view feed consumption for today (left column) and yesterday (right column) in liters
- Note:** If you want to set the consumed feed quantity for the current day to zero, press  and confirm **Delete consumption?** by choosing .
- In the **Feed L** menu, you can view and change the feed quantity to which the selected calf is entitled. The procedure is described in detail in chapter **8.5.2** Feed quantity, page **78**.

- In the **Cons. g/l** menu, you can view and change the feed concentration to which the calf is entitled. The procedure is described in detail in chapter **8.5.3** Feed concentration, page **78**.
  - In the **Milk %** menu, you check the milk ratio of the feed to which the calf is entitled today. This menu option will only appear if your automatic feeder is operating in MP/milk mode.
5. In the **Break** menu, you can view the number of feeding breaks for today (left column) and yesterday (right column).
- In the **with additive** menu, you can see how often the feed with additive has been broken off.
  - In the **without additive** menu, you can see how often the feed without additive has been broken off.
6. In the **Drnk spd.** menu, %, you can view the drinking speed for today (left column) and yesterday (right column). Confirm **Drnk spd.** % with .
- In the **relative %** menu, the drinking speeds for today (left value) and for yesterday (right value) are shown in percent.
  - In the **abs.l/min** menu, the absolute drinking speeds for today and yesterday are shown.

**You delete alarms as follows:**

- Choose  to go to the **Alarm** submenu.
- Choose   to select a calf.
- Confirm **delete all?** by choosing .

**Note:** You can only delete alarms from **yesterday**.

## 9.4 Plan over date




One day before an action with a time limit ends, such as an increase in the feed quantity, you will receive a plan over date message for this action. You will receive plan date messages:

- If a calf will not receive any more feed because the feeding plan is ending (**Feed plan**).





- If the concentration plan ends before the feeding plan. Your calves will receive the most recently fed concentration until the end of the feeding plan (**Concentration plan**).
- If deviation plans (**deviation**) for feed or concentration are ending. From this point onward, the affected calves are fed according to the feeding or concentration plan of their group.

**You check plan over date messages as follows:**





1. Choose  to go to the **Plan over** submenu.  
A table will appear in the display.
2. From left to right in the top line, you can view the **animal number**, the **plan tendency** and the **feed quantity** scheduled for the current day (today) according to the plan.
3. Choose   to select a calf.
4. You will see the individual dates.

**You delete plan over date messages as follows:**

1. Choose  to go to the **Plan over** submenu.
  2. Confirm **delete all?** by choosing .
- The plan over date message disappears but will appear again for the next 3 days.

## 9.5 40FIT



In this menu, you can check how many and which of your calves are in a **40FIT period**.

1. Choose  to go to the **40FIT period** submenu.  
A table will appear in the display.
  2. From left to right in the top line, you can view the **animal number**, the **plan tendency** and the **feed quantity** scheduled for the current day (today) according to the plan.
  3. Choose   to select the desired calf.
  4. In the **Cons. %** menu, you can view feed consumption for today (left column) and yesterday (right column). Confirm **Cons. %** by choosing .
- 4.1 A table will appear in the display.

In the top line, you can view the **animal number**, the **plan tendency** and the **feed entitlement** for the current day (today).



4.2 In the 2nd line, you can check the feed entitlement in liters. Depending on the feed entitlement, one of the following 3 variants will appear:

- **Variante 1:** The calf has a feed entitlement. In **as of**, you can check the earliest time of day at which the calf has a feed entitlement and the feed quantity saved by this time, for example **starting at 1:45 pm, 2.0 liters**.
- **Variante 2:** The calf has no feed entitlement, for example **starting at 10:15 am, 0.0 liters or block**.
- **Variante 3:** The calf has saved more feed that it may consume at once and it consumed less than its maximum quantity during its last visit to the feeding box. You can check the latest time of day at which the calf can consume the difference between the consumed quantity and the maximum quantity, for example **up to 11:30 am, 1.5 liters**.

**Note:** You can delete the feed block by pressing . Confirm **Delete block?** by choosing .

4.3 In **Cons. %**, you can view feed consumption for today (left column) and yesterday (right column) as a percentage.

4.4 In **Cons. L**, you can view feed consumption for today (left column) and yesterday (right column) in liters

**Note:** If you want to set the consumed feed quantity for the current day to zero, press  and confirm **Delete consumption?** by choosing .

4.5 In **Feed I**, you can view the feed quantity in liters to which the calf is entitled today (left column) and yesterday (right column) according to the feeding plan. Here you can change the duration and quantity of deviations in the feed quantity. The procedure is described in detail in chapter **8.5.2 Feed quantity**, page **78**.

4.6 In **Cons. g/l**, you can view the feed concentration to which a calf is entitled today (left column) and yesterday (right column) according to the feeding plan. Here you can change the duration and quantity of deviations in the feed concentration. The procedure is described in detail in chapter **8.5.3 Feed concentration**, page **78**.

4.7 In the **Milk %** menu, you check the milk ratio of the feed to which the calf is entitled today. This menu option will only appear if your automatic feeder is operating in

MP/milk mode.

5. In the **Break** menu, you can view the number of feeding breaks for today (left column) and yesterday (right column).
6. In the **Drnk spd. %** menu, you can view the drinking speed for today (left column) and yesterday (right column). You can view the relative (%) and the absolute drinking speed (l/min). Confirm **Drnk spd. %** by choosing .
  - In the **Relative %** menu, you can view the relative drinking speed as a percentage for today (left column) and yesterday (right column).
  - In the **abs. l/min** menu, you can view the absolute drinking speed in liters for today (left column) and yesterday (right column).
7. In the **Visit** menu, you can view the number of visits to the feeding box for today (left column) and yesterday (right column). You can differentiate between visits with and without feed entitlement. Confirm **Visit** by choosing .
  - In the **Last** menu, you can view the time of day at which the selected calf last visited the feeding box today (left column) and yesterday (right column).
  - In the **With entitlement** menu, you can see how often a calf visited the feeding box today (left column) and yesterday (right column) with its feed entitlement.
  - In the **Without entitlement** menu, you can see how often a calf visited the feeding box today (left column) and yesterday (right column) without a feed entitlement.
8. In the **Feed. day** menu, you can view the feeding day the calf has reached according to the plan. You can review other detailed information in this menu. The procedure is described in detail in chapter **8.5.6** Shortening or lengthening total feeding duration, page **79**.

## 9.6 Marked

In this menu, you can view an overview of the drinking behavior of a calf that you have marked. You can also  mark (see chapter **4.4** Hand terminal, page **30**) another calf that you specifically want to monitor.

**You check marked animals as follows:**

1. Choose  to go to the **Marked** submenu.

A table will appear in the display.

2. From left to right in the top line, you can check the **animal number**, the **plan tendency** and the **feed quantity** scheduled for the current day (today) according to the plan.
3. Choose   to select the desired calf.
4. In the **Cons. %** menu, you can view feed consumption for today (left column) and yesterday (right column). Confirm **Cons. %** by choosing .

4.1 A table will appear in the display.

In the top line, you can view the **animal number**, the **plan tendency** and the **feed entitlement** for the current day (today).

4.2 In the 2nd line, you can check the feed entitlement in liters. Depending on the feed entitlement, one of the following 3 variants will appear:

- **Variant 1:** The calf has a feed entitlement. In the **as of** menu, you can check the earliest time of day at which the calf has a feed entitlement and the feed quantity saved by this time, for example **starting at 1:45 pm, 2.0 liters**.
- **Variant 2:** The calf has no feed entitlement, for example **starting at 10:15 am, 0.0 liters or block**.
- **Variant 3:** The calf has saved more feed that it may consume at once and it consumed less than its maximum quantity during its last visit to the feeding box. You can check the latest time of day at which the calf can consume the difference between the consumed quantity and the maximum quantity, for example **up to 11:30 am, 1.5 liters**.

**Note:** You can delete the feed block by pressing . Confirm **Delete block?** by choosing .

4.3 In the **Cons. %** menu, you can view feed consumption for today (left column) and yesterday (right column) as a percentage.

4.4 In the **Cons. L** menu, you can view feed consumption for today (left column) and yesterday (right column) in liters

**Note:** If you want to set the consumed feed quantity for the current day to zero, press  and confirm **Delete consumption?** by choosing .

4.5 In the **Feed I** menu, you can view the feed quantity in liters to which the calf is en-

titled today (left column) and yesterday (right column) according to the feeding plan. Here you can change the duration and quantity of deviations in the feed quantity. The procedure is described in detail in chapter **8.5.2** Feed quantity, page **78**.

- 4.6 In the **Cons. g/l** menu, you can view the feed concentration to which a calf is entitled today (left column) and yesterday (right column) according to the feeding plan. Here you can change the duration and quantity of deviations in the feed concentration. The procedure is described in detail in chapter **8.5.3** Feed concentration, page **78**.
- 4.7 In the **Milk %** menu, you check the milk ratio of the feed to which the calf is entitled today. This menu option will only appear if your automatic feeder is operating in MP/milk mode.
5. In the **Break** menu, you can view the number of feeding breaks for today (left column) and yesterday (right column).
6. In **Drnk spd. %**, you can view the drinking speed for today (left column) and yesterday (right column). You can view the relative (%) and the absolute drinking speed (l/min). Confirm **Drnk spd. %** with .

  - In the **Relative %** menu, you can view the relative drinking speed as a percentage for today (left column) and yesterday (right column).
  - In the **abs. l/min** menu, you can view the absolute drinking speed in liters for today (left column) and yesterday (right column).

7. In the **Visit** menu, you can view the number of visits to the feeding box for today (left column) and yesterday (right column). You can differentiate between visits with and without feed entitlement. Confirm **Visit** by choosing .



  - In the **Last** menu, you can view the time of day at which the selected calf last visited the feeding box today (left column) and yesterday (right column).
  - In the **With entitlement** menu, you can see how often a calf visited the feeding box today (left column) and yesterday (right column) with its feed entitlement.
  - In the **Without entitlement** menu, you can see how often a calf visited the feeding box today (left column) and yesterday (right column) without a feed entitlement.

8. In the **Feed. day** menu, you can view the feeding day the calf has reached according to the plan. You can review other detailed information in this menu. The procedure is described in detail in chapter **8.5.6** Shortening or lengthening total feeding duration, page **79**.

## 9.7 New



The **New** menu is used to monitor newly registered calves. Calves displayed under **New** are registered and can consume feed.

You change the values of newly registered calves as follows:

1. Choose  to go to the **New** submenu.
  2. In the **Animal no.** menu, you change the animal number.
  3. In the **Group** menu, you register a calf in another group.
  4. In the **Feed** menu, you define deviations in the dispensed feed quantity. The procedure is described in detail in chapter **8.5.2** Feed quantity, page **78**.
  5. In the **Concentration** menu, you define deviations in the dispensed feed concentration. The procedure is described in detail in chapter **8.5.3** Feed concentration, page **78**.
  6. In the **Milk ratio** menu, you can check the milk ratio.
  7. In the **Weight** menu, you can view the initial weight.
  8. In the **Plan day** menu, you can monitor the planned **feeding days**. Confirm **Plan day** by choosing .
- In the **Feed. day** menu, you can check the number of days that have passed since the calf was registered.
  - In the **Correct. days** submenu, enter a negative value such as -2 to extend the total feeding duration by 2 days. Enter a positive value such as +2 to shorten the total feeding duration by 2 days.
  - In the **Plan day** menu, you can view the plan day that the calf will be on after your correction.
  - In the **Plan end** menu, you can view the number of days in which the end of the plan will be reached.
  - In the **Feed** menu, you check the assigned feed quantity.

- In the **Concentration** menu, you can view the feed concentration that a selected calf will receive today.
  - In the **Milk ratio** menu, you can view the milk ratio that the feed of a selected calf will contain today.
  - In the **Initial** menu, you can view the calf's initial weight.
  - In the **Date** menu, you can view the calf's arrival date.
9. In the **Time** menu, you can view the registration time of a calf.
10. In the **Date** menu, you can view the registration date of a calf.

**Proceed as follows to delete a calf from the list of newly registered calves:**

- Choose  to go to the **New** submenu.
- Confirm **Confirm?** by choosing .




The calf will be deleted from the **New** menu.

**Note:** This only deletes calves from the **New** menu and not from the feed list. If you forget to confirm, the data will be automatically removed from the **New** menu after two days.

## 9.8 Double

During the fully automated registration process, it is possible for an animal number to be assigned twice. In the **Double** menu, you can modify the double animal numbers.

Proceed as follows to assign a new animal number to a calf that has been assigned a double animal number:








1. Choose  > **Double** to go to the **Animal no.** submenu.  
The calf with the double animal no. will be shown in the top line of the table.
  2. For the displayed calf, select an animal number that has not yet been assigned to a calf.
    - 2.1 Confirm the selected calf by choosing .
    - 2.2 Enter the animal number.
  3. Confirm **Confirm?** by choosing .
- The calf now has its own animal number.

## 9.9 Unknown

If you are running your automatic feeder with animal identification, the feeder registers all transmitters that approach it. In the **Unknown** menu, the following transmitters are registered:



- Transmitters that have not been assigned an animal number.
- Transmitters that have been assigned an animal number but that you have not yet registered for the automatic feeder and assigned to a feeding group.

**Proceed as follows to check and register unknown transmitters:**

1. Choose  to go to the **Unknown** submenu.
2. Use   to scroll through the list of unknown animal numbers.
3. In the **No.** menu, you can view the unknown animal number.
4. In the **Number** menu, you can see how many unknown transmitters have been identified and how often.
5. In the **Time** and **Date** menus, you can see when the animal identification function last identified the unknown transmitter.
6. In the **Register** menu, you register the calf with the unknown transmitter number for the automatic feeder. Confirm **Register?** by choosing .
  - 6.1 In the **Group** menu, you choose   to select a group.
  - 6.2 In the **Correct. days** menu, you enter the number of days by which you want to move the calf in the plan.
  - 6.3 Confirm **Register?** with .

The calf is registered.



**You delete unknown transmitters as follows:**

1. Choose  to go to the **Unknown** submenu.
2. Confirm **Delete?** by choosing .

The unknown transmitter will be deleted.



## 9.10 All




Here you can obtain a full overview of the feeding behavior of all calves. You display this overview in the exact same way as described in the **marked** (see chapter 9.6 Marked, page 99) menu for a single calf. Use   to scroll through the list of all registered calves.

## 9.11 Total consumption

In this menu, you can view the amount of feed your calves have consumed. You can display the consumption amounts of all calves, individual groups and individual calves as well as the number of quantity of portions dispensed until the present time.




### 9.11.1 Consumption of all calves

You display the consumption of all calves as follows:

1. Choose  > **Animal control** > **Total consumption** to go to the **Total** submenu.  
The planned consumption amounts are displayed in the left-hand column (**Set**) and in the right-hand column (**Actual**) the actual consumption amounts of all calves for today, yesterday and the day before yesterday.
2. Use   to scroll through the list of displayable feed parameters.
3. In the **MP** menu, you can view the amount of milk powder (MP) in kilograms that your calves have consumed today (**t.kg**), yesterday (**y.kg**) and the day before yesterday (**b.kg**).
4. In the **Milk** menu, you can view the amount of milk in liters that your calves have consumed today (**t.L**), yesterday (**y.L**) and the day before yesterday (**b.L**).

### 9.11.2 Consumption of individual calves


You display the consumption of all calves as follows:

1. Choose  > **Animal control** > **Total consumption** to go to the **Animal** submenu.  
A table is displayed that shows the feed consumption of the selected calf over the entire feeding period.
2. From left to right in the top line, you can check the **animal number**, the **plan tendency** and the **feed quantity** scheduled for the current day (today) according to the plan.
3. Choose   to select a calf.
4. In the **MP** menu, you can view the amount of milk powder (MP) in kilograms that the selected calf has consumed to date.

5. In the **Milk** menu, you can check the amount of milk in liters that the selected calf has consumed to date.
6. In the **Feeding day** menu, you can view the feeding day that the calf is currently on.




### 9.11.3 Prepared feed portions

You display the prepared feed portions of all calves as follows:

1. Choose  > **Animal control** > **Total consumption** to go to the **Portion** submenu.
2. In the **Number** menu, you can view all prepared feed portions to date.
3. In the **Quantity** menu, you can view the number of liters of feed prepared.

### 9.11.4 Consumption of a group



You display the consumption of all calves in a group as follows:

1. Choose  > **Animal control** > **Total consumption** to go to the **Group** submenu.  
The left-hand column (**today**) shows the quantity of feed consumed today and the right-hand column shows the quantity consumed yesterday (**yest.**) in liters.
2. Use   to scroll through the list of displayable groups.
3. In the **quantity** menu, you can view the amount of feed in liters that calves in the selected group have consumed today and yesterday.


## 9.12 Print

Here you can print out the animal list or the alarm list. To do this, your automatic feeder must be connected to a printer.

To print:

1. Choose  > **Print** to go to the **Alarm list** or **Animal list** submenu.
  2. Confirm **Print alarm list?** or **Print animal list?** by choosing .
- The selected list will be printed.

## 9.13 Searching for animals

In the menus for animal control, you can search for specific calves, such as calves that you have marked. Marked calves are indicated by an asterisk (\*) to the left of the animal number. You can also  mark (see chapter 4.4 Hand terminal, page 30) another calf that you specifically want to monitor.




**You search for a specific calf as follows:**

1. Press .

The animal control menus are displayed.


2. Go to the desired submenu.

3. Search for the calf. You can search for a calf in two ways:

- Use   to scroll through the list of calves registered for the automatic feeder until you find the calf.
- Press  and enter the number of the calf in the flashing field. The display will go directly to this calf.

If the animal number has not been assigned, the message **No such animal no.** will appear.

If the animal number has been assigned, but the calf has not been recorded in the selected menu, the message **Animal is not entitled** appears, for example in the Entitled menu.

**Note:** You can use the search function  in all other menus, for example when you register calves.



## 10 Care and maintenance

This chapter covers regular maintenance and functional testing of the automatic feeder, and to a certain extent, its accessories. These ensure that the required hygienic standards are maintained. Maintenance includes additional measures to preserve hygiene that are not described in the cleaning chapter, as well as scheduled replacement of wearing parts. Visual and functional testing of components as well as replacement of the suction hose and teat can be carried out by the owner/operator.

**Note:** Repair work and the replacement of wearing parts on or in the automatic feeder, with the exception of the suction hoses and teats, may only be carried out by a service technician.

On a regular basis, you must visually inspect and test the functions of the automatic feeder and its components, clean it to maintain hygiene, calibrate it and replace simple wearing parts such as the suction hose. Depending on the automatic feeder component in question, and depending how you run your automatic feeder, you must perform inspections and maintenance on a weekly, quarterly and annual basis.

At different intervals, service messages such as RS1 (regular service 1) will appear on the display of your automatic feeder. Contact your dealer and specify the service message you have received so that the dealer can perform the necessary maintenance.

Compliance with these maintenance intervals is the only way to ensure the long life and reliability of your automatic feeder.

The following regular services (RS) have been defined:

- RS1 must be performed every 4 months.
- RS2 must be performed every 12 months.
- RS3 must be performed every 36 months.

**Note:** For a quicker overview, see the care and maintenance schedule in the appendix (see **13.5.2** Maintenance intervals and activities on page **139**).

**⚠ DANGER** Beware of **lethal electric shock**. The electrical components of the automatic feeder are live. Before working on components, always turn off the automatic feeder with the control switch and disconnect the power plug.

**⚠ WARNING Beware of injuries** due to automatic start-up. Do not reach into the hazardous area of the mixer and the powder mixing unit. The mixer or powder mixing unit can start up automatically at any time, crushing or cutting off your hand and fingers. Before reaching into the hazardous area of the mixer or powder mixing unit, always turn off the automatic feeder using the control switch and disconnect the power plug.

## 10.1 Daily care and maintenance tasks

Perform the following inspections on a daily basis:

- Check the safety devices of the automatic feeder for visible damage. Are the warning signs still legible? Immediately replace any warning signs that are difficult to read or damaged. New warning signs are available from Förster-Technik GmbH.
- Check the automatic feeder and its power and water lines for visible damage. You may not run the automatic feeder if power or water lines are damaged. In the event of damage, turn off the automatic feeder using the control switch and disconnect the power plug. Contact your service technician immediately. All repairs must always be performed by a service technician.
- Check the intensive mixer for visible damage.
  - Are the electrodes, temperature sensors and mixer blades damaged? Damaged parts must be immediately replaced by a service technician.
  - Are the mixer blades working? Damaged parts must be immediately replaced by a service technician.
  - Is the mixer housing leaking? A leaky housing must be immediately replaced by a service technician.
  - Is the mixer screen clogged? A clogged screen must be immediately cleaned by a service technician.
- Check the milk connector of the automatic feeder and the hose leading from the milk tank to the automatic feeder for leaks and wear. Leaky hoses draw in air, and this impairs the functioning of the automatic feeder. As a result, your calves could receive insufficiently concentrated feed and would not be supplied with any or sufficient feed. This can lead to malnutrition, which can cause impaired growth and development, increased susceptibility to illness or even the death of your calves. New hoses are available from your dealer.

- Check the teats and suction hoses for the following:
  - **Leaks and wear.** Immediately replace damaged or leaky teats and hoses. Leaky hoses draw in air, and this impairs the functioning of the automatic feeder. As a result, your calves could receive insufficiently concentrated feed and would not be supplied with any or sufficient feed. This can lead to malnutrition, which can cause impaired growth and development, increased susceptibility to illness or even the death of your calves. You can obtain new hoses and teats from your dealer.
  - **Cleanliness.** Clean dirty hoses as described in chapter **6.3.4** Cleaning cycle, page **54**.
- **⚠ WARNING** There is a **risk of injury** due to automatic start-up. Do not reach into the hazardous area of the mixer and the powder discharge opening. The mixer and powder discharge opening can start up automatically at any time, crushing or cutting off your hand and fingers. Turn off the automatic feeder with the control switch and disconnect the power plug. Only use the supplied scraper to clean the powder discharge opening.

Check the powder discharge opening for foreign objects and only use the supplied scraper to remove them. Foreign objects can damage the mixer, the heat exchanger and the automatic feeder. Foreign objects that enter the feed can injure your calves. (See chapter **6.3.6** Cleaning the powder discharge opening, page **56**).

Check the powder discharge opening for milk deposits and only use the supplied scraper to remove them. (See chapter **6.3.6** Cleaning the powder discharge opening, page **56**). Milk deposits can cause the milk powder to be incorrectly dispensed. As a result, your calves could receive insufficiently concentrated feed and would not be supplied with any or sufficient feed. This can lead to malnutrition, which can cause impaired growth and development, increased susceptibility to illness or even the death of your calves.
- Check the detergent pump with detergent lance for visible damages.
  - Are the hoses on the pressure and suction side tight? Let a service technician immediately replace the damaged hoses.
  - Is the detergent lance damaged, clogged, incrustated or worn? Clean the detergent lance and a service technician immediately replace the damaged pieces.
  - Is the sieve at the bottom of the detergent lance clogged? Clean the detergent lance.

- Are all elements (lid of the detergent container, hose connection of the detergent lance, hose connections of the pump) properly closed? Close them properly.
- If necessary, check the level of the detergent container and fill up the cleaning agent.

## 10.2 Weekly care and maintenance tasks

Check the effectiveness of your cleaning circuits by performing a weekly sponge cleaning of the heat exchanger. (See chapter **6.3.3.3** Cleaning the heat exchanger manually with a sponge, page **52**).

## 10.3 Care and maintenance tasks required every 4 months

To ensure that your automatic feeder can mix the individual liquid and powder feed components (water, milk and milk substitute (MP) in the proper ratio, it must be recalibrated no later than every 4 months or after each new delivery of milk substitute. If you have not concluded a maintenance agreement for this service, you must recalibrate the feeder yourself. This is the only way to ensure that your calves receive a sufficient amount of properly mixed feed.

**ATTENTION** If you do not recalibrate your automatic feeder on a regular basis, your calves will receive insufficient or improperly mixed feed. This will cause malnutrition. Malnutrition can cause impaired growth and development, increased susceptibility to illness or even the death of your calves.

The first calibration is performed by your service technician during commissioning.

You must manually recalibrate powder and liquid feed and cleaning agents because the actual quantity will deviate from the set quantity for various reasons, such as fluctuations in water pressure.

### Calibration involves several steps:

- The volume of liquid components (water, milk and detergent) is determined.
- The weight of the powder components (milk substitute, additives) is determined.

### 10.3.1 Manually calibrating liquid and powder components

If your automatic feeder does not have an **automatic calibration scale**, you must provide the following items for the calibration:

- 1 graduated cylinder with gradations in ml (approximately 1 liter capacity).




- 1 scale (weighing accuracy of 1 g).
- 1 container to collect milk substitute.

### 10.3.1.1 Calibrating without a calibration scale





You determine the actual value using a scale and a graduated cylinder and the program will prompt you to enter this value using the number keys.

**Proceed as follows to calibrate powder components without a calibration scale:**


1. Choose  > **Calibration** to go to the **Components** submenu.
2. In the **MP** menu, you recalibrate the milk substitute.
  - Confirm **MP** by choosing .
  - **Set quantity** shows the amount of milk substitute (MP) to be dispensed by the automatic feeder.
  - **Runtime** shows the time in which the automatic feeder should dispense the milk powder.
  - **Date** shows when MP was last calibrated.
  - Tilt the empty mixer forward.
  - Hold the container for the milk substitute under the powder discharge.
  - Confirm **Start?** by choosing .
  - Confirm **Exit automatic mode?** by choosing . This message will only be displayed if your automatic feeder is still in automatic mode.

Powder will be dispensed.
  - Place the container with the collected milk substitute on the scale.
  - In the **Actual** menu, enter the weight displayed on the scale.
  - Confirm **Confirm value....** by choosing .
  - **Date** now shows the current date.
  - Repeat the calibration to check your results.
3. Calibrate other **powder components** using the same method.

Proceed as follows to calibrate liquid components without a calibration scale:

1. Choose  > **Calibration** to go to the **Components** submenu.
2. In the **Water** menu, you recalibrate water.
  - Confirm **Water** by choosing .
  - **Set quantity** shows the amount of water that the automatic feeder should dispense.
  - **Runtime** shows the time in which the automatic feeder should dispense the water.
  - **Date** shows when the water was last calibrated.
  - Confirm **Start?** by choosing .
  - Confirm **Exit automatic mode?** by choosing . This message will only be displayed if your automatic feeder is still in automatic mode.



Water will be dispensed into the mixer.

- Tilt the mixer so that the water flows into the graduated cylinder. Measure the collected water in milliliters.
  - In the **Actual** menu, enter this measured quantity using the number keys.
  - Confirm **Confirm value....** by choosing .
  - **Date** now shows the current date.
  - Repeat the calibration to check your results.
3. Calibrate other **liquid components** using the same method.

### 10.3.1.2 Calibrating using the calibration scale

The automatic feeder determines the actual value using the built-in automatic calibration scale (additional equipment).

Proceed as follows to calibrate liquid components using the calibration scale:


1. Choose  > **Calibration** to go to the **Components** submenu
2. In **Water**, you calibrate water.
  - Confirm **Water** by choosing .

- **Set quantity** shows the amount of water that the automatic feeder should dispense.
- **Runtime** shows the time in which the automatic feeder should dispense water.
- **Date** shows when the water was last calibrated.
- Confirm **Start?** by choosing . The calibration procedure will start. The set value of 250 ml will be shown first in the display.
- Confirm **Exit automatic mode?** by choosing . This message will only be displayed if your automatic feeder is still in automatic mode.

The device now carries out two check weighings without the user having to do anything and shows the result.

- Then the average value of these two control weighings is shown flashing in the **displayed** line. Confirm the **Confirm value....** prompt by choosing . You then return to the calibration menu.
  - **Date** now shows the current date.
3. Repeat the calibration to check your results.
  4. Calibrate other **liquid components** using the same method.

**Proceed as follows to calibrate powder components using the calibration scale:**

1. Choose  > **Calibration** to go to the **Components** submenu.
2. In **MP**, you calibrate the milk substitute.
  - Confirm **MP** by choosing .
  - **Set quantity** shows the amount of MP that the automatic feeder should dispense.
  - **Runtime** shows the time in which the automatic feeder should dispense the MP.
  - **Date** shows when MP was last calibrated.
  - Confirm **Start?** by choosing .
  - Confirm **Exit automatic mode?** by choosing . This message will only be displayed if your automatic feeder is still in automatic mode.
  - Place the calibration box into the mixer jar and confirm the prompt **Calibration box**


**used?** by choosing .

The device now carries out two check weighings without the user having to do anything and shows the result.

- Then the average value of these two control weighings is shown flashing in the **displayed** line. Confirm the **Confirm value....** prompt by choosing . You then return to the calibration menu.
- **Date** now shows the current date.
- Remove the calibration beaker from the mixer jar.
- Repeat the calibration to check your results.

3. Calibrate other **powder components** using the same method.

**Proceed as follows to calibrate the detergent using the calibration scale:**

1. Choose  > **Calibration** to go to the **Components** submenu.
2. In the **Detergent** menu, you recalibrate the cleaning agent.
  - Confirm **Detergent** by choosing .
  - **Set quantity** shows the amount of cleaning agent that the automatic feeder should dispense.
  - **Runtime** shows the time in which the automatic feeder should dispense the cleaning agent.
  - **Date** shows when the cleaning agent was last calibrated.
  - Confirm **Start?** by choosing .
  - Confirm **Exit automatic mode?** by choosing . This message will only be displayed if your automatic feeder is still in automatic mode.
  - Place the calibration box into the mixer jar and confirm the prompt **Calibration box used?** by choosing .

Detergent will be dispensed into the calibration beaker.

- The device now carries out two check weighings without the user having to do anything and shows the result.

- Then the average value of these two control weighings is shown flashing in the **displayed** line. Confirm the **Confirm value....** prompt by choosing . You then return to the calibration menu.
- **Date** now shows the current date.
- Remove the calibration beaker from the mixer jar.
- Repeat the calibration to check your results.

### 10.3.2 Replacing hoses and teats

- Replace the milk suction hose, which goes from the milk tank to the automatic feeder. This reduces the risk of infection. New hoses are available from your dealer.
- Replace all hoses that carry feed from the mixer to the feeding stations. This reduces the risk of infection. New hoses are available from your dealer.
- Replace all teats. This reduces the risk of infection. New teats are available from your dealer.

### 10.4 Annual care and maintenance tasks

- Perform a visual functional check of the powder mixer unit. The powder mixer unit may only be repaired by your service technician.



## 11 Faults and warnings

When an error occurs while the automatic feeder is running, the Auto LED on the hand terminal will flash. The error is described in fault or warning messages displayed on your automatic feeder.

You must immediately rectify errors that occur during operation. Unresolved errors, for example during preparation of feed, could cause your calves to suffer from malnutrition.

**ATTENTION** An interruption in feeding operation means that your calves will not receive any feed. This can lead to malnutrition. Malnutrition can cause impaired growth and development, increased susceptibility to illness or even the death of your calves. You must use an alternative method to supply your calves with feed as long as the automatic feeder is out of service.

You can fix some faults yourself. Errors that only a service technician can eliminate are indicated as such.

### 11.1 Faults

In the event of a **fault**, automatic mode is interrupted and no feed is prepared. Respond immediately to the fault and ensure that your calves are supplied with feed using an alternative method as long as the automatic feeder is out of service.


**ATTENTION** An interruption in feeding operation means that your calves will not receive any feed. This can lead to malnutrition. Malnutrition can cause impaired growth and development, increased susceptibility to illness or even the death of your calves. You must use an alternative method to supply your calves with feed as long as the automatic feeder is out of service.

#### 11.1.1 Heating

**Heating fault xx.x °C** will be shown in your display when the boiler water's temperature is too low. Feeder operation will be interrupted.

**ATTENTION** An interruption in feeding operation means that your calves will not receive any feed. This can lead to malnutrition. Malnutrition can cause impaired growth and development, increased susceptibility to illness or even the death of your calves. You must use an alternative method to supply your calves with feed as long as the automatic feeder is out of service.

**You correct the fault as follows:**

1. Check whether your calves are consuming feed so quickly that the boiler does not have enough time to heat up the water.
2. Check the temperature of the portion and, if necessary, reduce it via  > **Device data** > **Portion**.

If the fault appears again, you must contact a service technician immediately.

**11.1.2 Temperature too high**

**Fault, temperature too high** will appear in your display if the boiler water's temperature is too high. Feeder operation will be interrupted until the water in the boiler has cooled to the set maximum temperature. Provide your calves with feed using an alternative method as long as feed operation is interrupted.

**ATTENTION** An interruption in feeding operation means that your calves will not receive any feed. This can lead to malnutrition. Malnutrition can cause impaired growth and development, increased susceptibility to illness or even the death of your calves. You must use an alternative method to supply your calves with feed as long as the automatic feeder is out of service.

**You correct the fault as follows:**

1. Confirm **Fault, temperature too high** by choosing .
2. In **Boiler water start?**, press & hold .
3. Drain water from the boiler of the heat exchanger into the mixer jar until the fault message disappears.
4. Confirm **Mixer: empty?** by choosing .

Check the temperature of the supplied water if the Heat exchanger is supplied with preheated water.

**If the fault appears again:**

- Check the temperature of the inflowing water and reduce it, if necessary. This is especially necessary if you supply the Heat exchanger with preheated water.
- If this fault persists, you must contact your service technician immediately.



### 11.1.3 Heat exchanger not filled

When you turn on the automatic feeder, the control unit checks whether the heat exchanger is filled with water. If it is not filled, feeder operation will be interrupted and the message **Fault, HE not filled** will appear in your display.

**ATTENTION** An interruption in feeding operation means that your calves will not receive any feed. This can lead to malnutrition. Malnutrition can cause impaired growth and development, increased susceptibility to illness or even the death of your calves. You must use an alternative method to supply your calves with feed as long as the automatic feeder is out of service.

**You correct the fault as follows:**

1. Confirm **Fault, HE not filled** by choosing .
2. Check the water supply.
3. In **Fill HE?** press .
4. Check whether the water jet hits the rod electrode.
5. Check that the shutoff valves and the drain valve are not leaking.
6. **Note:** If liquid flows into the mixer through these valves, the rod electrode cannot be grounded.

If this fault persists, you must contact your service technician immediately.

### 11.1.4 Water shortage

If the rod electrode is not grounded in the mixer jar when water is being added, a water test will be started. If the water test is not successful, then feed preparation and animal identification will be switched off. **Fault, water shortage** appears in the display.

**ATTENTION** An interruption in feeding operation means that your calves will not receive any feed. This can lead to malnutrition. Malnutrition can cause impaired growth and development, increased susceptibility to illness or even the death of your calves. You must use an alternative method to supply your calves with feed as long as the automatic feeder is out of service.

**You correct the fault as follows:**

1. Confirm **Fault, water shortage** by choosing .
2. Confirm **Bo. water start?** by choosing .

3. Check whether the water jet hits the rod or point electrode.
4. Check the water supply to the automatic feeder.
5. Check whether deposits such as calcium have formed on the electrode.
6. Confirm **Delete fault?** with  if you have fixed the fault.

If this fault persists, you must contact your service technician immediately.

### 11.1.5 Mixer emptying

The fault message **Mixer emptying** will appear if the rinsing water in the mixer cannot be drained. Feeder operation will be interrupted.

**ATTENTION** An interruption in feeding operation means that your calves will not receive any feed. This can lead to malnutrition. Malnutrition can cause impaired growth and development, increased susceptibility to illness or even the death of your calves. You must use an alternative method to supply your calves with feed as long as the automatic feeder is out of service.

You correct the fault as follows:

**⚠ DANGER** **Beware of lethal electric shock.** The electrical components of the automatic feeder are live. Before working on components, always turn off the automatic feeder with the control switch and disconnect the power plug.

1. Turn off the automatic feeder using the control switch and disconnect the power plug.
2. Check all components carrying feed from the mixer to the mixer drain valve or from the mixer up to the teat for blockages and remove them.

**ATTENTION** The hose from the mixer drain valve to the drain channel may not be lengthened.

3. Reinsert the power plug and turn on the automatic feeder using the control switch .

4. Confirm **Fault, mixer emptying** by choosing .

5. Check the feeding pump:

5.1 Confirm **Start feeding pump?** by choosing .

6. Check the mixer drain valve:

6.1 Confirm **Open mixer drain?** by choosing .

7. Check the rod electrode.

7.1 Confirm **Bo. water start?** by choosing  to fill the mixer with water.

7.2 In the **Mixer emptying?** menu, confirm by choosing .

8. Confirm **delete fault?** by choosing  if you have fixed the fault.

9. Remove detergent remnants from components carrying feed by rinsing them with water.

**ATTENTION** Detergent remnants that enter the feed can be hazardous to the health of calves. Remove detergent remnants before recommissioning the automatic feeder.

10. Return to automatic mode.

### 11.1.6 Heating

If **Failure, heating** appears in your display, contact a service technician immediately. Feeder operation will be interrupted.

**ATTENTION** An interruption in feeding operation means that your calves will not receive any feed. This can lead to malnutrition. Malnutrition can cause impaired growth and development, increased susceptibility to illness or even the death of your calves. You must use an alternative method to supply your calves with feed as long as the automatic feeder is out of service.

### 11.1.7 Milk/circ. valve

If the **Milk/circ. valve** fault message is shown, then you can presume that there is a leak in the milk valve or in the circulation valve.

1. Confirm **Fault, milk/circ. valve** by choosing .

2. Visually inspect and check the function of both valves.

3. In **Start milk pump?** press . If liquid comes out of the milk outlet after the pump starts, then one of the valves is leaking.

4. If necessary have the valves checked and replaced by a service technician.

5. If the cause of the fault has been remedied, in **Delete fault?** press .

### 11.1.8 Boiler temperature sensor

If **Boiler temp. sensor fault** appears in your display, contact a service technician immediately. Feeder operation will be interrupted.

**ATTENTION** An interruption in feeding operation means that your calves will not receive any feed. This can lead to malnutrition. Malnutrition can cause impaired growth and development, increased susceptibility to illness or even the death of your calves. You must use an alternative method to supply your calves with feed as long as the automatic feeder is out of service.

#### 11.1.9 Calibration

**Calibration fault** will be shown in your display if the liquid or powder feed components and the detergent have not been calibrated. The automatic feeder will not switch to automatic mode until you have calibrated these components. Feeder operation will be interrupted.

**ATTENTION** An interruption in feeding operation means that your calves will not receive any feed. This can lead to malnutrition. Malnutrition can cause impaired growth and development, increased susceptibility to illness or even the death of your calves. You must use an alternative method to supply your calves with feed as long as the automatic feeder is out of service.

#### You correct the fault as follows:

Calibrate the liquid and powder feed components as well as the detergent (see chapter **10.3.1** Manually calibrating liquid and powder components, page **112**).

If this fault persists after calibration, you must contact your service technician immediately.

#### 11.1.10 Station/drain valve

**Station/drain valve fault** will be shown in your display if a feeding box valve or the mixer drain valve is leaking. The automatic feeder loses water during cleaning. Feeder operation will be interrupted.

**ATTENTION** An interruption in feeding operation means that your calves will not receive any feed. This can lead to malnutrition. Malnutrition can cause impaired growth and development, increased susceptibility to illness or even the death of your calves. You must use an alternative method to supply your calves with feed as long as the automatic feeder is out of service.

You must contact a service technician immediately.

#### 11.1.11 Uncontrolled output

You will see **Fault, uncontrolled output** in your display if a fault occurs while dispensing water, milk, milk powder or detergent. Feeder operation will be interrupted.

**ATTENTION** An interruption in feeding operation means that your calves will not receive any feed. This can lead to malnutrition. Malnutrition can cause impaired growth and development, increased susceptibility to illness or even the death of your calves. You must use an alternative method to supply your calves with feed as long as the automatic feeder is out of service.

**You correct the fault as follows:**

Turn off the automatic feeder using the control switch and turn it on again after a few seconds. If this fault message appears again, you must contact your service technician immediately. Notify the technician of the messages shown in the display.

## 11.2 Warnings

In the case of a **warning**, automatic mode will not be interrupted, and feeder operation continues.

### 11.2.1 Identification

**Identification warning** will appear in your display if animal identification is not working.

You must contact a service technician immediately.

### 11.2.2 Mixer emptying

**Mixer emptying warning** appears if the mixer cannot be drained. For example, this can be because the drain is clogged or the feeding pump is no longer running.

**⚠ DANGER** Lethal electric shock. The electrical components of the automatic feeder are live. Before working on components, always turn off the automatic feeder with the control switch and disconnect the power plug.

**You correct the fault as follows:**

1. Check all components carrying feed from the mixer to the mixer drain valve or from the mixer up to the teat for clogs and remove them.

**ATTENTION** The hose which goes from the mixer drain valve to the drain channel must not be lengthened.

2. Check the feeding pump.
3. Check the mixer drain valve.

- 3.1 Confirm **Mixer emptying warning** by choosing .

3.2 Confirm **Feeding pump: start?** by choosing .

The pump is actuated.

3.3 Confirm the **Mixer emptying warning** by choosing .

3.4 Confirm **Mixer drain: open?** by choosing .

The mixer will be pumped empty.

4. Check the rod electrode.

4.1 Visually check the rod electrode for deposits.

5. Fill and drain the mixer.

5.1 Confirm the **Mixer emptying warning** by choosing .

5.2 Confirm **Bo. water start?** by choosing .

The mixer will fill up with water.

5.3 Confirm **Mixer: empty** by choosing .

The mixer will be drained.

If the fault has been fixed, confirm the message **Delete warning?** in the display with .


If this does not correct the fault, you must contact a service technician immediately.

### 11.2.3 Mixer temperature sensor

The **Mixer temp. sensor warning** will be shown in the display if the temperature sensor in the mixer jar is faulty or the temperature of the mixed feed in the mixer jar drops below 0 °C.

You must contact a service technician immediately.

### 11.2.4 Milk empty

The **Milk empty warning** will appear in your display if the milk tank is empty. Your calves will receive mixed feed instead of milk if you have specified this via  > **Device data > Operating modes** in the **Milk empty, MS** menu. Otherwise, feeder operation will be interrupted.

**ATTENTION** There is a risk of malnutrition if feeder operation is interrupted or if the powder container is not filled with milk powder (MP). Malnutrition can cause impaired growth and development, increased susceptibility to illness or even the death of your calves. As long as the

automatic feeder is out of service, you must ensure that the powder container is always filled with milk powder or you must supply your calves feed using an alternative method.

**You correct the fault as follows:**

1. Refill the milk container.
2. Confirm **Warning, milk empty** by choosing .
3. Confirm **Milk: start?** with .
4. Wait until milk comes out of the inlet without any bubbles and the rod electrode continuously indicates that it is covered.
5. Confirm **delete warning?** by choosing .
6. Confirm **Milk topped up?** by choosing .

The stainless steel coil of the heat exchanger is filled again.

### 11.2.5 Unknown transmitters

The **Unknown transmitters warning** appears in your display:

- If a transmitter is detected by the identification unit for which no animal number has been assigned.
- If a transmitter number has been allocated to an animal number, but has still not been registered.

**You correct the fault as follows:**

1. Confirm **Unknown transmitters warning** by choosing .
2. In the **No.** menu, you check the unknown transmitter number.
3. In the **Number** menu, you check how often the unknown transmitter number has been identified.
4. In the **Time** menu, you check when the transmitter was last registered by the identification system.
5. Confirm **delete?** by choosing  if you want to delete the transmitter number.
6. Confirm **Register** by choosing  if you want to allocate the unknown transmitter number to an animal number.

### 11.2.6 Calibration

The **calibration warning** will appear in your display if the last calibration was 120 days ago or if automatic calibration failed. You will see which components you have to calibrate.

You correct the fault as follows:

1. Calibrate all components shown in the display as described in chapter **10.3.1** Manually calibrating liquid and powder components, page **112**.
2. Confirm **delete warning?** by choosing .

**Note:** If you delete the warning without calibrating, the message will appear again the next day.

### 11.2.7 Calibration scale

The **calibration scale warning** will appear in your display if your calibration scale is not working.

You must contact a service technician immediately.

**ATTENTION** There is a risk of malnutrition caused by incorrectly dispensed feed portions. Malnutrition can cause impaired growth and development, increased susceptibility to illness or even the death of your calves. You must ensure that you provide your calves with feed using an alternative method as long as the calibration scale is not working.

### 11.2.8 Circulation pump

The feeder control unit checks whether the circulation pump is working at the start of the day. If it is not working, the circulation pump warning will appear in your display.

You must contact a service technician immediately.

### 11.2.9 Double animal number

**Warning, double animal no.** will appear in your display if the same number was assigned twice during the fully automated registration process.

You change the double animal number as follows:

1. Confirm **Double animal no. warning** with

The **Double** menu in Animal control will appear (see chapter **9.8** Double, page **103**)

2. In **No.**, you can view the full unknown transmitter number of the double calf.



3. In **Animal no.**, change the automatically assigned number.
4. In **Time** and **Date**, check when the double animal number appeared.
5. Once you have changed the animal number, confirm **confirm?** by choosing .

**Note:** Only when you have changed the animal number will your confirmation take effect and the warning be deleted.

### 11.2.10 Machine capacity

**Warning, Machine capacity** will appear when there is no more storage space available for animal numbers or transmitter numbers.

Confirm **Machine capacity** by choosing  in order to view detailed information.

- **only 50 animals poss.** means: No more free animal numbers are available.
- **Transmitter storage full** means: No more storage space available for further transmitter numbers.


**You rectify the warning "only 50 animals poss." as follows:**

1. Cancel one or more animals in the **Transmitter and animal management** (see chapter 7 Transmitter and animal management, page 61) menu.

**ATTENTION** If you cancel an animal's registration it will not receive any feed. This can lead to malnutrition. Malnutrition can cause impaired growth and development, increased susceptibility to illness or even the death of your calves. You must use an alternative method to supply your calves with feed.

2. Confirm **delete warning?** by choosing .

**You rectify the "transmitter storage full" error as follows:**

1. Choose  > **Animal management > Transmitters** to go to the **Edit** submenu.
2. Select the transmitter number to be deleted and confirm **Delete** by choosing .

**Note:** You can only delete transmitter numbers of calves that are not registered (= status: available).

3. Confirm **delete warning?** by choosing .

### 11.2.11 Check SD card

The **Check SD card** warning appears in your display:

- If data is to be saved manually, but no SD card is present.
- If data is to be saved manually, but the SD card is currently write-protected.
- If data is to be saved automatically but the SD card is full.
- If data is to be saved automatically but the SD card is currently write-protected.

## 11.3 Other faults and messages

### 11.3.1 Automatic feeder

#### 11.3.1.1 Starting program

The message **Smart Vxx.xx starting program** appears when the control program of the automatic feeder starts.

Wait until the automatic feeder is ready to operate.

#### 11.3.1.2 Initialization of the feeder

The message **first startup, press enter to start installation** will appear in the display in the following cases:

- When the automatic feeder starts for the first time.
- If the computer card must be replaced due to a hardware defect.

Follow the instructions on the screen. The following steps can be performed in the course of the initialization:

- > Restoration of the last backup (if available).
- > Entry of the language for the user interface.
- > Entry of the current date and time.

### 11.3.2 Hand terminal

#### 11.3.2.1 CAN bus off

If a short circuit or electromagnetic discharges negatively affect the CAN cable, the message **terminal xx.xx CAN bus off** will appear in the display.

You must contact a service technician immediately.

### 11.3.2.2 CAN bus heavy

The following faults trigger the message **terminal Vxx.xx CAN bus heavy** :

- Short circuit.
- Terminating resistor not set.
- Break in the data line.
- CAN cable incorrectly attached.
- No connection for automatic feeder control unit.

You must contact a service technician immediately.

### 11.3.2.3 Waiting

The following faults prevent the hand terminal from initializing:

- The CAN bus address of the terminal is not the same as the one defined in setup of the of the automatic feeder.
- The feeder control unit is not active.

The message **terminal Vxx.xx waiting** appears.

**You eliminate the faults as follows:**

1. Start search mode: Press   when you switch on the feeder and keep this key pressed.
2. If this message appears again, you must contact your service technician immediately.

### 11.3.2.4 Searching

When the hand terminal is in search mode, the message **terminal Vxx.xx searching** will appear.

You must contact a service technician immediately.



## 11.3.3 Bootloader

### 11.3.3.1 Waiting for update

The following faults trigger the message **bootloader Vxx.xx waiting for update**:

- The automatic feeder's control program is not able to run.  
Update the program using an SD card or FlashManagerPlus.

- The bootloader was (accidentally) activated while switching on.

If the bootloader was accidentally started during the start of the automatic feeder by pressing and holding  , you have to restart the automatic feeder.

### 11.3.3.2 Flash programming

The message **bootloader Vxx.xx flash programming** will appear while the program is being updated.

Wait until the update has been completed.

### 11.3.3.3 Starting program

The message **bootloader Vxx.xx starting program** will appear when the bootloader for the automatic feeder starts.

Wait until the program has started.

## 11.4 Service messages

A service message appears in the automatic feeder's display every 4 months. This shows which maintenance (regular service) must be done by your service technician. Compliance with these maintenance intervals is the only way to ensure the long life and reliability of your automatic feeder. Please notify your service technician when the service message appears on the display.

The following regular services (RS) have been defined:

- RS1 must be performed every 4 months.
- RS2 must be performed every 12 months.
- RS3 must be performed every 36 months.

## 12 Disposal

All automatic feeder components, liquids and solids must be disposed of in compliance with the applicable official regulations for proper waste recycling and disposal in your country. If you are not certain which regulations apply to you, ask your service technician and use the Internet or the yellow pages to find out which government agency is responsible for your jurisdiction. Contact the appropriate authorities and find out which regulations apply to you.

Always observe the safety data sheets supplied with some components, liquids and solids.

Before you dispose of the automatic feeder, you must shut it down.

### 12.1 Disposing of residual cleaning agent

Dispose of any residual cleaning agent. See the cleaning agent manufacturer's technical data sheet for more information on the disposal of the cleaning agent.

**⚠ WARNING** Beware of **Chemical burns** from cleaning agents. The cleaning agent can cause chemical burns to your eyes or hands. Always wear goggles and chemical-proof protective gloves when disposing of cleaning agents. Follow all the safety instructions listed in the safety data sheet for the cleaning agent and wear the specified safety equipment.

### 12.2 Disposing of hoses

Dispose of hoses as controlled waste or municipal waste, depending on the material. Read the disposal instructions on the packaging of the hoses, or contact your waste disposal center for instructions.

### 12.3 Disposing of cables

Dispose of cables as controlled waste or municipal waste, depending on the material. Read the disposal instructions on the packaging of the cables, or contact your waste disposal center for instructions.

### 12.4 Disposing of the hand terminal

Remove the cable that connects the hand terminal to the automatic feeder. The hand terminal contains electronic components and must therefore be disposed of as controlled waste. Ask your waste disposal company where you can dispose of electronic waste.

## **12.5 Processor board**

The automatic feeder contains a processor board. You must dispose of this component separately. Ask your waste disposal company where you can dispose of electronic waste.

## **12.6 Disposing of the automatic feeder**

For disposal instructions, contact the appropriate authorities, such as your waste disposal company or local government agency.


See the appendix for an overview of the materials in the automatic feeder.

Dispose of the automatic feeder.

## 13 Appendix

### 13.1 Standard feeding plans

#### Standard Feeding Plan Group A

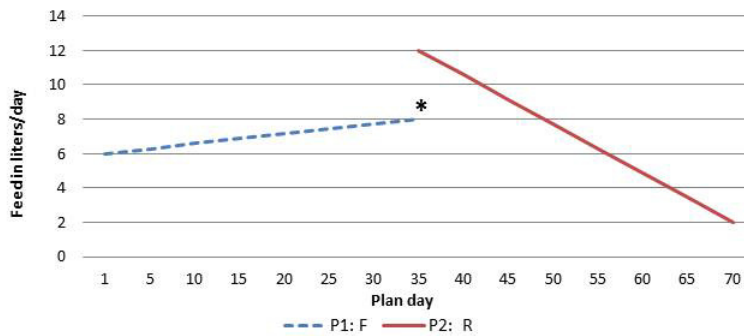

##### Standard Feeding Plan

P1: 35 days from 6 to 8 L **F**  
 P2: 35 days from 12 to 2 L **R**

**Total: 70 days**

##### Standard Concentration Plan

P1: 70 days from 150 to 150 g/L

##### Standard Quantity Limitation Plan


P1: 10 days: 1.5 L (Min) 2.0 L (Max)  
 P2: 25 days: 2.0 L (Min) 2.5 L (Max)  
 P3: 35 days: 2.0 L (Min) 3.0 L (Max)

**F** = 40FIT feeding

**R** = Restricted feeding

\* This quantity is not intended as a maximum quantity but as a reference value to calculate an alarm level.

#### Standard Feeding Plan Group B

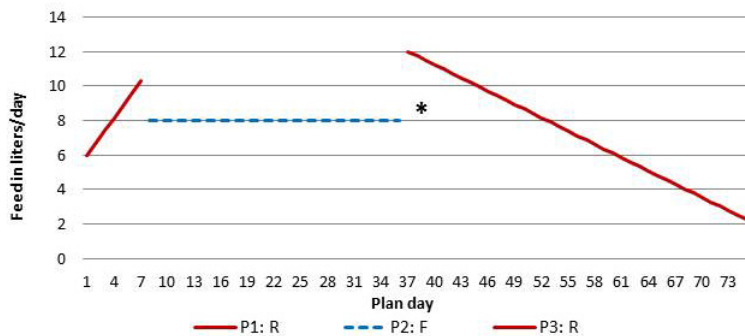

##### Standard Feeding Plan

P1: 7 days from 6 to 10 L **R**  
 P2: 28 days from 8 to 8 L **F**  
 P3: 40 days from 12 to 2 L **R**

**Total: 75 days**

##### Standard Concentration Plan

P1: 75 days from 150 to 150 g/L

##### Standard Quantity Limitation Plan

P1: 10 days: 1.5 L (Min) 2.0 L (Max)  
 P2: 25 days: 2.0 L (Min) 2.5 L (Max)  
 P3: 40 days: 2.0 L (Min) 3.0 L (Max)

**F** = 40FIT feeding

**R** = Restricted feeding

\* This quantity is not intended as a maximum quantity but as a reference value to calculate an alarm level.

## Standard Feeding Plan Group C



**Standard Feeding Plan**

- P1: 2 days from 5.0 to 5.0 L
- P2: 6 days from 5.0 to 6.0 L
- P3: 21 days from 6.0 to 6.0 L
- P4: 35 days from 6.0 to 2.5 L

**Total: 64 days = 316 L**

**Standard Concentration Plan**


- P1: 64 days from 150 to 150 g/L

**Total: 64 days = 47.4 kg MP**

**Standard Quantity Limitation Plan**

- P1: 14 days: 1.5 L (Min) 2.0 L (Max)
- P2: 14 days: 2.0 L (Min) 2.5 L (Max)
- P3: 36 days: 2.5 L (Min) 3.0 L (Max)

## Standard Feeding Plan Group D

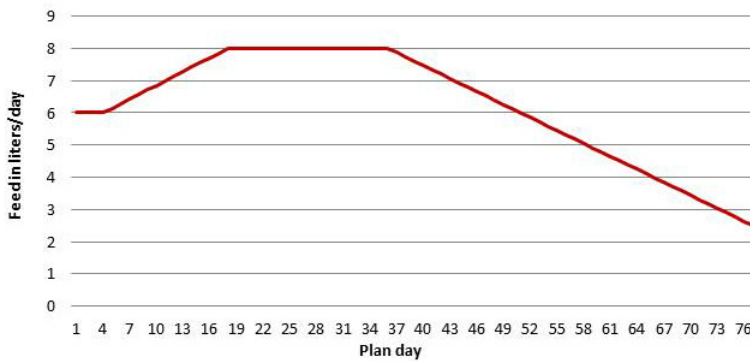

**Standard Feeding Plan**

- P1: 3 days from 6.0 to 6.0 L
- P2: 14 days from 6.0 to 8.0 L
- P3: 18 days from 8.0 to 8.0 L
- P4: 42 days from 8.0 to 2.5 L

**Total: 77 days = 478 L**

**Standard Concentration Plan**

- P1: 77 days from 150 to 150 g/L


**Total: 77 days = 71.7 kg MP**

**Standard Quantity Limitation Plan**

- P1: 14 days: 1.5 L (Min) 2.0 L (Max)
- P2: 14 days: 2.0 L (Min) 2.5 L (Max)
- P3: 49 days: 2.5 L (Min) 3.0 L (Max)



## 13.2 Basic principle of interval feeding

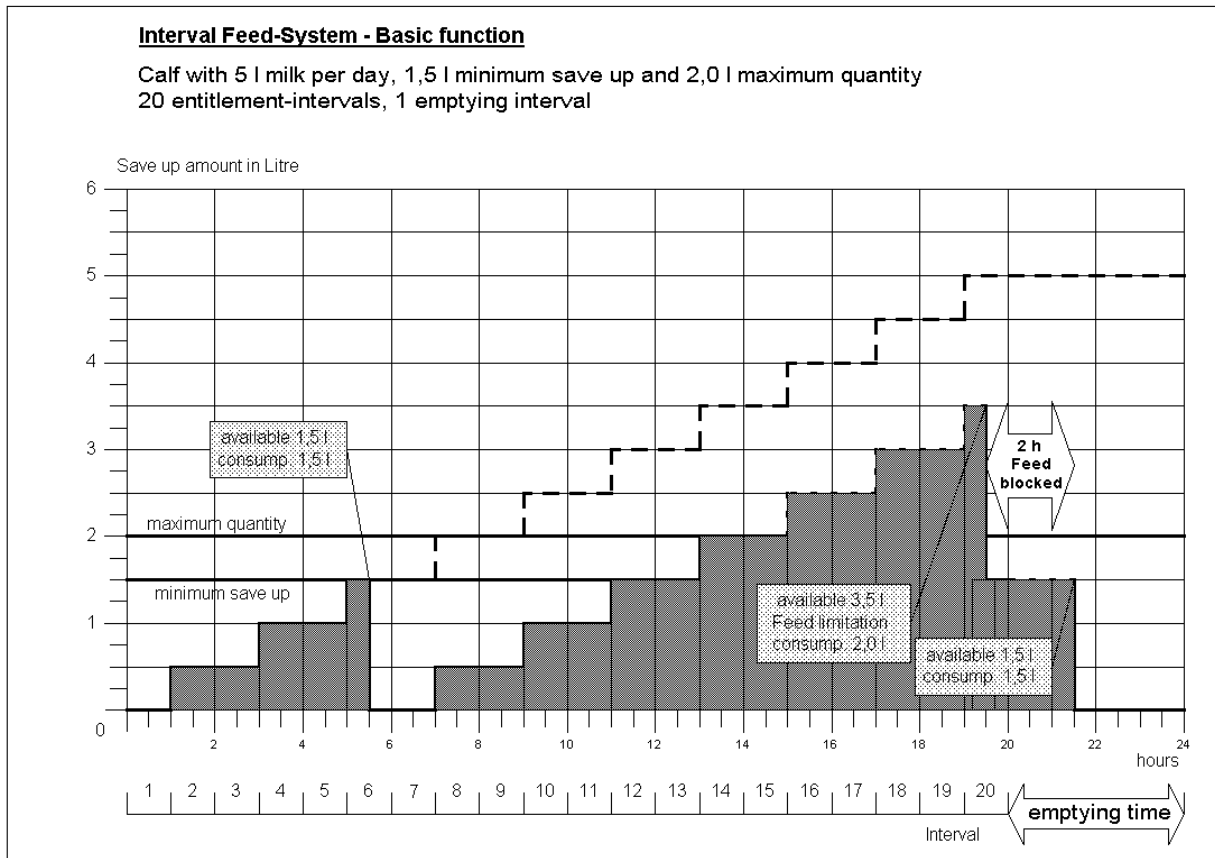

## 13.3 Milk powder (MP) conversion table

Required concentration (in g/l of feed)	Setting in concentration plan (in g/l of water)	Dry matter (in %/l of feed)
100	111	10.0
105	117	10.5
110	124	11.0
115	130	11.5
120	136	12.0
125	143	12.5
130	149	13.0
140	163	14.0
150	176	15.0
160	190	16.0
170	205	17.0
180	220	18.0
190	235	19.0
200	250	20.0

\*) Guide value

### 13.4 Automatic feeder material list

The materials used in the automatic feeder include:

- Brass, Enzidor®
- Silicon carbide
- Carbon
- V2A, V4A
- Plastics: PET, TPE, silicone, PVC, NBR, ABS, PUR
- Viton
- Vulcanized fiber, graphitized
- Rubber
- Bronze

### 13.5 Care and maintenance schedule / routine work

Regular maintenance work and functional checks on the automatic feeder and its accessories ensure that the required hygiene standards are maintained. Maintenance includes, for example, calibration, cleaning to maintain hygiene beyond the chapter on cleaning as well as the scheduled replacement of wearing parts. Visual and functional testing of components as well as replacement of simple wearing parts, such as the intake hose, can be carried out by the owner/operator.

**Note:** Repair work and the replacement of wearing parts on or in the automatic feeder, with the exception of the suction hoses and teats, may **only** be carried out by a service technician.

### 13.5.1 Important safety information

**⚠ DANGER** Danger of death by electric shock. The electrical components of the automatic feeder are live. Turning off using the control switch does not disconnect the voltage to the unit. Always turn off the automatic feeder with the control switch and disconnect the power plug before carrying out any work on the automatic feeder or any of its components.

**⚠ WARNING** There is a risk of injury due to automatic start-up. The automatic feeder automatically prepares a feed portion when it detects a calf entitled to feed. The stirring blades in the mixer jar start automatically and can crush or cut off your hand or fingers. Always turn off the automatic feeder with the control switch and disconnect the power plug before carrying out any work on the mixer. Only clean the powder discharge opening with the scraper supplied.

**⚠ WARNING** There is a risk of injury due to automatic start-up. Do not reach into the hazardous area of the powder mixing unit. The powder mixing unit can start up automatically at any time, crushing or cutting off your fingers. Turn off the automatic feeder with the control switch and disconnect the power plug before reaching into the powder container.

**⚠ WARNING** Beware of Chemical burns from cleaning agents. The cleaning agent can cause chemical burns to your eyes or hands. Always wear goggles and protective gloves when using cleaning agents. Follow all the safety instructions listed in the safety data sheet for the cleaning agent and wear the specified safety equipment.

**⚠ ATTENTION** An interruption or fault in the operation of the automatic feeder means that your calves will not receive any feed. This can lead to malnutrition. Malnutrition can cause impaired growth and development, increased susceptibility to illness or even the death of your calves. You must provide your calves with feed using an alternative method if the automatic feeder is not working properly or is out of service.

### 13.5.2 Maintenance intervals and activities

**Note:** If you detect any faults or damage to the automatic feeder between the maintenance intervals recommended below, you must make sure they are rectified immediately by a service technician as required.

	Care/maintenance interval			
	Daily	Weekly	4 months	12 months
<b>Inspection of the calves</b>	✓			
<b>Automatic feeder</b>				
<ul style="list-style-type: none"> <li>Visually inspect for damage.</li> </ul>	✓			
<b>Intensive mixer</b>				
<ul style="list-style-type: none"> <li>Visually check correct functioning of electrodes, temperature sensors and mixer blades.</li> </ul>	✓			
<ul style="list-style-type: none"> <li>Visually inspect mixer for leaks.</li> </ul>	✓			
<ul style="list-style-type: none"> <li>Visually check effectiveness of cleaning cycles.</li> </ul>	✓			
<ul style="list-style-type: none"> <li>Visually inspect mixer screen for clogging and have it cleaned by a service technician, if necessary.</li> </ul>	✓			
<ul style="list-style-type: none"> <li>Check calibration of detergent.</li> </ul>			✓	
<b>Safety devices</b>				
<ul style="list-style-type: none"> <li>Check the completeness and legibility of the safety signs (warning signs).</li> </ul>	✓			
<ul style="list-style-type: none"> <li>Check the proper function of the scraper to clean the powder discharge opening.</li> </ul>	✓			
<ul style="list-style-type: none"> <li>Check functioning of safety grid for powder hopper attachment.</li> </ul>	✓			
<b>Suction hose and teat</b>				
<ul style="list-style-type: none"> <li>Visually check the suction hose and teat for damage and wear and clean them if necessary.</li> </ul>	✓			
<ul style="list-style-type: none"> <li>Replace all milk hoses from mixer to feeding station.</li> </ul>			✓	
<ul style="list-style-type: none"> <li>Replace teats.</li> </ul>			✓	
<b>Power and water supply</b>				
<ul style="list-style-type: none"> <li>Visually inspect for damage.</li> </ul>	✓			
<ul style="list-style-type: none"> <li>Calibrate the water.</li> </ul>			✓	

	Care/maintenance interval			
	Daily	Weekly	4 months	12 months
<p><b>Shutoff valve/feeding pump</b></p> <ul style="list-style-type: none"> <li>Have the shutoff valve and feeding pump cleaned by a service technician and have valve membranes with support rings replaced, if necessary.</li> </ul>				✓
<p><b>Powder mixing unit</b></p> <ul style="list-style-type: none"> <li>Visually inspect for damage.</li> <li>Check powder discharge opening for foreign bodies.</li> <li>Calibrate MP, at least for every new MP delivery.</li> <li>Empty powder container and check powder conveyor for proper functioning.</li> <li>Perform basic cleaning.</li> </ul>	✓		✓ ✓	✓ ✓
<p><b>Check detergent pump</b></p> <ul style="list-style-type: none"> <li>Check pressure of hose pump and hoses, and visually inspect intake side of pump for damage and wear.</li> <li>Visually check the detergent lance as well as the sieve at the bottom for damages, clogging, incrustation and wearing.</li> <li>Check whether the lid of the detergent container, the hose connection of the detergent lance and the hose connections of the pump have been closed correctly.</li> <li>Perform calibration.</li> <li>Let a service technician replace the pump hose..</li> </ul>	✓ ✓ ✓		✓	✓
<p><b>Detergent tank</b></p> <ul style="list-style-type: none"> <li>Check whether detergent tank is filled, top up if necessary.</li> </ul>	✓			
<p><b>Milk container</b></p> <ul style="list-style-type: none"> <li>Have the milk suction hose, from the milk tank to the automatic feeder, replaced by a service technician.</li> </ul>			✓	
<p><b>Milk supply and heat exchanger</b></p> <ul style="list-style-type: none"> <li>Check milk connection and hose from the milk tank to the automatic feeder for damage and leaks and have them replaced by a service technician, if necessary.</li> <li>Check effectiveness of cleaning cycles (sponge cleaning).</li> <li>Carry out milk and water calibration.</li> </ul>	✓	✓	✓	



**A**

Abbreviations 15  
Ad lib mode 41  
Alarm levels 88  
Alarms 35  
Animal control 91  
Animal list 91  
Arrows 34  
Assigning animal numbers 63  
Auto LED 29  
Automatic mode 30

**C**

CalfCloud 35, 42  
Calibration  
    Calibrating using the calibration scale 114  
    Manually calibrating 112  
Cancel 68  
    Group 69  
Care and maintenance schedule 138  
Cleaning 45  
    Automatic mixer cleaning 48  
    Basic settings 47  
    Cleaning cycle 54  
    Cleaning the heat exchanger 51  
    Cleaning the mixer 48  
    Cleaning the mixer jar manually 50  
    Cleaning the powder discharge opening 56  
    Manually starting mixer cleaning 50  
    Rinsing the hose 56  
Cleaning agents 46  
Cleaning methods 45  
Cleaning the detergent lance 58  
Cleaning the detergent pump with detergent lance 58  
Cloud 42

**D**

Deleting the transmitter number 65  
Detergent lance 58  
Disposal 133  
Draining 74

**E**

Extra portions 76

**F**

Faults 119  
    Boiler temperature sensor 123  
    Calibration 124  
    Heat exchanger not filled 121  
    Heating 119, 123

Milk/circ. valve 123  
Mixer emptying 122  
Station/drain valve 124  
Temperature too high 120  
Uncontrolled output 124  
Water shortage 121

Feeding plan 69  
Feeding plans 80  
Filling the milk powder container 71  
Filling the milk tank 71

**H**

Hand terminal 30  
Hazard word  
    Caution 21  
    Danger 21  
    Warning 21  
Hazards  
    Chemical burns 18  
    Electrical breakdown 18  
    Excessive strain 19  
    Poisoning 18  
    Short circuit 18  
Heat exchanger 14  
Hygiene 27

**I**

Dimensions of the automatic feeder 13  
Important safety information 17  
Instruction notices 23  
Intended use 17  
Interval feeding program 137

**K**

Keypad 32

**M**

Maintenance 138  
Managing transmitters 61  
Manually entering transmitter numbers 62  
Manufacturer's contact details 16  
Marking 35  
Material damage 19  
Material list 138  
Milk connector 14  
Milk powder container 14

**N**

Name plate 10  
Navigation 36

**O**

Obligations 19  
Offline mode 29  
Operating 29  
Operating modes 41, 72  
    Ad lib mode 41  
    Rationed mode 41

**P**

Plan tendency 35  
Prohibition notices 22

**R**

Rationed mode 41  
Reading transmitter numbers 62  
Register 66  
Registering  
    Automatic 67  
    automatic 67  
    Manual 66  
Requirements 17  
Residual risk 17  
Routine tasks 43

**S**

Safety devices  
    Safety grid for powder hopper attachment 25  
    Safety temperature limiter 25  
    Scraper 26  
Safety labels 22  
Searching for animals 106  
Service messages 132  
Sleep mode 36  
Standard feeding plans 135  
Symbols 34

**T**

Technical data 13  
Transferring 70  
Transmitter 61, 67  
    Creating transmitter number 62  
    Editing transmitter or animal numbers 64  
    Retrieving transmitter statistics 65

**W**

Warning signs 23  
Warnings  
    Calibration 128  
    Calibration scale 128  
    Check SD card 129

Circulation pump 128  
Double animal number 128  
Identification 125  
Machine capacity 129  
Milk empty 126  
Mixer emptying 125  
Mixer temperature sensor 126  
Unknown transmitters 127  
Water connection 13  
Weight 13



# EC declaration of conformity

according to the EU Machinery Directive 2006/42/EG, Annex II, 1.A

## Manufacturer:

Förster-Technik GmbH,  
Gerwigstr. 25  
78234 Engen

## Person residing within the Community authorised to compile the relevant technical documentation:

Müller Barbara  
Förster-Technik GmbH,  
Gerwigstr. 25  
78234 Engen

## Description and identification of the machinery:

Make: Automatic feeder

Type: TAK5- VS1-\*, TAP5-VS1-\*, VDW5-VS1-\*, TAK5-CS1-\*, TAP5-CS1-\*, VDW5-CS1-\*, TAK5- VH2-\*, TAP5-VH2-\*, VDW5-VH2-\*, TAK5-CH2-\*, TAP5-CH2-\*, VDW5-CH2-\*, TAK1-KU2-\*, TAK5-KR3-\*, TAP1-ZM2-\*, TAP2-ZM2-\*, VDW1-WA2-\*, TAP7-AH2-\*

Function: Automatic preparation, heating, and dosing of liquid feeds for young animal feeding

## It is expressly declared that the machinery fulfils all relevant provisions of the following EU Directives:

2006/42/EG Directive 2006/42/EG of the European Parliament and of the Council of 17 May 2006 on machinery, and amending Directive 95/16/EG (recast)

2014/30/EU Directive 2014/30/EU of the European Parliament and of the Council of 26 February 2014 on the harmonisation of the laws of the Member States relating to electromagnetic compatibility (recast)

97/23/EG (Pressure equipment) Directive 97/23/EG on the approximation of the laws of the Member States concerning pressure equipment

## Reference to the harmonised standards used, as referred to in Article 7(2):

EN ISO 12100:2010-11 Safety of machinery - Electrical equipment of machines - Part 1: General requirements (ISO 12100:2010)

EN 60335-1:2012/A11:2014 Household and similar electrical appliances - Safety - Part 1: General requirements IEC 60335-1:2010 (modified)

EN 61000-6-2:2005/AC:2005 Electromagnetic compatibility (EMC) - Part 6-2: Generic standards - Immunity for industrial environments

EN 61000-6-3:2007/A1:2011/AC:2012 Electromagnetic compatibility (EMC) - Part 6-3: Generic standards - Emission standard for residential, commercial and light-industrial environments

Engen, 20.04.2016



Place, date

Signature  
Markus Förster  
CEO