

FÖRSTER TECHNIK	Mounting instructions	Cleaning kit Combi
	Re:	SA4, SM4, CE1
<b>M24.1e</b>	Date	April 15, 2005
Page 1 of 4	Retrofitting	




## Retrofitting the cleaning kit

- Replace the valve unit (1) at the suction side of the milk pump.
- 2. Mount the female connectors on the male connectors of the milk (2) and the cleaning valve (3).





- 5. Remove the blind plug at the partition wall and push the transparent hose through the opening (6).
- 6. Remove the male and female connectors from the valve unit. Unscrew the screws (7) with which the valve unit is fastened to the chassis of the automatic feeder.

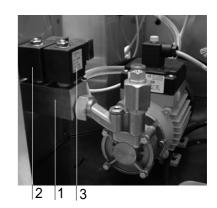






7


FÖRSTER	Mounting instructions	Cleaning kit Combi	0
	Re:	SA4, SM4, CE1	
(M24.1e)	Date	April 15, 2005	
Page 2 of 4	Retrofitting		




7. Remove the valve unit. Remove the covering(8) of the joining piece.

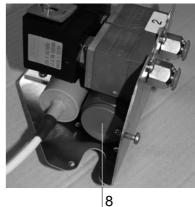


8. Mount the mixer draining valve (9) on the joining piece and tighten the screws to fasten the bottom side to the retaining plate.

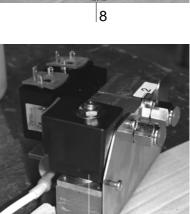

 Insert the valve unit and connect the female connectors to the male connectors of the valves.

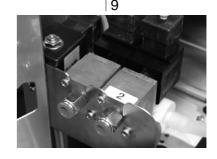

- Mount the male connector on the training pump.
- Connect the transparent hose to the nozzle located in the middle (10) of the plastic Tpiece (11). Slip the long "milky" hose on the

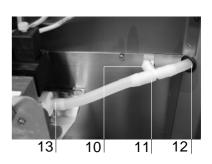

FÖRSTER TECHNIK® M24.1e	Mounting instructions	Cleaning kit Combi
	Re:	SA4, SM4, CE1
	Date	April 15, 2005
Page 3 of 4	Retrofitting	



right and the short one on the left nozzle. Push the long hose through the lateral opening of the chassis (6) and mount it on the nozzle of the mixer. Connect the short hose to the training pump (7).

12. Hammer the sheet (14) out of the partition wall.



14

13. Fix the detergent pump by means of the M4x8 machine screws. Remove the blind plug (15) down right of the pump.



15

- 14. Push the detergent hose that is secured to the right hose nozzle of the pump through the opening.
- 15. Cut the left hose diagonally and push it through the lid of the detergent container until it touches the container ground. To prevent

FÖRSTER TECHNIK® M24.1e	Mounting instructions	Cleaning kit Combi
	Re:	SA4, SM4, CE1
	Date	April 15, 2005
Page 4 of 4	Retrofitting	



the hose from slipping out of the container, install a cable tie underneath the lid (do not tighten => disconnect!).

16. Remove the right blind plug (16) at the base of the automatic feeder. Push the medium pump hose (draining hose) into this opening.



16

- 17. Connect the mixer draining valve, the cleaning valve as well as the detergent pump to the control of the automatic feeder (see wiring diagram).
- 18. Remove the blind plug (17) at the right of the water/milk outlet and replace it by the grommet. Push the detergent hose through it.



Carefully lay the detergent hose inside the automatic feeder.

- 19. Fix the single ear clamp (18) and make sure that it is flush with the outlet.
- 20. Cut the detergent hose diagonally in order to prevent drop formation.
- 21. Push the detergent hose into the single ear clamp.



17