
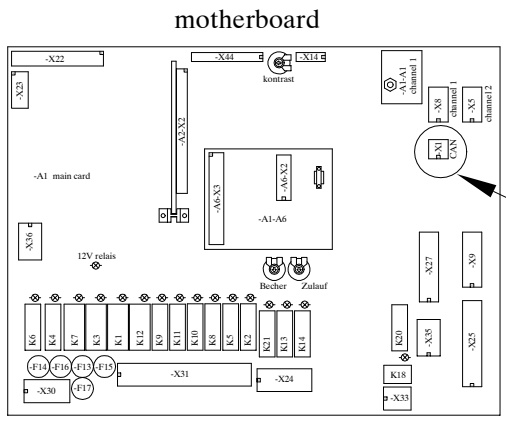


② - plug-in plug
- connect wire
and R120 ohm

①

- remove blind plug
- mount screwed cable gland
- insert line of half-body scales 1/2
- mount shield according to diagram (cut off standard shield connection)

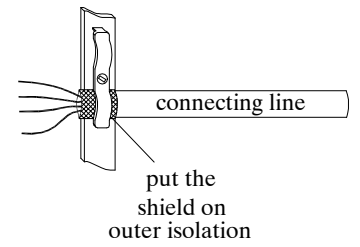

connection
half-body scales
1/2

flange for external connections

				Förster Technik GmbH		Zeichnungs-Nr. plan413a		Blatt 1	
						gezeichnet		Datum 26.06.00	
Änderung				Name Hensler		von 1		Blätter	
Ind.	Datum	Name	connection half-body scales 1/2 to SA2000 with double priority control						