

Original Service Manual

Automatic calf feeder

Type VARIO smart 2.0 Powder

TAP5-VS2-50

Program version 2.00 and higher



Table of contents

| | |
|---|-----------|
| 1. Introduction | 7 |
| 1.1 Models | 7 |
| 1.2 Overview of the automatic feeder | 8 |
| 1.2.1 Front and right side view of automatic feeder | 8 |
| 1.2.2 Rear view of automatic feeder | 9 |
| 1.2.3 Left side view of the automatic feeder | 9 |
| 1.2.4 Boiler with heating circuit | 11 |
| 1.3 Technical data | 11 |
| 1.3.1 Electrical connection | 11 |
| 1.3.2 Dimensions | 12 |
| 1.3.3 Weight | 12 |
| 1.3.4 Water connection | 12 |
| 1.3.5 Boiler | 12 |
| 1.3.6 Milk powder container | 13 |
| 1.3.7 Number of feeding stations and animals | 13 |
| 1.4 Disposal | 13 |
| 1.5 Symbols | 13 |
| 1.6 Abbreviations | 13 |
| 2. Important safety instructions | 15 |
| 2.1 Intended use | 15 |
| 2.2 Required qualifications | 15 |
| 2.3 Residual risks | 15 |
| 2.4 How am I warned of hazards? | 17 |
| 2.4.1 What are the components of a hazard description? | 17 |
| 2.4.2 Potentially fatal hazards or health hazards | 17 |
| 2.4.3 Material damage | 18 |
| 2.4.4 Safety signs | 18 |
| 2.5 Safety devices | 20 |
| 2.6 Structural alterations | 21 |
| 3. Commissioning | 22 |
| 3.1 Setting up the feeder | 22 |
| 3.2 Electrical connection provided by the customer | 23 |
| 3.3 Water connection | 24 |
| 3.4 Installing feeding stations | 24 |
| 3.4.1 Installing feeding station | 24 |
| 3.4.2 Installing stand partitions | 25 |
| 3.5 Attaching the pushbutton/remote control for manual feed start | 25 |
| 3.6 Connecting the antennas | 26 |
| 3.6.1 Installing the antennas | 26 |
| 3.6.2 Squelch values and identification ranges | 27 |
| 3.6.3 Connecting antenna cables | 27 |

| | | |
|-----------|---|-----------|
| 3.6.4 | Connecting the Ethernet cable | 28 |
| 3.7 | Installing the safety grid for the powder hopper attachment | 29 |
| 3.8 | Switching on the vapor barrier for powder discharge | 30 |
| 3.9 | Filling the powder container | 30 |
| 3.10 | Installing external cleaning agent supply pipework (optional) | 31 |
| 3.11 | Switching on the automatic feeder | 33 |
| 3.12 | Setting the date/time | 33 |
| 3.13 | Filling the boiler | 33 |
| 3.14 | New installation | 33 |
| 3.15 | Setup settings | 34 |
| 3.16 | Adjusting the calibration scales | 34 |
| 3.17 | Setting offline mode | 34 |
| 3.18 | Setting portion | 34 |
| 3.19 | Drain time station parameters | 35 |
| 3.20 | Function keys | 35 |
| 3.21 | Animal list | 35 |
| 3.22 | Checking components | 35 |
| 3.23 | Calibrating feed components | 35 |
| 3.24 | Checking or setting cleaning settings | 35 |
| 3.25 | Cleaning | 36 |
| 3.26 | Reading in and creating transmitters | 36 |
| 3.27 | Registering animals | 36 |
| 3.28 | Entering correction days | 36 |
| 4. | Programming and control | 37 |
| 4.1 | Hand terminal | 37 |
| 4.1.1 | The keypad | 38 |
| 4.1.2 | The Auto LED | 40 |
| 4.2 | Offline mode | 40 |
| 4.3 | Automatic mode | 40 |
| 4.4 | Menu structure | 40 |
| 4.4.1 | Symbols | 41 |
| 4.5 | Menus | 43 |
| 4.5.1 | Animal control | 43 |
| 4.5.2 | Main menu | 44 |
| 4.5.3 | Manual functions | 44 |
| 4.6 | Device data | 44 |
| 4.6.1 | Setting operating modes | 44 |
| 4.6.2 | Checking and setting time/date | 46 |
| 4.6.3 | Setting portion | 46 |
| 4.6.4 | Drain time station parameters | 49 |
| 4.6.5 | Function keys | 50 |
| 4.6.6 | Animal list | 50 |
| 4.6.7 | Backing up and restoring data | 52 |
| 4.6.8 | Cloud | 54 |

| | | |
|-----------|--|-----------|
| 4.6.9 | New installation | 55 |
| 4.7 | Software updates | 56 |
| 4.7.1 | Software update via SD card | 56 |
| 4.7.2 | Software update via cloud | 57 |
| 4.7.3 | Software update via internal (automatic) | 58 |
| 4.8 | Reinstallation | 58 |
| 5. | Setup | 59 |
| 5.1 | Overview of the Setup menus | 60 |
| 5.2 | Language | 62 |
| 5.3 | Time/date | 62 |
| 5.4 | Machine | 62 |
| 5.4.1 | Feeder type | 62 |
| 5.4.2 | Automatic feeder number | 62 |
| 5.4.3 | Automatic feeder address | 63 |
| 5.4.4 | Feeder operating modes | 63 |
| 5.4.5 | Base size | 63 |
| 5.4.6 | Heating system | 64 |
| 5.4.7 | Boiler valve | 64 |
| 5.5 | Equipment | 64 |
| 5.5.1 | Mixer drain | 64 |
| 5.5.2 | Additive dispenser | 64 |
| 5.5.3 | Flushing agent 1 | 64 |
| 5.5.4 | Flushing agent 2 | 65 |
| 5.5.5 | Flushing agent sensor | 65 |
| 5.5.6 | Powder sensor | 65 |
| 5.5.7 | Circulation valve | 65 |
| 5.5.8 | Gully valve 2 | 65 |
| 5.5.9 | Air valve | 66 |
| 5.5.10 | Mixer temperature sensor | 66 |
| 5.5.11 | Water meter | 66 |
| 5.5.12 | Supply and point electrode | 66 |
| 5.6 | Identification | 66 |
| 5.7 | ID chip | 67 |
| 5.8 | Calibration scales | 67 |
| 5.9 | Stations | 68 |
| 5.9.1 | Feed | 68 |
| 5.10 | Terminal | 68 |
| 5.10.1 | Address | 68 |
| 5.10.2 | Contrast | 68 |
| 5.10.3 | Sleep mode | 68 |
| 5.11 | Communication | 69 |
| 5.11.1 | Printer | 69 |
| 5.11.2 | Network configuration | 69 |
| 5.11.3 | Cloud | 69 |

| | |
|--|-----------|
| 5.11.4 Gateway | 70 |
| 5.11.5 MultiReader | 70 |
| 5.11.6 Restart | 70 |
| 6. Calibration | 71 |
| 6.1 Calibrating without calibration scales | 71 |
| 6.2 Calibrating with calibration scales | 72 |
| 7. Transmitter and animal management | 75 |
| 7.1 Managing the transmitters | 75 |
| 7.1.1 Basics | 75 |
| 7.1.2 Creating transmitter numbers | 75 |
| 7.1.3 Reading transmitter numbers | 76 |
| 7.1.4 Manually entering transmitter numbers | 76 |
| 7.1.5 Assigning animal numbers | 76 |
| 7.1.6 Editing transmitters or animal numbers | 77 |
| 7.1.7 Deleting the transmitter number when canceling an animal | 78 |
| 7.1.8 Calling up the transmitter statistics | 79 |
| 7.2 Registering animals | 79 |
| 7.2.1 Manual registration of animals | 79 |
| 7.2.2 Automatically registering animals | 80 |
| 7.3 Canceling animals or animal groups | 81 |
| 7.3.1 Canceling individual animals | 81 |
| 7.3.2 Canceling a group | 82 |
| 7.3.3 Canceling weaned animals | 82 |
| 7.4 Changing the registration of animals | 82 |
| 8. Shutdown and recommissioning | 83 |
| 8.1 Shutdown | 83 |
| 8.1.1 Temporary shutdown | 83 |
| 8.1.2 Permanent shutdown | 86 |
| 8.2 Recommissioning | 87 |
| 8.2.1 Recommissioning after temporary shutdown | 87 |
| 8.2.2 Recommissioning after processor card replacement | 88 |
| 9. Faults and warnings | 90 |
| 9.1 Faults | 90 |
| 9.1.1 Calibration scales | 90 |
| 9.1.2 Heating up | 90 |
| 9.1.3 Temperature too high | 91 |
| 9.1.4 Boiler not filled | 91 |
| 9.1.5 Shortage of water | 91 |
| 9.1.6 Water meter | 93 |
| 9.1.7 Emptying the mixer | 93 |
| 9.1.8 Heating system | 94 |
| 9.1.9 Boiler temperature sensor | 95 |

| | | |
|------------|--|------------|
| 9.1.10 | Calibration | 96 |
| 9.1.11 | ID chip | 96 |
| 9.1.12 | Station/drain valve | 97 |
| 9.1.13 | Uncontrolled output | 98 |
| 9.2 | Warnings | 99 |
| 9.2.1 | Emptying the mixer | 99 |
| 9.2.2 | Mixer temperature sensor | 100 |
| 9.2.3 | Identification | 100 |
| 9.2.4 | Incorrect ID | 100 |
| 9.2.5 | Address used twice | 100 |
| 9.2.6 | Unknown transmitter | 101 |
| 9.2.7 | Calibration | 101 |
| 9.2.8 | Fill up the MP container | 102 |
| 9.2.9 | Calibration scales | 102 |
| 9.2.10 | ID chip | 102 |
| 9.2.11 | Duplicate animal number | 103 |
| 9.2.12 | Machine capacity | 104 |
| 9.2.13 | Check SD card | 104 |
| 9.3 | Other faults and messages | 105 |
| 9.3.1 | Automatic feeder | 105 |
| 9.3.2 | Hand terminal | 105 |
| 9.3.3 | Boot loader | 106 |
| 9.4 | Service messages | 107 |
| 9.4.1 | Service work | 107 |
| 9.5 | Diagnosis | 108 |
| 9.5.1 | Checking valves/motors | 108 |
| 9.5.2 | Checking the heating | 109 |
| 9.5.3 | Checking sensors | 110 |
| 9.5.4 | Calibration scales | 111 |
| 9.5.5 | Checking stations | 111 |
| 9.5.6 | Monitoring | 111 |
| 9.5.7 | Version | 113 |
| 9.5.8 | Setup | 113 |
| 9.5.9 | Software | 113 |
| 9.5.10 | Remote maintenance | 113 |
| 10. | Appendix | 114 |
| 10.1 | Checklist for commissioning and recommissioning | 114 |
| 10.2 | Materials list | 119 |
| 10.3 | Shutdown checklist | 120 |
| 10.4 | Standard feeding plans | 121 |
| 10.5 | CAN bus addresses | 123 |
| 10.6 | Checking components for compliance with national regulations | 125 |
| | Index | 126 |

1. Introduction

This operating manual enables you to operate this automatic feeder machine safely as intended.

- Have the end user provide you with the operating manual for the automatic feeder, the operating manuals of all additional equipment to be connected and the safety data sheets for cleaning agents.
- Carefully read all operating manuals and safety data sheets before starting up the automatic feeder for the first time or restarting it.
- Observe all of the warnings and safety instructions in these operating manuals and safety data sheets at all times.

1.1 Models


The following automatic feeder versions are available:

- **Powder** - for the use of milk substitute (MP).
- **Combi** - for the use of milk substitute and fresh milk.
- **Fresh milk** - for the use of fresh milk.

All automatic feeder versions can be equipped with a variety of pieces of peripheral equipment and options.


1.2 Overview of the automatic feeder

1.2.1 Front and right side view of automatic feeder

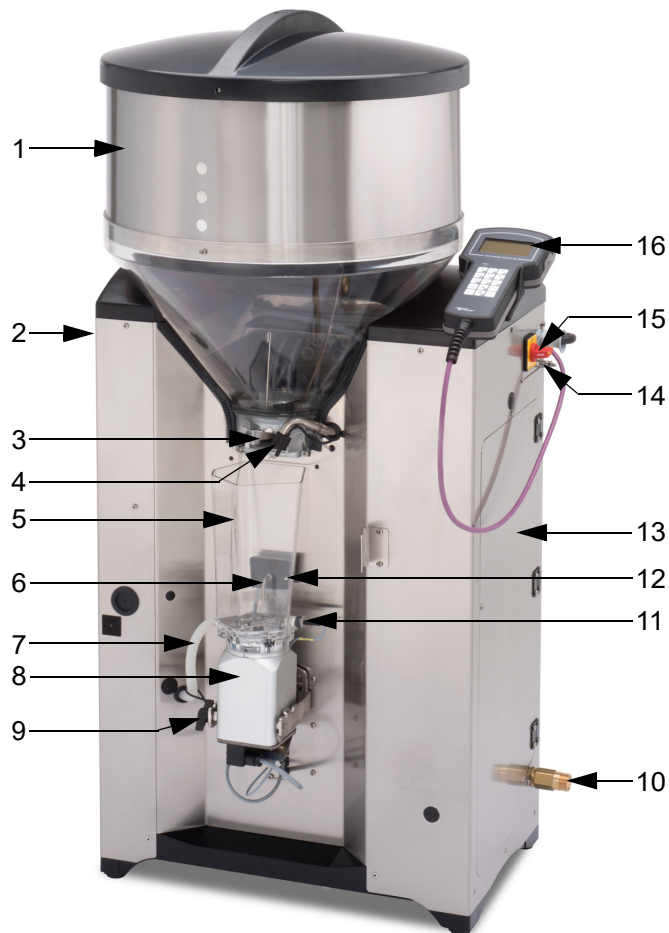

- 1 Milk powder container
- 2 Outlet valve (not shown here)
- 3 Milk powder discharge
- 4 Water supply
- 5 Mixer beaker
- 6 Rod electrode
- 7 Hose connection from mixer to the feeding pump
- 8 Mixer motor
- 9 Wing nut for transport restraint
- 10 Water connection
- 11 Temperature sensor
- 12 Point electrode for 500 ml portion
- 13 Right door
- 14 Ground connection screw
- 15 Main switch
- 16 Hand terminal

1.2.2 Rear view of automatic feeder

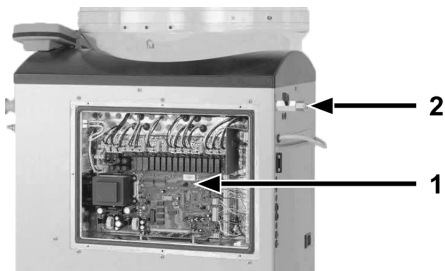


- 1 Processor and power circuit board
- 2 Outlet valve for hose cleaning

1.2.3 Left side view of the automatic feeder

The **Name plate** is located above the left side door on the outside of the automatic feeder. It contains information about the manufacturer, type and number of the automatic feeder, information about connecting the feeder to the power supply as well as its certification. An example of a name plate is shown below.




- 1 Name and address of the manufacturer
- 2 Type and number of the automatic feeder
- 3 Information on the connection to the power supply
- 4 Certification of the automatic feeder

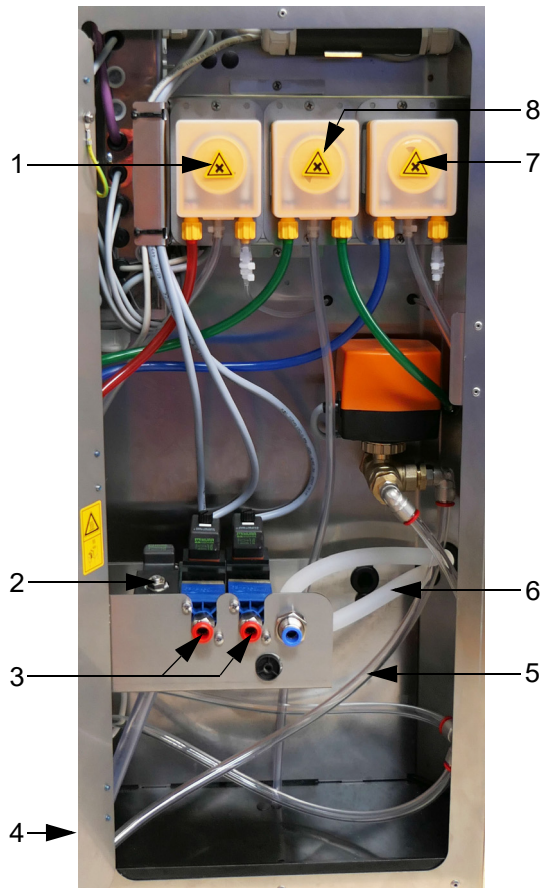Rear left side door

- 1 Cleaning agent dosing pump 2 (acid)
- 2 Mixer drain valve
- 3 Feeding box valves (optional)
- 4 Drain hose (not shown here)
- 5 Drain hose to gully 2
- 6 Hose connection from mixer to the feeding pump
- 7 Cleaning agent dosing pump 1 (alkaline)
- 8 Dosing device for liquid additives (optional)

1.2.4 Boiler with heating circuit

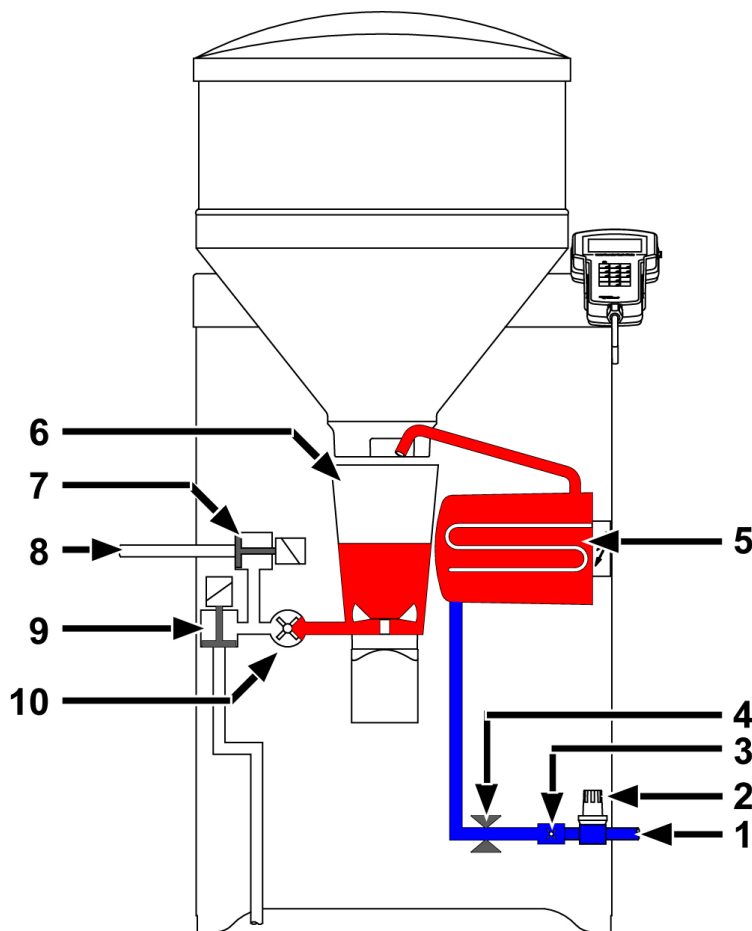


- 1 Hose connection for water pipe
- 2 Pressure-reducing valve
- 3 Water meter
- 4 Boiler water valve
- 5 Boiler
- 6 Mixer
- 7 Valve unit (optional)
- 8 Hose connection between valve unit and teat
- 9 Mixer drain valve
- 10 Feeding pump

1.3 Technical data

1.3.1 Electrical connection

Note: The specifications for the electrical connection to your automatic feeder are on its name plate above the left side door on the outside (see 1.2.3 "Left side view of the automatic feeder" - 9).

1.3.2 Dimensions

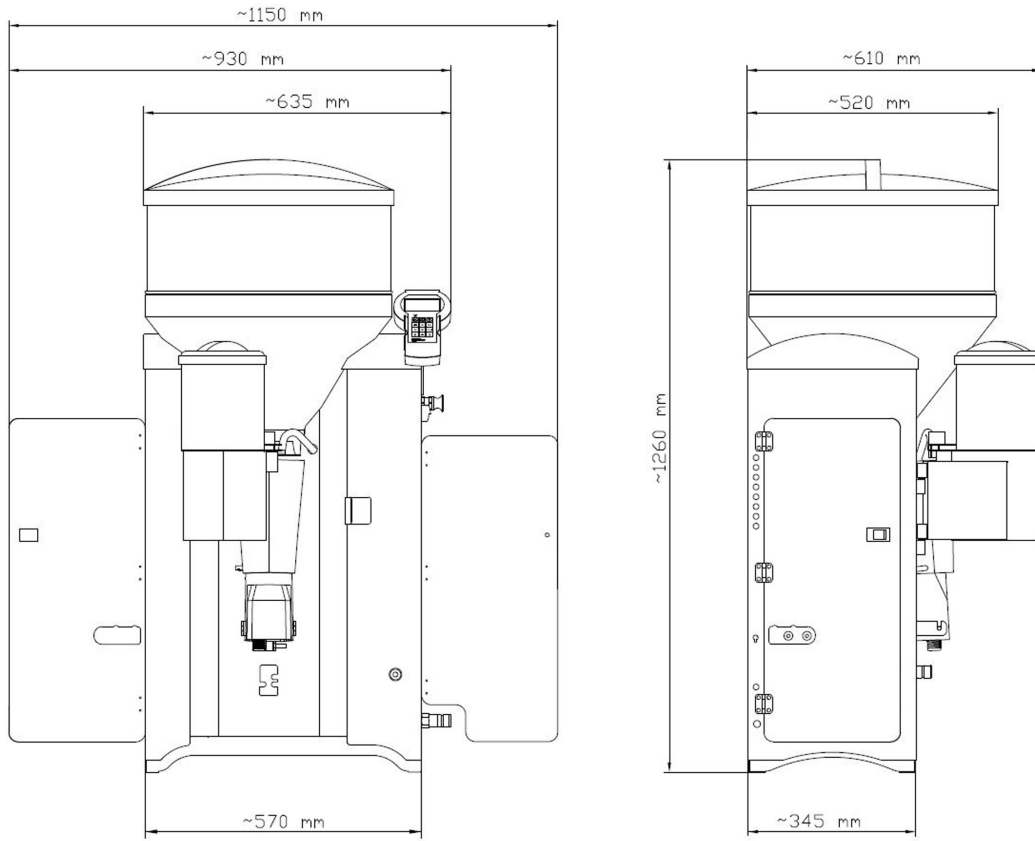

Depth when the fly screen door is opened ~ 690mm

1.3.3 Weight

Approx. 80kg.

1.3.4 Water connection

Water is connected via a 3/4 inch hose and with a 3/4 inch screwed connection.

NOTICE!

The water must be of drinking water quality.

- ▶ Please bear in mind that high calcium, iron and manganese concentrations can cause premature wear of the components. In such cases it makes sense to install appropriate filtration systems.

The water pressure on site must be between 1 and 6 bar or between 100000 and 600000 Pascal.

1.3.5 Boiler

The boiler holds approximately 7 ltr of water.

1.3.6 Milk powder container

The milk powder container with attachment holds approximately 35 kg of milk substitute.

1.3.7 Number of feeding stations and animals

| | |
|----------------------------|----------|
| Feeding stations: | max. 4 |
| Calves per feeding station | max. 30 |
| Calves per device | max. 120 |

1.4 Disposal

All components, liquids and solids must be disposed of in compliance with the applicable official regulations for proper waste recycling and disposal in your country. Also comply with the corresponding safety data sheets.

1.5 Symbols



Optional: A white plus sign on a black background indicates that optional functions or equipment are being described.

1.6 Abbreviations

| Abbreviation | Meaning |
|-------------------------|--|
| Call ltr. t. or Call t. | Call-off today in liters |
| Call ltr. y. or Call y. | Call-off yesterday in liters |
| abs. | absolute |
| Adli | Ad lib |
| save amt. | Amount saved up |
| feed.pump | Feeding pump |
| out. pause | Dispensing pause |
| sw.off del. | Switch-off delay |
| dr. time | Drink-out time |
| bo | Boiler |
| dos. | Dosage |
| EI | Electrode |
| electrol. | Electrolyte |
| sw. on del. | Switch-on delay |
| F | 40 FIT feeding |
| f | 40 FIT periods |
| gradient | Gradient control |
| gr. A (B) | Group A (B) |
| IFS TR | Intelligent feeding station feed |
| IFS-4 | Intelligent feeding station feed, quadruple unit |

| | |
|----------------------|---|
| IFS KF | Intelligent feeding station concentrate |
| IV | Interval feeding program |
| C | Concentrate |
| Conc. concentr. | Concentration |
| dra.v. N. | Drain via teat |
| w. entitle. | With entitlement |
| w/add. or w/addiv. | With additive |
| MAP | Manual feeding pump |
| MP | Milk substitute |
| max | maximum |
| Min. temp. | Minimum temperature |
| mix. full | Mixer full |
| mixer cl. | Cleaning the mixer |
| mixer dr.valve | Mixer drain valve |
| n. | not |
| No. | Number |
| Clean teat | Clean teat |
| w/o entitlement | Without entitlement |
| w/o add. or w/o add. | Without additive |
| P 1-5 | Periods 1-5 |
| R | rationed feeding principle |
| rel. | relative |
| Drnk spd. | Drinking speed |
| ho. | Hose |
| clo.? | close |
| servo | Servo control |
| det. pump | Flushing agent pump |
| Temp. | Temperature |
| TR | Feeding box |
| fd.sensor | Feeding sensor |
| Bo. water | Boiler water |
| Incr./Red. | Increase/reduction |
| add. disp. | Additive dispenser |

2. Important safety instructions

This chapter outlines:

- The hazards caused by your automatic feeder and how to avoid them.
- The safety labels attached to the automatic feeder and what they mean.
- How to safely install the automatic feeder.

The automatic feeder is state of the art and is produced in compliance with recognized safety regulations. However, hazards and adverse effects may arise when using it. Both warning signs directly on the automatic feeder and warning notices in this manual provide warning of these hazards.

2.1 Intended use

The automatic feeder may only be used to prepare, heat, and dispense liquid feeds, for example milk, for calves.

2.2 Required qualifications

Only trained service technicians are authorized to install the automatic feeder, put it into service and perform maintenance and repairs on it.

Service technicians are specialists with appropriate qualifications. They are able to assess the work assigned to them and detect potential risks on the basis of their technical training as well as their knowledge of the relevant standards. They have knowledge of relevant accident prevention regulations, generally accepted safety regulations and country-specific standards and provisions.

2.3 Residual risks

Hazards to health caused by the automatic feeder:



WARNING!

Danger from electric current

The automatic feeder is powered by electricity.

► You must observe the general precautions for handling electrical equipment.

-
- Read the operating manual before operating the automatic feeder.
 - Keep children away from the automatic feeder.
 - Do not touch any moving parts of the automatic feeder, for example the mixer blades.
 - Only use genuine spare parts from the manufacturer.
 - Switch the automatic feeder off and disconnect the power plug before carrying out any maintenance or cleaning work on the automatic feeder.
 - If the end user intends to operate the automatic feeder outside of closed spaces, inform the user that he/she must protect the automatic feeder from rain and moisture, for example with a roof.

- Do not install the automatic feeder outdoors, in the open.
- If there is a connection to a drinking water system, then the system must be protected from back siphoning.
- The following specific hazards are associated with the automatic feeder's electrical system:
 - **Electrical discharge.** If there is an electrical or voltage discharge, electric current flows through parts of the automatic feeder that are normally insulated. Touching the unit can cause a fatal electric shock. The automatic feeder must be checked regularly for electrical safety in compliance with national regulations (repeated inspection). Make sure that a 30 mA residual current device (RCD) is installed.
 - **Short circuit, indirect contact.** If there is a short circuit, current at many times the level of the operating current can flow. Touching the unit can cause a fatal electric shock. Make sure you install a fuse (provided by the customer) corresponding to the rating on the name plate and a 30 mA residual current device (RCD) in compliance with local regulations.
- The solenoid valves and the pipes to the valves can reach temperatures of up to 70°C. Touching it can cause burns. Do not touch the solenoid valves and pipes during operation.
- Liquid at temperatures of up to 70°C can spray out of the pipes to the valves. This can cause scalding. Do not touch the pipes during operation. Carry out the recommended maintenance on the hoses.
- The mixer and powder supply may start up unexpectedly if a calf which is entitled to feed approaches the unit. This can crush or chop off fingers or hands. Never reach into the area of the mixer or powder supply while the automatic feeder is in operation. Use only the scraper supplied to clean the powder discharge opening.
- **Poisoning.** Additives that are fed to the calves may contain substances that are hazardous to human health. Avoid direct contact and always wear protective gloves and goggles when handling these substances.
- **Chemical burns.** The cleaning agent used to clean the automatic feeder contains caustic substances. They can cause severe injuries to your hands or eyes. Avoid direct contact and always wear chemical-proof protective gloves and goggles when handling the cleaning agent.
- **Excessive physical strain.** The automatic feeder weighs 80kg. Never attempt to carry it by yourself as this can cause excessive physical strain.

Material damage caused by the automatic feeder

The automatic feeder can cause the following types of material damage:

- **Infection.** Improper cleaning or incorrect operation can result in calves becoming infected by pathogens from the automatic feeder. This can lead to medical costs or cause the death of the calves.
- **Corrosion.** Improper cleaning or maintenance can result in the automatic feeder ceasing to function correctly.
- **Loss of stability.** The automatic feeder must be set up on a level surface. Otherwise, the automatic feeder can tip over and suffer damage.

2.4 How am I warned of hazards?

Hazards are indicated directly on the automatic feeder by safety labels (warning signs, instruction and prohibition notices), and in the operating manual by specially marked hazard descriptions.

The warnings for hazards that can cause death or injury to people are emphasized more than those for material damage, for example through the colors, hazard words or symbols used.

Safety labels are an important element of the overall automatic feeder safety concept. They provide warnings about hazards and explain how to avoid them.


Make sure that all the specified safety labels are fitted to your automatic feeder and that they are in a legible condition. If the safety labels are difficult to read, replace them immediately. New safety labels are available from Förster-Technik GmbH.

2.4.1 What are the components of a hazard description?

A hazard description always consists of the following elements:

- Hazard word (danger, warning, caution, attention)
- Type of hazard (what can happen?)
- Location of hazard (where can it happen?)
- Actions necessary for preventing the hazard (what should I do?).

2.4.2 Potentially fatal hazards or health hazards

Depending on their severity and the probability of them occurring, hazards that can cause death or injury to people are indicated by a hazard symbol  (warning triangle with exclamation mark) and the following hazard words:

 **DANGER!**

The word **DANGER** indicates an imminent hazard that will lead to death or serious injury.

Warning signs in the operating manual: **DANGER** (white text on red background).

 **WARNING!**

The word **WARNING** indicates a potentially hazardous situation that could lead to death or serious injury.

Warning signs in the operating manual: **WARNING** (black text on orange background).

 **CAUTION!**

The word **CAUTION** indicates a potentially hazardous situation that could lead to minor injury.

Warning signs in the operating manual: **CAUTION** (black text on yellow background).

2.4.3 Material damage

NOTICE!

The word **NOTICE** indicates possible material damage. The automatic feeder or an object in its vicinity may be damaged, for example a calf.

Prohibition notice on the automatic feeder: a pictogram crossed out in red in a white circle with a red border indicates something you are not allowed to do.

Operating manual: white text on blue background

2.4.4 Safety signs

Different safety notices are attached at the hazardous points on the automatic feeder. Warning signs, prohibition and instruction notices.

What are warning signs?

Warning signs consist of:


- A pictogram in a yellow triangle illustrating the potential hazard.

What are prohibitory signs?




Prohibitory signs have a pictogram of the prohibited action in a red circle with a line through it. See the adjacent example. They graphically depict the prohibited action. In this example, the hose with a line through it means that you may not use high-pressure cleaners.

What are instruction notices?

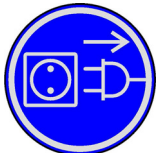

Instruction notices show a pictogram of what you are being instructed to do in a blue circle. They illustrate what you have to do. In the example, the pictogram means that you must always disconnect the plug first.


Other signs

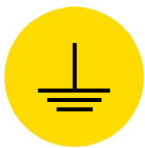

Grounding symbol. This symbol is placed in the locations where you must perform potential equalization.

2.4.4.1 Warning signs on the machine

Danger of death by electric shock

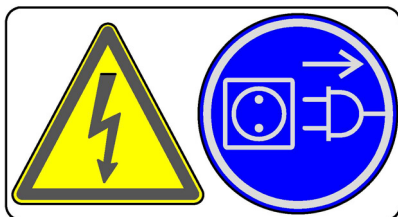

Burning/scalding



Health hazards caused by additives and cleaning agents



Automatic startup



No spraying



Grounding symbol



2.5 Safety devices

The automatic feeder may only be operated if the safety equipment is complete and intact. The automatic feeder has the following safety equipment:

- Safety signs (warning signs, instruction and prohibition signs).
- The heater's safety temperature limiter. This shuts down the heater in the event of overheating (temperature rises above 70°C). The heater may only be reactivated by a service engineer.
- Safety grid for the powder hopper attachment. The safety grid prevents people from being injured by the rotating tools in the hopper, for example when adding milk powder. It must always be installed when the unit is operating.
- The scraper next to milk powder discharge. The powder discharge opening may only be cleaned with the scraper. This prevents finger and hand injuries caused by the powder conveyor starting up automatically.


The safety devices at the machine are an important part of the safety concept and help prevent accidents.

- Do not remove or change the safety devices unless the corresponding safety instructions have been complied with.
- Put the machine into service only once all safety devices have been fitted and are in the guard position!

Safety temperature limiter

The automatic feeder's heater is equipped with a safety temperature limiter which will be triggered in the event of overheating (70°C) and which will then shut down the heater.

The safety temperature limiter is triggered if the water gets too hot or if the heater is running dry. It can be found behind the cover illustrated below.

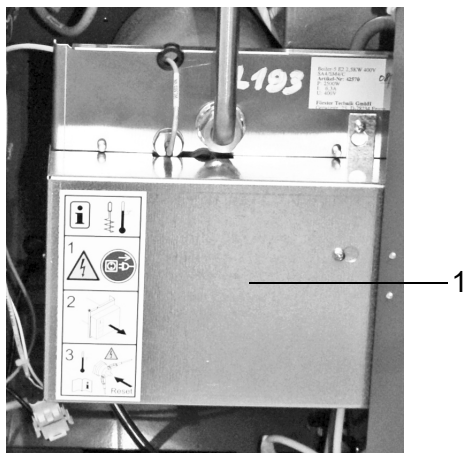

1 Cover of the safety temperature limiter

Protective grid for powder hopper attachment

The protective grid for the powder hopper attachment prevents you from being injured by the rotating tools in the powder hopper, for example, when filling in milk powder.



1 Protective grid


⚠ WARNING!

There is a risk of injury due to rotating tools.

The safety grid must always be installed when the unit is operating.

Scraper next to the milk powder outlet

The powder discharge opening may only be cleaned with the scraper. This prevents finger and hand injuries caused by the mixer starting up automatically.

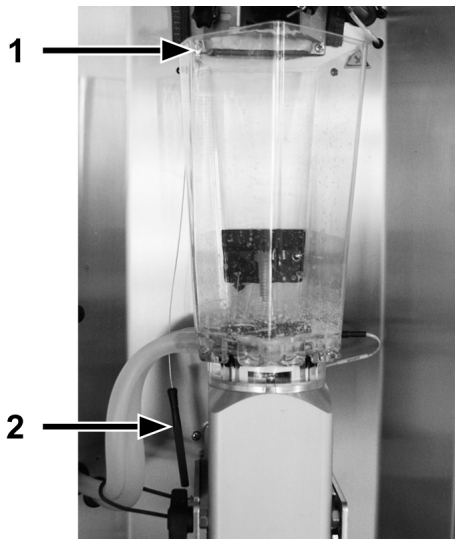

1 Mount for scraper
2 Scraper

⚠ WARNING!

There is a risk of injury due to automatic start-up

Do not reach into the hazard area of the powder discharge opening. The powder dosing can start up automatically at any time, crushing or cutting off your fingers.

- ▶ Always switch off the automatic feeder using the main switch and disconnect the mains plug. Use only the scraper supplied to clean the powder discharge opening.

2.6 Structural alterations

The automatic feeder must not be subjected to any unauthorized alterations at any time.

Only genuine spare parts, wearing parts and accessories may be used, since any warranty claims will otherwise be void.

3. Commissioning

Have the end user provide you with the operating manual of the automatic feeder, the separate operating manuals of additional equipment to be connected as well as the safety data sheets for the cleaning agents.

The appendix contains a checklist with all points you have to observe during commissioning or recommissioning (see 10.1 "Checklist for commissioning and recommissioning" - 114).

3.1 Setting up the feeder

CAUTION!

Beware of the health hazards caused by lifting heavy loads.

The automatic feeder weighs approx. 85 kg.

► Never carry the automatic feeder by yourself.

- When setting up the automatic feeder, observe the occupational safety precautions.
- Always set up the automatic feeder on an even surface.

Note: Using its adjustable feet, if necessary, you can level the automatic feeder.
- Set up the automatic feeder in a frost-free location. If this is not possible, inform the end user that he/she must protect the automatic feeder from frost using additional equipment such as the additional frost protection equipment or suction hose heating made by Förster-Technik.
- Set up the automatic feeder in a location where the temperature cannot exceed 40°C and the humidity cannot exceed 80%.
- If the end user intends to operate the automatic feeder outside of closed spaces, inform the user that he/she must protect the automatic feeder from rain and moisture, for example with a roof.
- Make sure that there is a drain where the automatic feeder is set up, for the cleaning water.
- Be sure to comply if necessary with the manufacturer's instructions and national regulations for the use, storage and place of installation of the cleaning agent being used.
- Inform the user that the automatic feeder and its cables must be protected from exposure to sunlight.
- In order to ensure correct operation of the calibration scales, remove the wing nut fitted for transport restraint on the left side of the mixer.
- Remove the calibration beaker (optional) from the mixer beaker.
- Cut the discharge hose to length. Keep it as short as possible.

A discharge hose has a length of 50 cm and may not be either extended or constricted.

NOTICE!

► Ensure that the discharge hose is laid so as to be free of kinks or loops, as these can damage it.

- Inform the user that he must not extend the discharge hose.

3.2 Electrical connection provided by the customer

The automatic feeder needs its own power supply.

- The power supply must meet the voltage and frequency specifications. The mains supply must correspond to the supply voltage stated on the left side of the automatic feeder.
- A residual current circuit breaker (30 mA) in the power supply provided by the customer is compulsory for the operation of the automatic feeder.
- Since it is not technically possible to protect the automatic feeder separately against lightning, you must inform the end user that he/she must provide the appropriate lightning protection (e.g. lightning protection system for the entire building).
- Comply with the local regulations and safety precautions.


Potential equalization

To protect the animals and prevent electrical faults, all metallic objects, such as water pipes, feeding station, stand partition and automatic feeder must be grounded. These locations are indicated by the grounding label (see 2.4.4 "Safety signs" - 18). The connecting screw to ground the automatic feeder is on the right-hand side of the machine housing, directly next to the electrical connection cable. Connect this screw to the local ground via a short, flexible copper cable (minimum cross-section of 4mm²).



1 Potential equalization

3.3 Water connection

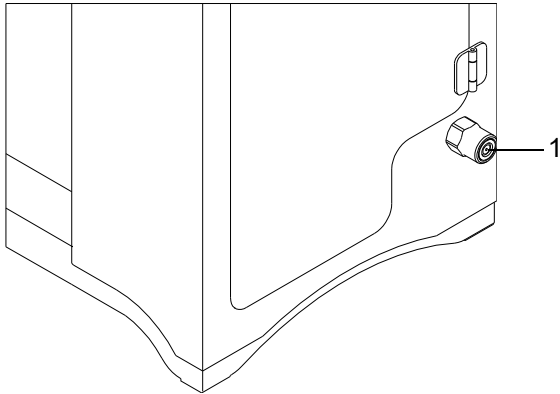

1 Water connection

- When connecting the automatic feeder, observe the national regulations about protection of drinking water.
- Inform the end user that the supplied water must be of drinking water quality.

NOTICE!


Please bear in mind that high calcium, iron and manganese concentrations can cause premature wear of the components. In such cases it makes sense to install appropriate filtration systems.

- Use a separate water shutoff valve to supply water to the automatic feeder.
- Make sure that the water pipe has a sufficiently large cross section. Determine the number of points where water is simultaneously being extracted and adjust the cross section of the water pipe accordingly.
- Make sure the water pressure is constant. The water pressure must be at least 1 bar. The maximum pressure must not exceed 6 bar. If the water pressure drops below 1 bar, you will have to install a pressure increasing device.
- Lay the discharge hose to flow into the gully.

3.4 Installing feeding stations

3.4.1 Installing feeding station

1. Install the teat at its intended location on the front plate, 10 to 15 cm above the suction hose connection of the mixer and resulting in a height 50 to 80 cm above the calf's floor level.
2. Connect the return hoses to the teat and to the automatic feeder.

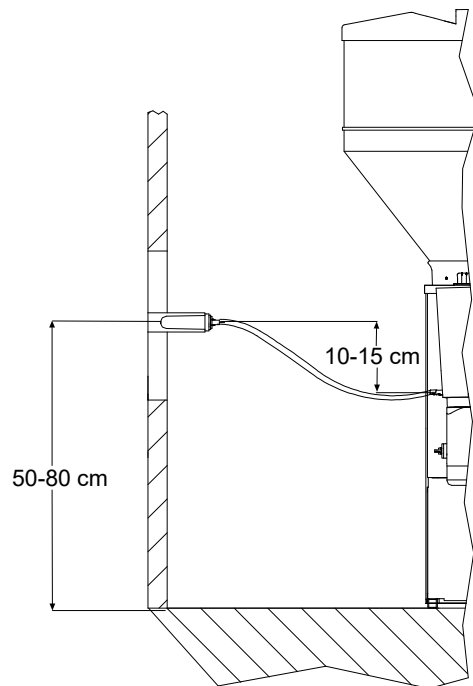

NOTICE!

The suction hose must not be longer than 2 meters

Otherwise, the calves will have problems sucking in the feed. This can lead to malnutrition. Malnutrition can cause impaired growth and development, increased susceptibility to illness or even death of the calves.

NOTICE!

There is a risk of infection due to feed building up in the hose.

The hose between the teat and the mixer beaker valve (rationed mode) or mixer beaker (ad lib mode) must not sag and must be installed at a gradient to the automatic feeder (see the illustration).

NOTICE!

If no ActivityBoxes are connected and hence no return hoses for the automatic suction hose cleaning are connected to the automatic feeder, it is essential that the partition fittings are closed off with dummy plugs.

3.4.2 Installing stand partitions

Install the stand partitions, where fitted, in accordance with the manufacturer's instructions.

3.5 Attaching the pushbutton/remote control for manual feed start

The pushbutton/feeding button (optional) activates the feed pump. The feed pump helps habituate animals to automatic feed consumption and stimulate weak calves to consume feed.

WARNING!

Risk of injury and death!

During assembly, make sure that all supplied electrical components are assembled outside the animal area, otherwise they could be damaged. Neglect of this can lead to significant material damage as well as serious injuries to animals and humans or even death.

1. Install the pushbutton or the remote control near the feeding box.

3.6 Connecting the antennas

3.6.1 Installing the antennas

NOTICE!

There is a risk of the antenna cables being damaged.

- ▶ Install the antenna cables in such a way that they cannot be damaged by the animals. Observe the separate operating manual for the antennas.
-

Install the antennas as follows:

1. Keep the distance between the antenna and transmitter as small as possible, no more than 15 - 25 cm. The range of the antenna is, depending on the version, 15 - 25 cm.
 - 1.1. If necessary, block the area next to the feeding box. This is the only way to prevent a situation in which feed for a calf outside of the feeding box is prepared but the calf does not receive it.

NOTICE!

There is a risk of malnutrition if calves do not receive any feed.

Malnutrition can cause impaired growth and development, increased susceptibility to illness or even the death of your calves.

2. Check the range of the aerials using the aerial test (see 5. "Setup" - 59).

Note: If 2 calves are identified simultaneously by one aerial, animal identification will be interrupted for both calves.

- 2.1. The distance between 2 antennas should be approx. 100 cm to avoid any range overlapping.
- 2.2. In case duplicates or misidentification occurs, shield the antennas using grounded metal plates.

Note: In order to use winter feed plans, a MultiReader detector with a temperature sensor must be installed at feeding box 1. From January 1, 2013 every MultiReader detector is equipped with this sensor by default. You can check whether your MultiReader detector is equipped with a temperature sensor under **Feeding > Plans > Winter feeding plans** (see the chapter "Feeding > Winter feeding plans" in the automatic feeder's operating instructions).

3.6.2 Squelch values and identification ranges

The approximate range of the antennas is 15-25 cm.

The version of the antenna is crucial for the identification range. With Nedap micro-identification, you can set the range via the squelch value.

The squelch values and the identification ranges for the various identification systems are listed in the following table. These squelch values are based on experience and are set at the factory.


If the actual values differ, the settings can be changed in the setup (see 5. "Setup" - 59).

| System | Squelch (default values) | Identification range |
|--|--------------------------|----------------------|
| Collar (X-responder) | 0 | 15 - 20 cm |
| Collar (PM-responder) | 180 | 15 - 20 cm |
| Earmark (also in the collar) (Nedap system) | 0 | 15 - 20 cm |
| Earmark (also in the collar) (Tiris system) | inactive | 15 - 20 cm |

3.6.3 Connecting antenna cables

Connect the antenna cable as follows:

1. If necessary, switch the automatic feeder off at the main switch.
2. Connect the antenna cables to the connections provided.

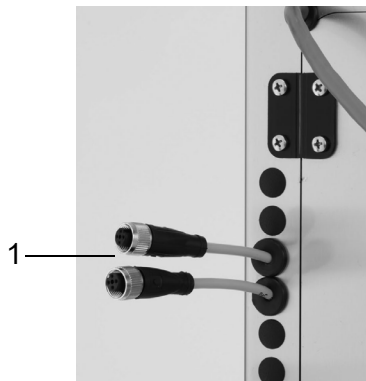


1 Antenna connections

3.6.4 Connecting the Ethernet cable


Connect the Ethernet cable as follows:

1. Remove the dummy plug on the feeder housing.

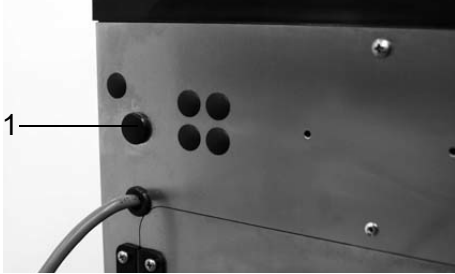

1 Dummy plug

2. Open the left side door of the automatic feeder.
3. Remove the cylinder with the Ethernet connection from the bracket on the feeder housing.

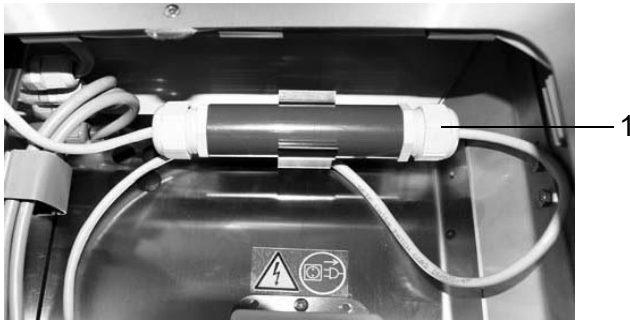


1 Cylinder with Ethernet connection

4. Remove the plugs from the seal and open the screw connection of the cylinder.




1 Seal in cylinder

5. Remove the cable sleeve from the cylinder and attach it at the location of the dummy plug in the feeder housing.
6. Guide the end of the unattached Ethernet cable through the cable sleeve.
7. Screw on the other end of the cylinder and pull out the socket and the Ethernet cable of the automatic feeder.

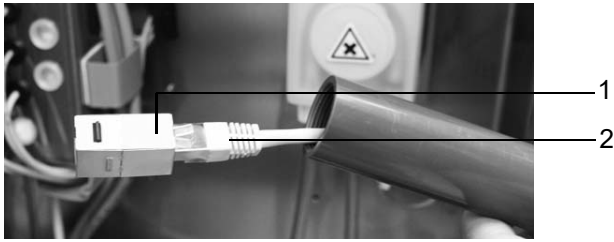

- 1 Socket
- 2 Ethernet cable of automatic feeder

8. Place the unattached seal and the screw connection around the unattached Ethernet cable and connect the end to the socket.

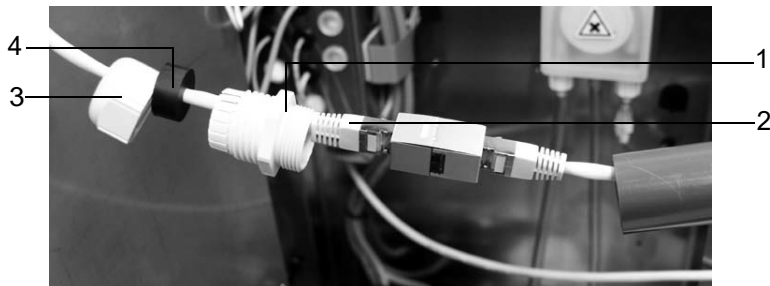

- 1 Screw connection
- 2 Ethernet cable
- 3 Screw connection
- 4 Seal

9. Insert the cable connector into the cylinder and tighten the cylinder and seals.
10. Push the cylinder into the bracket into the housing of the automatic feeder.

3.7 Installing the safety grid for the powder hopper attachment

Install the safety grid as follows:

1. Switch the automatic feeder off.
2. Remove the bag with the small parts and hoses as well as the operating manual from the powder hopper.
3. Insert the safety grid for the powder hopper attachment.
4. Screw in the three self-tapping screws into the holes provided.

3.8 Switching on the vapor barrier for powder discharge


⚠ DANGER!

Danger of death by electric shock.

The electrical components of the automatic feeder are live. Switching the unit off using the main switch does not disconnect the voltage to the unit.

- ▶ Always switch the automatic feeder off using the main switch and disconnect the power plug before you remove the cover of the control box.

If the automatic feeder is equipped with a vapor barrier for the powder discharge, you must check that the respective switch on the processor board is switched on. If not, you must switch it on. In summer, you can set the switch for the vapor barrier to 0.

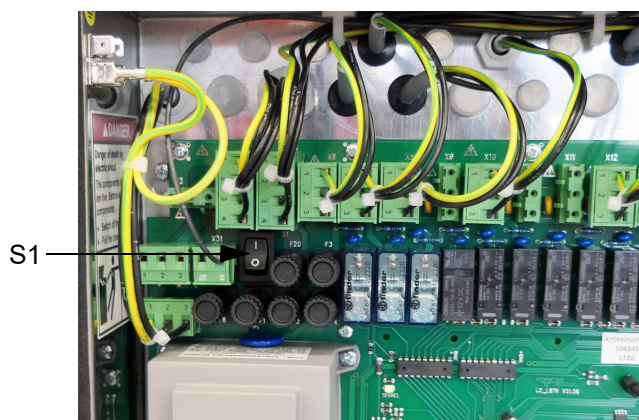

S1 = switch for vapor barrier for powder discharge

3.9 Filling the powder container

1. When filling the powder container, observe the occupational safety precautions.

⚠ CAUTION!

Beware of the health hazards caused by lifting heavy loads.

- ▶ When filling the powder container make sure you do not strain yourself. If necessary, use appropriate lifting aids.

2. Fill the powder container with milk powder (MP)

NOTICE!

If the milk tank and the powder container are both empty there is a risk of malnutrition since the calves will receive only water.

Malnutrition can cause impaired growth and development, increased susceptibility to illness or even death of the calves.

- ▶ Inform the end user that he must fill up an empty powder container or an empty milk tank immediately, or provide his calves with feed using an alternative method.

3.10 Installing external cleaning agent supply pipework (optional)

The automatic feeder can be equipped with an external cleaning agent supply pipe.

Be sure to comply with the manufacturer's instructions and national regulations for the handling, use, storage and place of installation of the cleaning agent being used.

WARNING!

Beware of chemical burns from the cleaning agents used.

The cleaning agent can cause chemical burns to your eyes or hands.

- ▶ Always wear goggles and protective gloves when using cleaning agents. Follow all the safety instructions listed in the safety data sheet for the cleaning agent and wear the specified safety equipment.

NOTICE!

The cleaning agent container must be positioned so that it cannot be tipped over and so that calves, unauthorized persons and children have no access to it.

The cleaning agent container can be freely selected. To install it, proceed as follows:

1. In the cover of your cleaning agent container, drill a hole ($\varnothing 20$ mm) for the cleaning agent lance.
2. Feed the cleaning agent lance from below into the cover of your cleaning agent container. Slide the upper screw connector from above over the lance and screw it on.



Note: Slackening the two screw connectors allows the height of the sensor to be adjusted.

3. Unscrew the elbow coupling from the suction lance and remove the upper screw connector.
4. Attach the **transparent hose** which leads from the left hand through coupling to the rear of the automatic feeder to the sealing cap of the elbow coupling.



5. Connect the sealing cap to the elbow coupling and secure this once again to the cleaning agent lance.



6. Connect the cable of the cleaning agent lance to the cable tail (5th or 6th socket counting from the top) on the left hand side of the automatic feeder.
7. Insert the cleaning agent lance through the cover of the cleaning agent container and secure it.



Note: Small breather holes in the cover prevent the creation of a partial vacuum which would distort the cleaning agent container. In this respect comply with the manufacturer's specifications and the national regulations.

8. Position the cleaning agent container in the place provided for it.
Make sure that the suction tube is inserted cleanly and properly in the cleaning agent container.

 **DANGER!**

Danger of death if the cleaning agents are switched over!

This can result in the release of chlorine gas which is highly explosive and can cause severe chemical burns.

- Make absolutely sure that the suction hoses to the cleaning agent pumps are inserted in the correct containers. Additionally observe the specifications in the respective installation instructions.
-

3.11 Switching on the automatic feeder

Insert the mains plug and switch the automatic feeder on again using the Main switch .

Use the hand terminal to control the automatic feeder.

Note: After the hand terminal has been switched on, the version of the hand terminal's program first briefly appears in the display, before the automatic feeder carries out a test routine. Do not press any buttons on the control panel during these initial routines.

3.12 Setting the date/time

When the start routine is complete, the message **Perform basic settings** appears.

1. Set the **current date** and confirm it with .
2. Set the **current time** and confirm it with .

3.13 Filling the boiler

1. In the display, you will see the fault message **Boiler not filled**. Press .
2. Confirm **Fill boiler?** by choosing .


The boiler will be filled with water.

3.14 New installation

During the initial startup and restart process for the automatic feeder, the program (software) must be completely reconfigured (reset). This will remove superfluous data as well as outdated or incorrect settings from the memory.

Note: Choosing **Reinstallation** deletes the **Animal data** (group membership, barn transfer date, feeding days, consumption sums), the **transmitter numbers** are set to zero and the **device data** and the **feeding plans** are overwritten with default values.

Reconfigure all menus as follows:

1. Navigate via  > **Device data** to the **Reinstallation** sub-menu.
2. Confirm **Everything** by choosing .
3. Confirm **Reinstall everything?** by choosing .
4. Confirm the security prompt **Do you really want to restore the data to factory settings?** by choosing .
5. Confirm **Reinstallation completed!** by choosing .

All data has been reset to factory settings.

Note: The settings in the feeder setup are not changed by **Reinstallation**.

3.15 Setup settings

Check the settings in the Setup menu for correctness and if necessary activate the additional equipment (see 5. "Setup" - 59).

3.16 Adjusting the calibration scales

If the automatic feeder is equipped with calibration scales (optional), adjust these in the Setup menu (see 5.8 "Calibration scales" - 67).

3.17 Setting offline mode

You define a period in the **Autostart** menu option on the offline screen. The default setting is 20 minutes.

You set the autostart as follows:

1. By pressing , switch into the Offline Mode display.
2. The following appears in the display:
 - Start automatic?
 - Time
 - Date
 - Autostart
3. In the **Autostart** menu, press .
4. Choose the maximum duration of offline mode during an extended period of inactivity of the automatic feeder.

Note: The **automatic feeder** will revert automatically to automatic mode.

3.18 Setting portion

NOTICE!

Feed temperatures that are too low can cause digestion problems in calves and feed temperatures that are too high can cause gastritis in the abomasum.

The temperature of the feed in the mixer beaker must correspond to the mixing temperature specified by the MP manufacturer.

- Keep to the feed temperatures recommended in this operating manual.

In the Device Data menu (see 4.6 "Device data" - 44), perform the following settings for the feed portion:

- Set the set temperature of the feed in the mixer beaker (see 4.6.3.1 "Setting the set temperature and minimum temperature" - 46 and following pages)
- Set the minimum temperature of the water in the boiler (see 4.6.3.1 "Setting the set temperature and minimum temperature" - 46 and following pages)
- Set a pause between the dispensing of two portions (see 4.6.3.2 "Dispensing pause" - 47).



- Set the parameters for the procedure for discharging the mixer and for the overrun (see 4.6.3.5 "Mixer draining" - 48).

3.19 Drain time station parameters


In the **Feed** menu, you can define the drink-out time for each feed station. The drain time starts when the rod electrode becomes free for the last portion and ends when the feeding box valve concerned closes (see 4.6.4 "Drain time station parameters" - 49).

If calves do not finish drinking the contents of the mixer beaker within the standard setting for drain time, the drain time can be extended.




3.20 Function keys

The hand terminal has two freely programmable function keys  and . They define which functionality or which menu will be called up when the respective function key is pressed (see 4.6.5 "Function keys" - 50).

3.21 Animal list

By default the key  is assigned the animal list (see 4.6.6 "Animal list" - 50).

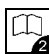Here is how you define which parameters are displayed in the two columns of the animal list:

1. Navigate via  > **Device data** to the **Animal list** sub-menu.
2. In **Column 1** or **Column 2**, select by using  and  to choose the parameter. You can choose between **Feed consumption in liters** (today or yesterday), **Drinking speed in %**, **Animal visits** and **Break-offs**.

3.22 Checking components

In the **Diagnostics** menu, check all components that are subject to calibration. This check is necessary in order to perform calibration (see 9.5 "Diagnosis" - 108).

3.23 Calibrating feed components

You must calibrate the feed components first so that they are mixed in the right proportion (see 6. "Calibration" - 71).

3.24 Checking or setting cleaning settings

Check the settings for temperature of the cleaning water, cleaning agent amount and teat cleaning and, if necessary, set them. (see the **Cleaning > Settings** chapter in the operator's manual for the automatic feeder).

3.25 Cleaning

For hygienic reasons, you must completely remove any coolant and lubricant remnants from the system before commissioning. To do this, execute the cleaning cycle. (see the **Cleaning > Cleaning cycle** chapter in the operating manual for the automatic feeder).



WARNING!

Beware of chemical burns from cleaning agents.

The cleaning agent can cause chemical burns to your eyes or hands.

- ▶ Always wear goggles and chemical-proof protective gloves when using cleaning agents. Follow all the safety instructions listed in the safety data sheet for the cleaning agent and wear the specified safety equipment.

3.26 Reading in and creating transmitters

During the initial startup process for the automatic feeder, the transmitters have to be read and created once in the system. When you do this, each transmitter number is assigned one animal number of no more than six digits. These animal numbers are then available and can be used to register the animals (see 7. "Transmitter and animal management" - 75 and following pages)

3.27 Registering animals

Animals are only fed at the feeder if they are also registered there (see 7.2 "Registering animals" - 79 and following pages)

3.28 Entering correction days

During commissioning, the total feeding duration of an animal can be reduced by "shifting" the animal to the desired plan day. (see the **Operation > Feeding** chapter in the operating manual for the automatic feeder).

4. Programming and control


You control the automatic feeder using the hand terminal. The hand terminal is directly connected to the automatic feeder by a cable. You switch it on and off together with the automatic feeder. It remains in operation as long as the automatic feeder is switched on.

Note: After the hand terminal has been switched on, the version of the hand terminal's program first briefly appears in the display, before the automatic feeder carries out a test routine. Do not press any buttons on the control panel during these initial routines.

- You monitor and control the automatic feeder (the **feed pump**, for example) directly via the keys of the hand terminal.
- You monitor and change the settings of the automatic feeder and the values of calves via menus. The menus and sub-menus are arranged so that you can find the necessary settings quickly and easily. With a click of a button, you can access the most important menus, such as **Animal control**, **Main menu** and **Manual functions** as well as the **Animal list**.

4.1 Hand terminal

The hand terminal is directly connected to the automatic feeder by a cable. The lighting of the display switches off when the unit is not used for a long period. This saves power.

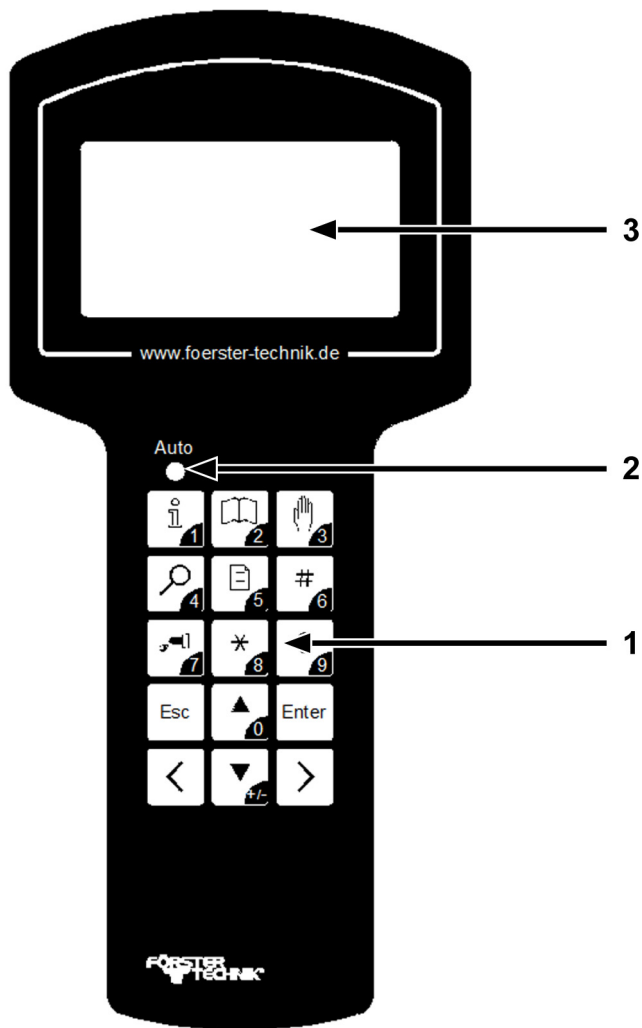

- 1 Keypad
- 2 Auto LED
- 3 Display

4.1.1 The keypad



With this key you open the **Animal control** menu or enter the number 1.



With this key you open the **Main menu** or enter the number 2.




With this key you open the **Manual functions** menu or enter the number 3.



With this key you open the **Search functions** menu or enter the number 4.




With this key you open the **Animal list** or enter the number 5.



This key is a freely selectable **function key**. With this key, you can enter the number 6.




With this key you activate the **Feeding pump** or enter the number 7.



This key is assigned 2 functions:

- You press this key to select a calf in sub-menus in which an animal number is displayed. An asterisk (*) is displayed in front of the animal number of a selected calf. You deselect the calf by pressing this key again.
- In the overview menu in automatic mode, you use this key to toggle between the four-line (large font) and the eight-line (small font) display.


With this key, you can enter the number 8.




This key is assigned 2 functions depending on the menu you are currently using:

- You use this key to delete warnings and alarms.
- In the overview menu of automatic mode, you use this key to bring warnings to the foreground.

With this key, you can enter the number 9.



You use this key to go backward within the menu structure. You return to the starting menu by pressing this key multiple times.




You use this key to move the cursor upward and choose items from a list, for example [yes] or [no]. With this key, you can enter the number 0.



With this key you move the cursor downward and select items from a list. You use this key to change the sign of a number, for example from +1 to -1. This is how you enter negative numbers.



You use this key to confirm your selection and open a menu or an input field. An [input field] is indicated by square brackets.



You use this key to scroll between pages on the screen or list items to the left and jump to the start of a list.



You use this key to scroll between pages on the screen to the right and jump to the end of a list.

4.1.2 The Auto LED

The LED (light-emitting diode) of the hand terminal displays important information about the status of the automatic feeder:

- In automatic mode, the LED lights up green.
- In offline mode, the LED is not lit up.
- If a malfunction occurs, the LED flashes.

You can run the automatic feeder in offline mode or in automatic mode.

4.2 Offline mode

In offline mode, you perform actions that you cannot do while the unit is in operation, such as the recalibration of feed components. When the automatic feeder switches from automatic to offline mode, the Auto LED goes out.

You switch to offline mode when you open a menu that requires offline mode, such as the calibration menu.

1. In the corresponding menu, press .
 2. Confirm the message **Exit automatic mode?** by choosing .
- The Auto LED on your hand terminal goes out.
3. Perform the desired action.

4.3 Automatic mode

You perform most routine tasks, such as feeding, in automatic mode. In automatic mode, the Auto LED lights up green.

You exit automatic mode by pressing and confirming the message **Exit automatic mode?** by choosing .




After a prolonged period of inactivity, the automatic feeder automatically returns to automatic mode. This time period is defined during commissioning. A default value of 20 minutes is pre-set.


You switch from offline mode to automatic mode as follows:


1. Press until the message **Start automatic mode?** appears in your display.
You are now in automatic mode again. The Auto LED lights up green.
 2. Press .
- You are now in automatic mode again. The Auto LED lights up green.

4.4 Menu structure

The automatic feeder is controlled using menus, sub-menus and lists. You control the automatic feeder by switching to lists via menus and sub-menus. In these lists, you can view and change values. The menu structure makes it easier to find a list quickly.

Experience shows that the lists the end user will need most often are for instance Animal control , Main menu  and Manual functions  which he can access directly at the touch of a key.

Experience shows that the **Animal list** is the list that end users require most often. The animal list can be directly accessed by pressing the key . You can change this default setting during commissioning to meet the needs of the end user. The user will then access the animal list via the **Animal control** menu.

During initial startup of the automatic feeder, you can assign the  key in accordance with the needs of the end user (see 4.6.5 "Function keys" - 50).

If you do not see all the menus or sub-menus presented here, this is either because the automatic feeder is not equipped with the component in question, or the component was not activated during setup.

Note: If you know that the automatic feeder has a component that is not being displayed, check the setup (see 5. "Setup" - 59).

4.4.1 Symbols

Different symbols are displayed in front of and in several menus, sub-menus and lists.

4.4.1.1 Arrows




In automatic mode, arrow heads are shown in front of menus:


- ► A solid arrow head indicates that the menu contains sub-menus.
- ▷ An empty arrow head means that you can change settings here or start actions.

4.4.1.2 Angle brackets

< > Angle brackets around a menu or list mean that you can choose between menu options or list items. For example, you can select the appropriate calf from a list of animal numbers using the calf's animal number. If you see angle brackets at the top of the display, it means you can scroll left and right.

4.4.1.3 Square brackets

[] Values or terms are shown in square brackets. If you press  the value / list item begins to flash in the input field. You can now use the number keys to enter values or use   to select values from a list, such as [yes] or [no].

Note: If you enter a value in an input field and the value is too high or too low, this value will automatically be set to the highest (too high) or lowest (too low) possible value after you press .

4.4.1.4 Rod electrode free/covered

The following symbols appear at the top right of your display when animals are being fed in feed mode.



This symbol indicates that the mixer beaker is full. The tip of the rod electrode is in the liquid.



This symbol indicates that the mixer beaker is empty. The rod electrode is clear of the liquid.

4.4.1.5 Animal identification and feed consumption

† The antenna symbol after a station number, such as TR1 for feeding box 1, indicates that a calf is identified at this station.

✓ A check mark after the antenna symbol means that calf identified at this station may consume feed here.

🔒 A lock symbol after the antenna symbol means that calf identified at this station may not consume feed here. For example, this could be because the concentration of feed in the mixer beaker does not match the feed settings for the identified calf.

- A hyphen after the station number indicates that no calf is identified at this station.

4.4.1.6 Plan tendency

The arrow to the right next to the animal number indicates the feeding phase the selected calf is now in.

↗ The feed quantity increases continuously, for example at the beginning of the feeding plan.

→ The feed quantity remains constant, for example in the middle of the feeding plan.

↘ The feed quantity is continuously reduced, for example at the end of the feeding plan.

f The calf is in the 40FIT period.

4.4.1.7 Marking

* Marked calves are indicated by an asterisk to the left of the animal number.

4.4.1.8 Alarms

! An exclamation mark to the left of the animal number indicates that a calf has triggered an alarm.

4.4.1.9 Winter feeding plan

❄️ This symbol at the top middle of the display shows you that the winter feeding plan is active.

4.4.1.10 CalfCloud



C This symbol is displayed in the first line of automatic mode if a connection to the CalfCloud exists.

4.4.1.11 Sleep mode

The Förster-Technik logo shows you that no key has been pressed on the hand terminal for an extended period of time. The hand terminal is in sleep mode.

4.4.1.12 Navigation

You use the hand terminal's keys to navigate through menus, sub-menus and lists.

Choose  .

- Move between the different sub-menus of a menu.
- Move between the items in a list, for example between **[yes]** and **[no]**.

Choose :

- Scroll through a list, for example through the calibration menu. At the end of the list, the message "end of the list" will appear in the display.
- When you enter numbers, switch between whole numbers, for example from 1 to 2 to 3.
- Jump to the last menu item.

Choose :

- Confirm an entry.
- Confirm a prompt or message shown on the display.
- Confirm a selection.
- Open menus and sub-menus.
- Open input fields, which are indicated by square brackets.
- Switch from the number before the decimal place to the number after the decimal place in input fields.

You can use :

- Go back one menu, each time you press the key. You return to the starting menu by pressing this key multiple times.
- Exit the input field or return, without saving, to the number before the decimal place in an input field.
- Shift the screen display to the left or the right: Keep the depressed, and in addition press the or . For some Asiatic languages this procedure may be necessary in order to display the full text on the screen.

4.5 Menus


4.5.1 Animal control

You can choose to open the **Animal checking** menu. This menu contains all sub-menus that the end user requires for daily calf monitoring. The numbers next to the sub-menus indicate the number of calves recorded in the sub-menu concerned.

- **Animal list.** You will see a table that shows the calves, sorted by different parameters, such as visits to the feeding box.
- **Entitlement.** A list of calves is displayed, sorted by feed entitlement.
- **Alarm.** You will see a list of the calves that have triggered an alarm.
- **Plan over date.** You will see a list of the calves that have a "plan over" date.
- **40FIT.** You will see a list of the calves which are currently in the 40FIT period.
- **marked.** You will see a list of calves that have been marked.
- **new.** Here you can view animals that were newly registered in the last 2 days.
- **duplicate.** Here you assign a new animal number to calves that have been assigned a duplicate animal number.
- **unknown.** Here you check whether and when the automatic feeder recorded unknown animal numbers. Here you can correctly register calves that have been recorded in this way.


- **all.** You will see a list of all calves.
- **Total consumption.** Several lists are displayed with the consumption amounts of all calves, individual calves and individual groups.
- **Press** (optional). Here you can print out the alarm list and the feed list.


4.5.2 Main menu



You can choose  to open the main menu. This menu contains all sub-menus that the end user requires for daily operation of the automatic feeder.

- **Animal management** (see 7. "Transmitter and animal management" - 75)
- **Feeding** (see the operator's manual).
- **Calibrating** (see 6. "Calibration" - 71)
- **Device data** (see 3. "Commissioning" - 22)
- **Cleaning** (see the operator's manual).
- **Diagnostics** (see 9.5 "Diagnosis" - 108)



4.5.3 Manual functions

You can choose  to open manual functions. Here you can start certain functions of the automatic feeder manually. For example, you can manually empty the mixer or dispense extra portions (see 4.5.3 "Manual functions" - 44).

If you press , the automatic feeder switches from automatic to manual mode. The LED extinguishes and the automatic feeder is in offline mode.

You can actively switch the automatic feeder back to automatic mode. Press  until the message **Start automatic mode?** appears in the display. Confirm this message with . The automatic feeder will return to automatic mode. The Auto LED lights up green.

You can control the following functions manually:

- **Extra portion.** Here you can dispense extra portions with or without additives.
- **Mixer: empty?.** The mixer is drained via the mixer drain valve.
- **Boiler water: start?.** Here you add water from the boiler to the mixer.
- **Powder: start?.** Here you start dispensing powder.
- **Mixer: start?.** Here you start the mixer.
- **Feeding box** (optional). Here you open the feeding box valve(s). The valves remain open until you close them by choosing .
- **Boiler: fill?.** Here you automatically fill the boiler with water.
- **Hoses: open?.** Here you can open several valves simultaneously in order to completely drain all the lines of the automatic feeder of water. The lines remain open until you close them by choosing .

4.6 Device data

4.6.1 Setting operating modes

In the **Operating modes** menu, you set the operating modes of the feeder.

4.6.1.1 Rationed mode / ad lib mode

The automatic feeder operates in rationed mode by default, but can also be switched to ad lib mode.


- In **rationed mode**, the feeder uses animal identification, i.e., the animals are individually fed rationed amounts. Rationed mode is the default setting.
- In **ad lib mode** the feeder does not use animal identification. The **automatic reading in** of transmitter numbers is therefore **not** possible in this operating mode. During feeder operation, a portion is always prepared as soon as the rod electrode in the mixer beaker is free (mixer empty). If a valve unit (optional) is fitted, the feeding box valves are continually open.

WARNING!

Beware of the risk of burns on feeding box valves (optional).

During prolonged ad lib mode, any feeding box valves that are fitted become hot. You, or the end user, can burn your fingers or hand when touching these valves.

- ▶ For this reason, push the suction hose directly onto the mixer beaker spout and disconnect the connector from the feeding box valve.

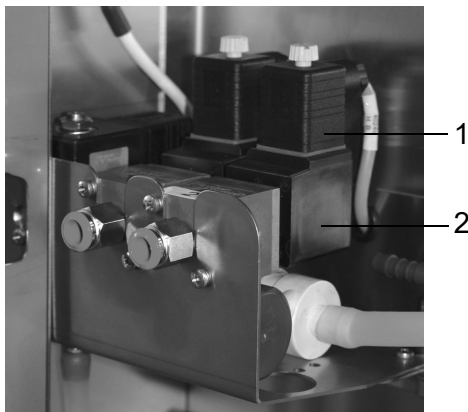


- 1 Device socket
- 2 Feeding box valve

NOTICE!

Cleaning agent that enters the feed can be hazardous to the health of calves.

- ▶ Therefore, always disable all time-controlled cleaning menus and calibrations during ad lib mode.

You set the operating mode as follows:


1. Navigate via  > **Device data** > **Operating modes** to the **Ad lib** sub-menu.
2. Select the option **yes** in the selection box to activate ad lib mode. Choose **no** to select rationed mode.
3. Configure the following lines or, as the case may be, the values for the **Feed concentration** and the **additive dosage**.

Note: These settings are used during the preparation of all feed portions.

4.6.2 Checking and setting time/date

During commissioning, you have to check and, if necessary, correct the time and the date.

Set the time of day, date and date format as follows:

1. Navigate via  > **Device data** to the **Time/date** sub-menu.
2. In **Time**, you enter the current time of day.
3. In **Date**, you enter the current date.

Note: In order to force an immediate daily offset after changing the date, you have to switch the feeder off and then on again.

4.6.3 Setting portion

The automatic feeder and preparation of the feed are designed so that even a milk substitute with a higher fat melting point can be easily processed.

NOTICE!

Feed temperatures that are too low can cause digestion problems in calves and feed temperatures that are too high can cause gastritis in the abomasum.

The temperature of the feed in the mixer beaker must correspond to the mixing temperature specified by the MP manufacturer.

- ▶ Keep to the feed temperatures recommended in this operating manual.


In this menu, you make the following settings for the feed portion:

- They set the set temperature of the feed in the mixer beaker.
- They set the minimum temperature of the water in the boiler.
- They set a pause between the dispensing of two portions.
- In conjunction with the IFS feeding station (optional) they set a portion amount <250 ml and the tolerance values for the concentration.
- They set the parameters for the procedure for discharging the mixer and for the overrun.

4.6.3.1 Setting the set temperature and minimum temperature

Note: The first portion of feed, depending on the ambient temperature, is always mixed somewhat warmer.

This is how you set the set temperature and the minimum temperature:

1. Navigate via  > **Device data** to the **Portion** sub-menu.
2. Enter the desired set temperature in **Set temp.** of the feed in the mixer beaker (= mixing temperature).
3. In the **Min. Temp.**, enter the desired minimum temperature of the water in the boiler.

Enter **Min. Temp. 0** in order to disable the minimum temperature parameter.

4. After entering the temperature, check that the portion is being prepared with the set temperature.

| | Set temperature | Minimum temperature |
|----------------------------|-----------------|------------------------------------|
| Default value: | 42°C | 39°C |
| Permitted range of values: | 10°C to 44°C | 0°C to set temperature minus 0.5°C |

Note: The values that you have entered for set and minimum temperature will be converted to the set and minimum temperature of the boiler water. If the temperature of the boiler water falls below the minimum temperature, the feed preparation will be interrupted until the minimum temperature has been reached again.


4.6.3.2 Dispensing pause

To lengthen the time to prepare the feed, a dispensing pause can be set. As the preparation of a portion starts, the feed station valves will close and stay closed until the dispensing pause is over.

We recommend entering a dispensing pause for:

- milk substitutes with poor solubility,
- very high concentrations (> 200 g/l),
- extreme calf drinking speeds (> 2 l/min).

You set the dispensing pause as follows:



1. Navigate via  > **Device data** to the **Portion** sub-menu.
2. In **Dispensing pause** enter the required value in seconds, from 1-16. The default value is 0.

4.6.3.3 Portion output for entitlement less than 250 ml

If the **SynchroFeed**-functionality (optional) of the automatic feeder is used, for technical reasons the feeder cannot output any portions less than 250 ml. In the event that an animal has drunk the contents of the mixer and still has a small remaining entitlement of less than 250 ml, then there are two options:

- no portion will be prepared for the animal (default setting: **no**)
- A portion of 250 ml will be prepared for the animal. In this way, the animal will get up to 100% of his feed, but will receive a bit more feed (for box with valve) or a small remaining portion (250 ml - remaining entitlement of the animal in ml) stays in the mixer beaker (for box with hose pump).

You can define the amount as follows:

1. Navigate via  > **Device data** to the **Portion** sub-menu.
2. In **Amount < 250 ml**, select either **yes** or **no** and confirm with .

4.6.3.4 Tolerance values for the concentration

If the **SynchroFeed** functionality (optional) of the feeder is used, then the animals all drink at the same time in the boxes, which are supplied in parallel, from the portion mixed in the mixer beaker of the feeder.



If two animals are drinking in parallel and have been assigned different concentration values, the tolerance value for concentration decides whether both animals can drink at the same time or not.

| Tolerance for | Concentration |
|-----------------|---------------------|
| Default value | ± 20 g/ltr |
| Range of values | ± 0 to 50 g/ltr |

For example: A feed with a concentration of 120 g/ltr is prepared for one animal. For a second animal a concentration of 110 g/ltr was agreed. At the default setting of ± 20 g/ltr for the concentration tolerance value, these two animals can share the feed: The difference between the concentration value of the mixed feed (120 g/ltr) and concentration value for the animal's feed plan (110 g/ltr) is less than the agreed tolerance value (± 20 g/ltr).

If on the other hand 0 g/ltr was agreed as the tolerance value, according to preference mode the feed for the latter animal would not be dispensed until after the animal consuming first had consumed his entire portion.

You can define the tolerance as follows:

1. Navigate via  > **Device data** to the **Portion** sub-menu.
2. In the **Tol. Conc.** menu, set the desired value and confirm with .

4.6.3.5 Mixer draining

Feed left over in the mixer must be pumped out. This is done either via the mixer drain valve or the teat. Alternatively, you can choose not to pump out residual amounts at all.

NOTICE!

Leftover feed in the mixer can lead to an increased risk of infection when outdoor temperatures are high (summer). When outdoor temperatures are low (winter), leftover feed in the mixer becomes so cold that calves will no longer drink it.

This can lead to malnutrition. Malnutrition can cause impaired growth and development, increased susceptibility to illness or even death of the calves.


Leftover feed in the mixer beaker provides a perfect breeding ground for germs. You specify the amount of time after which this leftover feed is discarded in order to ensure optimal feed hygiene. Mixer draining may also be followed by a drainage procedure (see the **Cleaning** chapter in the operator's manual for the automatic feeder).

Mixer draining via mixer drain valve

The best and simplest solution is to evacuate the contents of the mixer via the mixer drain valve. You specify whether a mixer drain valve is fitted during setup (see 5.5.1 "Mixer drain" - 64).

Note: The mixer drain valve is included as standard.

Proceed as follows to specify the amount of time after which a remaining portion in the mixer will be pumped out

1. Navigate via  > **Device data** to the **Portion** sub-menu.
2. In **Draining**, enter the desired period in minutes.


| | |
|----------------------------|---|
| Default value: | 15 min |
| Permitted range of values: | 0 min (= draining deactivated), 5 to 120 min |

Mixer draining via teat

Leftover feed can also be pumped out via the **teat** using the **feed pump**. Alternatively, you can choose not to pump out residual amounts at all.


Note: This function only appears if the mixer drain valve is deactivated during setup.

You set mixer drainage via the teat as follows:

1. Navigate via  > **Device data** to the **Portion** sub-menu.
2. In the **Draining via Teat** menu option, specify whether the mixer is to be drained.

4.6.3.6 Mixer run-on time

In the **Mixer run-on time** menu item you can change the run-on time of the mixer and activate or deactivate the mixing of milk portions. Whether and how long the mixer should have a run-on time depends on the solubility of the milk substitute.

1. Navigate via  > **Device data** > **Portion** to the **Mixer run-on time** sub-menu.
2. In **Mixer run-on time**, enter the desired value.


| | |
|----------------------------|--------------|
| Default value: | 3 sec |
| Permitted range of values: | 10 to 60 sec |

4.6.4 Drain time station parameters

In the Feed menu, you can define the drink-out time for each feed station. The drink-out time starts when the rod electrode becomes free for the last portion and ends when the feeding box valve concerned closes or the SynchroFeed pump stops.



If calves do not finish drinking the contents the mixer beaker within the standard setting for drain time, the drain time can be extended.

You can extend the drain time as follows:








1. Navigate via  > **Device data** > **Stations** to the **Feeds** sub-menu.
2. In **Drink-out time**, enter the desired time.


| | |
|----------------------------|--------------|
| Default value: | 16 sec. |
| Permitted range of values: | 10 to 60 sec |

4.6.5 Function keys

The hand terminal has two freely programmable function keys  and . You define which functionality or which menu will be called up when the respective function key is pressed.

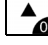You define the function keys as follows:

1. Navigate via  > **Device data** to the **Function keys** sub-menu.
2. Use  or  to go to the desired function, for example **Start mixer**.
3. Confirm with .
4. Choose  or  to choose the symbol of the function key to which the assignment is to be made.
 - 4.1. The list symbol stands for the key .

Note: This key is assigned the animal list by default.
 - 4.2. The hash symbol stands for the key .
 - 4.3. The hyphen [-] in the selection box is used to remove an assignment.

4.6.6 Animal list


In the **Animal list** menu you can list the calves in a table sorted by parameters. The table is sorted in ascending order by the first column of the first parameter. This means that the calf with the greatest need for monitoring is at the very top of the table. The following parameters can be displayed:

- Feed consumption as a percentage
- Feed consumption in liters (today or yesterday)
- Drinking speed as a percentage
- Animal visits
- Break-offs


| | column 1 | column 2 | | | |
|-----------|----------|----------|----|----|--|
| 1/118 | cons. | dr.sp | | | |
| ▶ 799 ↘A2 | 29 | 56 | ✓ | ✓+ | |
| 744 fA1 | 29 | ✓ | ✓+ | ✓+ | |
| 715 →A1 | 50 | 91 | 91 | 91 | |
| 737 ↗A1 | ✓ | 56 | ✓+ | 74 | |
| 742 fA1 | ✓ | 81 | ✓ | ✓+ | |
| 743 →A1 | ✓ | 85 | ✓+ | ✓+ | |
| 795 →D2 | ✓ | ✓ | ✓ | ✓ | |


Note: You can also access the **animal list** directly via the key .

Here is how you define which parameters are displayed in the two columns of the animal list:


1. Navigate via  > **Device data** to the **Animal list** sub-menu.
2. In **Column 1** or **Column 2**, select by choosing   which parameter is displayed in the respective column.

You call up an animal list as follows:

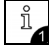
1. Navigate via  to the **Animal list** sub-menu.
2. In the top line, from left to right, you can check the following:

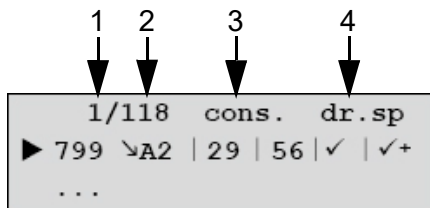

- The number of the calf you have selected in the list, counting from the top (1).
 - How many calves are registered (2).
 - The two parameters you have chosen (3 & 4).
3. You can view the following in the subsequent lines, from left to right:

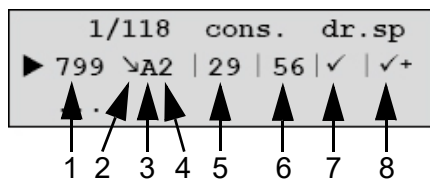




- The animal number (1).
 - The plan tendency (2).
 - The group to which the calf concerned has been assigned (3).
 - The last feeding box visited (4).
 - Parameter 1. The current value (today) is in the column on the left (5). Yesterday's value is in the column on the right (6).
- Note:** The parameter for feed consumption is simply today's value or yesterday's value in liters to two decimal places. The list can be sorted by the parameter feed consumption today in %.
- Parameter 2. The current value (today) is in the column on the left (7). Yesterday's value is in the column on the right (8).



Note: If there is a check mark instead of a number, then the value is 100%. A check mark followed by a plus indicates a value greater than 100% (only for drinking speed and visits).

For example: The calf shown with the number 799 is in the weaning phase (reduced plan tendency), has been assigned to group A and has visited feeding box 2. At present, the calf has only called up 29% of its feed entitlement, yesterday it was only 56%. The current value for drinking speed is 100% (✓); yesterday it was more than 100% (✓+).

4. Choosing  takes you to the detailed view for the animal currently highlighted. By choosing   you can scroll to the other animals.

| | | | |
|------------|-----|-----|---|
| !< 3469>A1 | ↗ | 6.0 | 1 |
| ▶ cons. %: | 25 | 100 | |
| break off: | 1 | 0 | |
| speed. %: | 85 | 100 | |
| visit: | 3 | 6 | |
| C 1 %: | 99 | 100 | |
| weight kg: | 117 | 116 | |
| w. gain: | 600 | 400 | |
| feed. day: | 77 | | |

Note: In each line, pressing  calls up detailed information.

4.6.7 Backing up and restoring data

Every day at midnight, a backup of the **animal data** and **device data** is performed automatically so that in the event of data loss a current backup of the data is available.

NOTICE!

Data can be lost when the program version of the automatic feeder is updated. You must also save the data of the automatic feeder manually, for example to an SD card.


Otherwise, calves may suffer from malnutrition if incorrect feed portions are dispensed. Malnutrition can cause impaired growth and development, increased susceptibility to illness or even the death of your calves.

Note: The automatic feeder performs an automatic data backup every hour. If you make changes and then switch the automatic feeder off, changes made within the last hour are lost. To save the current data, perform an internal data backup.

4.6.7.1 Internal data backup

Backing up data


You back up the data as follows:

1. Navigate via  > **Device data** > **Data backup** to the **Internal (automatic feeder)** sub-menu.
2. Confirm **save?** by choosing .

A progress bar informs you about the current status of the data backup being carried out.

Restoring data


This is how to perform data restoration:

1. Navigate via  > **Device data** > **Data backup** to the **Internal (automatic feeder)** sub-menu.
2. Confirm **Restore?** by choosing .
3. Confirm the security prompt **Restore last backup?** by choosing .

A progress bar informs you about the current status of the data restoration being carried out.

Checking the available data backup

Check the data backup as follows:

1. Navigate via  > **Device data** > **Data backup** to the **Internal (automatic feeder)** sub-menu.
2. In the **last backup** menu, you can view the time and date when the last backup was performed.

4.6.7.2 External data backup using an SD card


During each backup, a folder with the date of the backup is created on the SD card. If **data restoration** is required, a date stored on the SD card can be entered and selected using the number field. The date of the last backup is always shown on the display.

When the feeder is delivered, by default an SD card is fitted in the slot on the hand terminal. The SD card should remain in the hand terminal at all times.




SD card and hand terminal

Proceed as follows to perform a data backup using an SD card:

1. Open the rubber cover on the right side of your hand terminal.
2. Insert the SD card into its slot.
3. Navigate via  > **Device data** > **Data backup** to the **SD card** sub-menu.
4. Confirm **save?** by choosing .

A progress bar informs you about the current status of the data backup being carried out.


This is how to perform data restoration:

1. Navigate via  > **Device data** > **Data backup** to the **SD card** sub-menu.
2. Confirm **Restore?** by choosing to perform a backup.
 - 2.1. If required, enter the date from which you would like to restore the data into the **Date** menu, and confirm this with .
3. In the **Date** menu, you can see when the last data backup was performed.
4. Close the rubber cover.

4.6.7.3 Cloud


In this menu, you can back up data to the CalfCloud.

Perform a backup as follows:

1. Navigate via  > **Device data** > **Data backup** to go to the **Cloud** sub-menu.
2. Confirm **save?** by choosing .


A progress bar informs you about the current status of the data backup being carried out.

This is how to perform data restoration:

1. Navigate via  > **Device data** > **Data backup** to go to the **Cloud** sub-menu.
2. Confirm **Restore?** by choosing to perform a backup.
 - 2.1. If required, enter the date from which you would like to restore the data into the **Date** menu, and confirm this with .
3. In the **Date** menu, you can see when the last data backup was performed.

4.6.8 Cloud

This menu allows you to perform the relevant settings for the cloud.

1. Navigate via  > **Device data** to go to the **Cloud** sub-menu.
2. In **Finish?** you break off the connection to the cloud and therefore stop data transfer.
3. In **start?**, press . You then create the connection between the cloud and the automatic feeder.

You will see the message **You hereby accept the data protection provisions listed on www.calf-cloud.com!**. Press .

4. In **Status**, you can see the current status of the connection to the cloud. The possible statuses are **online**, **offline** or **reconnecting**.
5. In **Auth. token** you can see the authentication key for the automatic feeder.

Note: This token allows you to add the automatic feeder to the cloud data.
6. In **last error** you can view the following error displays:

- 6.1. **none.** There are no errors present.
 - 6.2. **no eth. cable.** No Ethernet cable is plugged in.
 - 6.3. **no Internet.** There is no Internet connection available.
 - 6.4. **connect.error.** There is a connection error to the server.
7. **File Transfer** is only for the manufacturer.

4.6.9 New installation

The program (software) must be completely reinstalled (reset) when commissioning or recommissioning the automatic feeder. This will remove superfluous data as well as outdated or incorrect settings from the memory.


Note: New installation will result in the deletion of the **animal data**. The **transmitter numbers** will be set to zero and the **Device data** will be overwritten with default values.

Animal data is, for example, group membership, barn transfer date, feeding days, consumption totals.

Device data includes portion settings, for example.

4.6.9.1 Only reinstall device data, plans, animal data or transmitter numbers


Proceed as follows to reinstall device data, plans, animal data or transmitter numbers:

1. Navigate via  > **Device data** to the **Reinstallation** sub-menu.
2. Confirm **Device data** by choosing .
3. Confirm **Reinstall device data?** by choosing .
4. Confirm the security prompt **Do you really want to restore the data to factory settings?** by choosing .
The message **Reinstallation completed!** will appear
5. Confirm **Reinstallation completed!** by choosing .
You are back in the **Reinstallation** menu.
6. Perform steps 2 to 5 in the same manner for **plans, animal data** or **transmitters**.

4.6.9.2 Reinstalling everything

You can also reconfigure all menus instead of individual menus.

Reconfigure all menus as follows:

1. Navigate via  > **Device data** to the **Reinstallation** sub-menu.
2. Confirm **Everything** by choosing .
3. Confirm **Reinstall everything?** by choosing .
4. Confirm the security prompt **Do you really want to restore the data to factory settings?** by choosing .

The message **Reinstallation completed!** will appear

5. Confirm **Reinstallation completed!** by choosing .



You are back in the **Reinstallation** menu.

Note: The settings in the feeder setup are not changed by **Reinstallation**.

4.6.9.3 In the event of a fault

If the data are corrupted and the automatic feeder no longer boots up or no longer boots up correctly, for instance when the feeder continually reboots, there is a facility to recreate the available data.

Reconfigure the automatic feeder as follows:

1. Press  +  and keep these keys pressed when you switch on the feeder.

When the boot loader is reset, the database, following the display instructions is deleted. The data from the FRAM are then transferred back.

4.7 Software updates



To update the application program, depending on the equipment, you have a choice available between an SD card, FTP Manager or CalfCloud.

The options available for your equipment can be seen in the dealer area of Förster-Technik's web site www.foerster-technik.de.

4.7.1 Software update via SD card

The SD card update is performed using the SD card in the hand terminal, and includes updating of all CAN participants. If an update of the ActivityBox and the MultiReader detector is required this must be performed separately.


Proceed as follows to perform a data update using an SD card:

1. Insert an empty SD card into the slot in the hand terminal.
2. Navigate via  > **Device data** > **Data backup** to the **SD card** sub-menu.
3. Confirm **save?** by choosing .

A progress bar informs you about the current status of the data backup being carried out.

4. Remove the SD card.



Note: The data backup that is performed serves as a backup in the event of problems.

5. Switch the automatic feeder off.
6. Press  and keep this key pressed when you switch on the feeder.



After a short time, the **Setup menu** will appear in the display.

7. Insert the SD card carrying the update data into the slot in the hand terminal.

The device will start the update procedure automatically. Wait a few minutes, and press no further keys during this time.

8. Once you see the message **update successful** on the display, the automatic feeder has been updated. Press , to continue.
9. Once you see the message **SDCard can be removed, press Enter to proceed**, remove the SD card and once again press .

Proceed as follows to perform an update of the ActivityBox and the MultiReader detector:







1. Insert the SD card carrying the update data into the slot in the hand terminal.
2. Navigate via  > **Device Data** > **Software Update** to the **ActivityBox** or **MultiReader** sub-menu.
3. In **Start Software Update?**, press , to start the update.



Once the update has been completed, the current program version is shown in the display.

4. Remove the SD card.

4.7.2 Software update via cloud

You can perform a software update via the CalfCloud. For this a connection to the Internet must be available.

1. Before the update, perform an internal data backup (see 4.6.7.1 "Internal data backup" - 52).
2. Navigate via  > **Device data** > **Software Update** to go to the **Cloud** sub-menu.
3. In **Release (official)**, update the automatic feeder to the current software version.
 - 3.1. Confirm **Start?** by choosing . The automatic feeder will automatically seek out the current version.
 - 3.2. If there is a version available for the **automatic feeder**, the message **Feeder update available...** will appear **Press <Enter> to download and install the new firmware!**. Confirm with , to start the download.
 - 3.3. If there is a version available for the **peripheral devices**, the message **Peripherals update available...** will appear **Press <Enter> to download and install the new firmware!**. Confirm with , to start the download.
 - 3.4. Once the download has been completed, the message **Download completed** will appear. **Press <Enter> to start installation.** Confirm with , to start the update.
4. In **Beta (test version)**, update the automatic feeder to the current test version.
 - 4.1. In **beta code** enter the code which you have received from Förster-Technik.
 - 4.2. If there is a version available for the **automatic feeder**, the message **Feeder update available...** will appear **Press <Enter> to download and install the new firmware!**. Confirm with , to start the download.

- 4.3. If there is a version available for the **peripheral devices**, the message **Peripherals update available...** will appear **Press <Enter> to download and install the new firmware!**. Confirm with , to start the download.
- 4.4. Once the download has been completed, the message **Download completed** will appear. **Press <Enter> to start installation.** Confirm with , to start the update.

4.7.3 Software update via internal (automatic)







The expert menu **Device data > Software Update > Internal (automatic)** is intended for use by the manufacturer. By this means a software update can be performed via a micro SD card in the control box of the automatic feeder and the FTP Manager.

4.8 Reinstallation

In the event of a fault in the course of reinstallation, delete all the data saved on the automatic feeder.

All the device data, plans and medicine formulations will be reset to factory settings and all animal data and transmitters deleted.

Perform a reinstallation as follows:

1. Switch the automatic feeder off.
2. Press  +  and keep the key depressed whilst you switch the automatic feeder on and wait until the message **Reinstallation** appears in the display.
3. Confirm with , to continue. The automatic feeder will restart and all the data will be deleted.
4. Set the desired **language** and confirm it with .
5. Set the current **date** and confirm it with .
6. Set the current **time** and confirm it with .

The automatic feeder will switch to the **Setup menu**.





7. Read the **ID chip**.
8. Check the setup settings as follows:

All the device data, plans and medicine formulations were reset to factory settings and all animal data and transmitters were deleted.
9. Perform a data restoration (see 4.6.7 "Backing up and restoring data" - 52) and set up the automatic feeder.

5. Setup

The program menus in the setup menu contain basic settings, e.g. for the equipment of the automatic feeder. Check to ensure that the settings are correct.

You open the setup menu as follows:

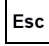1. Press  and keep this key pressed when you switch on the feeder.
After a short time, the Setup menu will appear in the display.
2. If you want to change settings, go to the relevant menu option and make the changes.
3. Confirm the changes with .
4. To exit setup, repeatedly press , until the message **End setup?** appears. Confirm with .

Note: Also observe the operating manual for the automatic feeder.

5.1 Overview of the Setup menus

| | | |
|--------------------|------------------------|------------------------------------|
| Language | German | |
| Time/date | Time / date | |
| Machine | Type | Powder |
| | Number | 1 - 99 (= machine number, decimal) |
| | Address | 2-FC (= CAN address, hexadecimal) |
| | System | Interval (IV) |
| | Operating mode | SA |
| | Base size | 500 ml |
| | Heating system | electronic |
| | Boiler valve | Brass |
| | HE valve | Brass |
| Equipment | Mixer drain | yes |
| | ⊕ Additive dispenser 1 | yes / no |
| | ⊕ Additive dispenser 2 | yes / no |
| | ⊕ Flushing agent 1 | yes |
| | ⊕ Flushing agent 2 | yes / no |
| | SP 1 sensor | no / rod |
| | ⊕ Powder sensor | yes / no |
| | Circulation valve | Valve / no |
| | Gully valve 2 | yes / no |
| | ⊕ Air valve | yes / no |
| | Mix. sensor T. | yes |
| | Water meter | yes |
| | Supply electrode | yes |
| Point electrode | yes | |
| Identification | Type | Multi / Tiris / Ned |
| | Squelch | 0 - 255 |
| ID chip | activated | yes |
| | read? | |
| Calibration scales | activated (yes / no) | |
| | adjust? | |
| | Cal. factor | |
| | Date | |
| Stations | Feed | <internal 1>, <internal 2> |
| | | <IFS feed 1 .. 8> |
| | | <IFS feed 4-fold 1, 2> |
| | | CalfRail |

| | | |
|---------------|-----------------------|--|
| | | CR water heating system |
| | Concentrate | <IFS concentrate feeder 1 .. 8> Allocation: [C-station 1 .. 8] Address: 51 - 60 Type: Standard |
| | Animal scales | Activate Adjust |
| Terminal | Address | 1-FC (= CAN address, hexadecimal) |
| | Contrast | 70% |
| | Sleep mode | 0 - 999 min |
| Communication | ➕Printer | no / serial / CAN |
| | Network configuration | M: M-ECN: IP: 0-255 . 0-255 . 0-255 . 0-255 SN: 0-255 . 0-255 . 0-255 . 0-255 GW: 0-255 . 0-255 . 0-255 . 0-255 IP assignment: DHCP / static accept? |
| | Cloud | start? |
| | ➕Gateway | MAC: IP: 0-255 . 0-255 . 0-255 . 0-255 SN: 0-255 . 0-255 . 0-255 . 0-255 IP assignment: manual / autom. Factory settings? |
| | MultiReader | No Version update MultiReader? Temperature Read transponder -type / -country / -no Squelch Resets Restarts |
| | Restart | Restart? |
| SD card | Feeding plans | Feeding plans read in / active / changed |
| | | Institute / Logger / File transfer |

| | |
|---------|---|
| Service | Initial installation: Date last: Date Type: RS1 / RS2 / RS3 next: Date Type: RS1 / RS2 / RS3 Service done? |
|---------|---|

5.2 Language

You select the language for the user interface of the feeder as follows:

1. In the setup menu, choose the **Language** option.
2. Select the desired language for the user interface.
3. Confirm your entry with .

5.3 Time/date

Enter the time of day and the current date as follows:

1. In the setup menu, choose the **Time / date** option.
2. Enter the current **time** and the **current date**.
3. Confirm your entry with .

5.4 Machine

5.4.1 Feeder type


There are three different types of automatic feeder:

- **Powder:** feeds MP water mixtures.
- **Combi:** feeds fresh milk as well as MP water mixtures.
- **Milk:** feeds fresh milk only.

Leave the factory default value as it is.

NOTICE!

Even if you want a combined feeder to dispense MP feed only, you must select Combi for the feeder type. If you choose Powder, the feeder will malfunction.

- ▶ You set what liquid animal feed or which combination of liquid animal feeds only by  **Device data > Operating modes > Feed.**

5.4.2 Automatic feeder number

For the KalbManagerWIN program (optional additional equipment) to access the automatic feeder's software, the automatic feeder needs a number. Number 1 is set by default.

Note: When connecting more than one automatic feeder, be sure that each number is only assigned once.

You select the feeder number as follows:

1. In the setup menu, choose the **Machine** option.
2. In **Number**, you select a number.
3. Confirm your entry with .

5.4.3 Automatic feeder address

For unique identification, every participant of the CAN bus system needs an address.

| Address ranges for CAN participants | |
|-------------------------------------|------------------------------|
| 1-10 | => hand terminal |
| 11-20 | => automatic feeder |
| 21-30 | => Forefoot weighing machine |
| 41-50 | => IFS feed single |
| 51-60 | => IFS-C |
| 61-70 | => IFS feed 4-fold |
| 71-79 | => CalfRail |

You select the feeder address as follows:

1. In the setup menu, choose the **Machine** option.
2. In **Address**, you select an address.
3. Confirm your entry with .

Note: If you select an address that has already been assigned, the message **Address already assigned!** will appear in the display.

5.4.4 Feeder operating modes

Please leave the factory set value **SA** (= StandAlone) unchanged.

5.4.5 Base size

The set value determines:

- The set quantity for calibrating the **Water Boiler**.
- The standard portion size.

You define the size as follows:

1. In the setup menu, choose the **Machine** option.
2. In **Base size**, enter 500.
3. Confirm your entry with .

5.4.6 Heating system

Here you specify whether the feeder has a heating system and, if so, what type of **heating relay** it has.

You set the heating type as follows:

1. In the setup menu, choose the **Machine** option.
2. In **Heating**, select **electronic**.
3. Confirm your entry with .

5.4.7 Boiler valve

Please do not change the factory setting **brass**.

5.5 Equipment

Here you specify whether the automatic feeder is equipped with certain components or options.

5.5.1 Mixer drain

The contents of the mixer are drained fully automatically via the mixer drain valve. The mixer drain valve is included as standard.

This is how to activate the mixer drain valve:

1. In the setup menu, open the **Equipment** menu item.
2. In **Mixer**, select **yes**.
3. Confirm your entry with .

5.5.2 Additive dispenser

Up to two additive dispensers can be connected to the automatic feeder.

You activate the additive dispenser as follows:

1. In the setup menu, open the **Equipment** menu item.
2. In **Add. disp. 1** select **yes** if there is an additive dispenser, otherwise choose **no**.
3. Confirm your entry with .
4. In **Add. disp. 2** select **yes** if there is a second additive dispenser, otherwise choose **no**.
5. Confirm your entry with .

5.5.3 Flushing agent 1

Flushing agent is fully automatically dispensed via the flushing agent pump during a cleaning cycle.

This is how to activate flushing agent 1:

1. In the setup menu, open the **Equipment** menu item.
2. In the **Flushing agent 1** menu, choose **yes** if there is a flushing agent pump for flushing agent 1 (alkaline) fitted, otherwise choose **no**.
3. Confirm your entry with .

5.5.4 Flushing agent 2

You can connect a second flushing agent pump for cleaning with acid flushing agent.

This is how to activate flushing agent 2:

1. In the setup menu, open the **Equipment** menu item.
2. In the **Flushing agent 2** menu, choose **yes** if there is a flushing agent pump for flushing agent 2 (acid) fitted, otherwise choose **no**.
3. Confirm your entry with .

5.5.5 Flushing agent sensor

If the level in the container for cleaning agent 1 is detected by a float switch mounted on a filling level rod, set **Rod**. If no flushing agent sensor is fitted, set **no**.

5.5.6 Powder sensor

The powder sensor, outputs a warning if the level of MP in the container is lower than the sensor. If the sensor reports container empty for 10 portions in succession, **Warning, top up MP** will appear.

You activate the powder sensor as follows:

1. In the setup menu, open the **Equipment** menu item.
2. In **Powder sensor**, choose **yes** if there is a powder sensor fitted, otherwise choose **no**.
3. Confirm your entry with .

5.5.7 Circulation valve

Please do not change the factory setting [**no**].

5.5.8 Gully valve 2

Here you enter whether the automatic feeder is equipped with a ball valves for automatic hose cleaning.

You activate the Gully valve 2 as follows:

1. In the setup menu, open the **Equipment** menu item.
2. In **Gully valve 2**, choose **yes** if there is a valve fitted, otherwise choose **no**.

3. Confirm your entry with .

5.5.9 Air valve

The air valve is part of the compressed air cleaning system.

5.5.10 Mixer temperature sensor

The temperature sensor in the mixer continually records the temperature of the feed in the mixer beaker. If the temperature deviates from the set value, the boiler heater is adjusted to compensate. The feed always has the desired temperature, regardless of the season. The temperature sensor is included as standard.

You activate the mixer temperature sensor in the mixer as follows:

1. In the setup menu, open the **Equipment** menu item.
2. In **Mix. Sensor T.**, choose **yes** if there is a temperature sensor fitted, otherwise choose **no**.
3. Confirm your entry with .

5.5.11 Water meter

Please do not change the factory settings [**yes**].

5.5.12 Supply and point electrode

You activate the electrodes as follows:

1. In the setup menu, open the **Equipment** menu item.
2. In the **Elec. Supply** menu, select [**no**] and in the **Elec. Point** menu, select [**yes**].
3. Confirm your entry with .

5.6 Identification

Here you set the identification system:

The input or reading sensitivity of the identification system is set via the squelch value. The larger the entered value, the lower the range of the identification (see 3.6 "Connecting the antennas" - 26).

You set the identification system as follows:

1. In the setup menu, open the **Identification** option.
2. In the **Type** menu, select the identification system **Multi**, **Tiris** or **Ned**.
3. In **Squelch**, select the squelch value.
4. Confirm your entry with .

5.7 ID chip

Before delivery, the ID chip is configured with the Setup settings for the automatic feeder. These are saved in non-editable form. This means you can restore the original settings of the setup at any time. For example, this may be necessary if you have accidentally changed a setting or the processor board has to be replaced.

You set the ID chip as follows:

1. In the setup menu, choose the **ID chip** option.
2. In **activated**, you must specify **yes** because the automatic feeder is equipped with an ID chip.
3. Confirm **read?** by choosing , if you wish to transfer the data from the ID chip to the processor board.
4. Confirm your entry with .

Note: Include retro-fitted items and peripherals at this point.

5.8 Calibration scales

You activate the calibration scales as follows:

1. In the setup menu, open the **Calibration scales** option.
2. In **activated** choose **yes** if calibration scales have been installed.
3. Confirm your entry with .
4. In **adjust?**, press , to adjust the calibration scales.
5. The adjustment process begins with the taring of the calibration scales. You will be informed of this in the message **calibration scales are being tared**.
6. A menu appears where you need to enter the reference weight in grams that you require for the adjustment. If necessary, adapt the respective value in this menu (default value: 500 g).
Note: A 500 g reference weight is included in the delivery.
7. Place the reference weight with the hole on the screw in the feeding box such that it is fixed in place, and then press , to start the adjustment process.
8. After completing the adjustment process, a corresponding message about the success or lack of success of the adjustment will be issued. At the same time, the currently determined weight value will be shown. After removing the calibration weight, 0 grams should be shown here.
9. Press . **Date** now shows the current date.

5.9 Stations

Activate the feed or concentrate station and define the additional equipment for these stations or any additional equipment in the **Stations** menu.

5.9.1 Feed

You set the feeding box as follows:

1. In the setup menu, choose the **Stations > Feed > Internal** option.
2. Choose **intern 1** or **intern 2**.
3. In the **Allocation** menu, select the feeding box to be allocated to the internal control system.
4. Confirm your entry with .

5.10 Terminal

5.10.1 Address

The hand terminal is integrated into the CAN bus system of the automatic feeder. That is why it needs its own address. **Address 1** is set by default.

Note: In a CAN bus system, each address may only be assigned once.

You set the address as follows:

1. In the setup menu, choose the **Terminal** option.
2. In **Address**, select [1].
3. Confirm your entry with .

5.10.2 Contrast

You set the contrast as follows:

1. In the setup menu, choose the **Terminal** option.
2. In **Contrast**, enter the desired value. The default value is 60%
3. Confirm your entry with .

5.10.3 Sleep mode

If no key has been pressed on the hand terminal for a fairly long period of time, it will switch to sleep mode. If the hand terminal is in sleep mode, the Förster-Technik logo will appear in the display.

You set sleep mode as follows:

1. In the setup menu, choose the **Terminal** option.
2. In **Sleep mode**, enter the desired value. The default value is 10 minutes. To deactivate sleep mode, set [0] minutes.

3. Confirm your entry with .

5.11 Communication

5.11.1 Printer

Current animal lists can be generated via the automatic feeder's printer function.

- **Serial:** Select this option if you have connected a printer to the automatic feeder via the serial interface.
- **CAN:** Select this option if the printing data is to be sent via the CAN bus. In this case, a PC program will play the counterpart.

5.11.2 Network configuration

Here you can configure all parameters of the network.

- **(M) MAC address:** Here you can see the MAC address of your network. Your processor card is uniquely identified via its MAC address. This address cannot be changed.
- **M-ECN:** Here the check sum of the MAC address is displayed.
- **(IP) IP address:** Here you can see the IP address of your processor card and if necessary change it.
- **(SN) Subnet mask:** Here you can see the subnet mask of your network and if necessary change it.
- **(GW) Gateway:** Here you can see the IP address of your gateway and if necessary change it.
- **IP assignment:** If you set the value here to **DHCP**, your processor card will try to get its IP address from a DHCP server in your network. If you select **static** here, you will have to set the IP address of your processor card yourself, in consultation with your IT specialist.
Note: If after 10 seconds no IP address has been set by the DHCP server, the IP address 169.254.2.1 will be used automatically.
- **Accept?:** Press here . The data will be saved.

5.11.3 Cloud

Here you can change the values for the CalfCloud and the automatic feeder's Internet connection to the cloud.

1. In **start?**, press . You then create the connection between the cloud and the automatic feeder.
2. You will see the message **You hereby accept the data protection provisions listed on www.calf-cloud.com!**
3. Press . The error menu **last error** will appear.
 - **none.** There are no errors present.
 - **no eth. cable.** No Ethernet cable is plugged in.
 - **no Internet.** There is no Internet connection available.
 - **connect.error.** There is a connection error to the server.

4. In **Finish?** you break off the connection to the cloud and therefore stop data transfer.
5. In **Status**, you can see the current status of the connection to the cloud. The possible statuses are **online**, **offline** or **reconnecting**.
6. In **Auth. token** you can see the authentication key for the automatic feeder.
Note: This token allows you to add the automatic feeder to the cloud data.

5.11.4 Gateway

Here you can configure all relevant parameters of the Förster gateway (optional).

- **(M) MAC address:** You can see the MAC address of your gateway here. Your gateway is uniquely identified via its MAC address. This address cannot be changed.
- **(IP) IP address:** You can see the IP address of your gateway here and, if need be, change it. You will need this value to register your feeder at the CalfManagerWIN or in connection with the communication module.
- **(SN) Subnet mask:** You can see the subnet mask of your gateway here and, if need be, change it.
- **IP assignment:** If the value here is **automatically** set, then your gateway will try to get its IP address from a DHCP server in your network. If you select **manual** here, then you will have to set the IP address of your gateway yourself.
- **DHCP status** (only in connection with the automatic assignment of IP addresses): This line gives you information about the internal status when getting the automatically assigned IP address. There are five statuses that can occur: OK, waiting, off, on and unknown (=n/a).
- **Factory settings:** If you call up this item and confirm the security query which then appears, the values of your gateway for the IP address, the subnet mask and the manual or automatic procurement of the IP address will be reset back to the factory settings.

5.11.5 MultiReader

Here you can call up information about the connected MultiReader calf identification system.

- **Version** shows the current version of the MultiReader identification system.
- If in the Update menu you press you can update the MultiReader identification system.
Note: To update the MultiReader identification system, you may have to first update the automatic feeder.

5.11.6 Restart

Here you can restart the automatic feeder.

6. Calibration

The first calibration is performed by your service technician during commissioning.

You must manually recalibrate powder and liquid feed and cleaning agents because the actual quantity will deviate from the set quantity for various reasons, such as fluctuations in water pressure.

If your automatic feeder is equipped with calibration scales, water and MP are automatically calibrated every day. You need manually recalibrate only the cleaning agent and additives as necessary. You must also recalibrate after every new delivery of milk substitute.

NOTICE!

If you do not recalibrate your automatic feeder on a regular basis, your calves will receive insufficient or improperly mixed feed.

This will cause malnutrition. Malnutrition can cause impaired growth and development, increased susceptibility to illness or even the death of your calves.

Calibration involves several steps:

- The volume of the liquid components (water, cleaning agents and additives) is determined.
- The weight of the powder components (milk substitute, additives) is determined.


If your automatic feeder does **not** have **automatic calibration scales** you must provide the following items for the calibration:

- 1 Measuring cylinder with ml graduations (capacity about 1 liter).
- 1 scales (weighing accuracy 1 g).
- 1 vessel for collecting milk substitute.

6.1 Calibrating without calibration scales

You determine the actual value using scales and a graduated cylinder and the program will prompt you to enter this value using the number keys.

Proceed as follows to calibrate liquid components without calibration scales:


1. Navigate via  > **Calibration** to the **Components** sub-menu.
2. In the **Water** menu, you calibrate water.
 - 2.1. Confirm **Water** by choosing .
 - 2.2. **Set qty** shows the quantity of water to be dispensed by the automatic feeder.
 - 2.3. **Runtime** shows the time in which the automatic feeder should dispense the water.
 - 2.4. **Date** shows when the water was last calibrated.
 - 2.5. Tilt the drained mixer forwards and hold the measuring cylinder under the discharge.
 - 2.6. Confirm **Start?** by choosing .
 - 2.7. Confirm **Exit automatic mode?** by choosing . This message will only be displayed if your automatic feeder is still in automatic mode.

Water is dispensed.

- 2.8. Tilt the mixer so that the water flows into the graduated cylinder. Measure the collected water in milliliters.
- 2.9. In the **Actual** menu, enter this measured quantity using the number keys.
- 2.10. Confirm with .
- 2.11. **Date** now shows the current date.
- 2.12. Repeat the calibration to check your results.

3. Calibrate other **liquid components** using the same method.


Proceed as follows to calibrate powder components without calibration scales:

1. Navigate via  > **Calibration** to the **Components** sub-menu.
2. In the **MP** menu, you calibrate the milk substitute.
 - 2.1. Confirm **MP** by choosing .
 - 2.2. **Set quantity** shows the amount of milk substitute (MP) to be dispensed by the automatic feeder.
 - 2.3. **Runtime** shows the time in which the automatic feeder should dispense the MP.
 - 2.4. **Date** shows when MP was last calibrated.
 - 2.5. Tilt the empty mixer forward.
 - 2.6. Hold the container for the MP under the powder discharge.
 - 2.7. Confirm **Start?** by choosing .
 - 2.8. Confirm **Exit automatic mode?** by choosing . This message will only be displayed if your automatic feeder is still in automatic mode.
Powder will be dispensed.
 - 2.9. Place the container with the collected MP on the scales.
 - 2.10. In the **Actual** menu, enter the weighed quantity using the number keys.
 - 2.11. Confirm with .
 - 2.12. **Date** now shows the current date.
 - 2.13. Repeat the calibration to check your results.
3. Calibrate other **powder components** using the same method.

6.2 Calibrating with calibration scales

The automatic feeder determines the actual value using the built-in automatic calibration scales (additional equipment).

Proceed as follows to calibrate liquid components using the calibration scales:


1. Navigate via  > **Calibration** to the **Components** sub-menu.
2. In the **Water** menu, you calibrate water.
 - 2.1. Confirm **Water** by choosing .
 - 2.2. **Set qty** shows the quantity of water to be dispensed by the automatic feeder.
 - 2.3. **Runtime** shows the time in which the automatic feeder should dispense the water.

- 2.4. **Date** shows when the water was last calibrated.
- 2.5. Confirm **Start?** by choosing . The calibration procedure will start. The set value of 500 ml will be shown first in the display.
- 2.6. Confirm **Exit automatic mode?** by choosing . This message will only be displayed if your automatic feeder is still in automatic mode.

The device now performs two check weighings without the user having to do anything and shows the result.
- 2.7. Then the average value of these two control weighings is shown flashing in the displayed line. Confirm with . You then return to the calibration menu.
- 2.8. **Date** now shows the current date.
- 2.9. Repeat the calibration to check your results.

3. Calibrate other **liquid components** using the same method.

Proceed as follows to calibrate powder components using the calibration scales:


1. Navigate via  > **Calibration** to the **Components** sub-menu.
2. In the **MP** menu, you calibrate the milk substitute.
 - 2.1. Confirm **MP** by choosing .
 - 2.2. **Set quantity** shows the amount of milk substitute (MP) to be dispensed by the automatic feeder.
 - 2.3. **Runtime** shows the time in which the automatic feeder should dispense the MP.
 - 2.4. **Date** shows when MP was last calibrated.
 - 2.5. Confirm **Start?** by choosing .
 - 2.6. Confirm **Exit automatic mode?** by choosing . This message will only be displayed if your automatic feeder is still in automatic mode.
 - 2.7. Place the calibration box into the mixer beaker and confirm the prompt **Calibration box used?** by choosing .

MP will be dispensed into the calibration beaker.

The device now performs two check weighings without the user having to do anything and shows the result.

 - 2.8. Then the average value of these two control weighings is shown flashing in the displayed line. Confirm with . You then return to the calibration menu.
 - 2.9. **Date** now shows the current date.
 - 2.10. Remove the calibration beaker from the mixer beaker.
 - 2.11. Repeat the calibration to check your results.

Proceed as follows to calibrate the cleaning agent using the calibration scales:

1. Navigate via  > **Calibration** to the **Components** sub-menu.
2. In the **Flushing agent** menu, you calibrate the cleaning agent.
 - 2.1. Confirm **Flushing agent** by choosing .

- 2.2. **Set qty** shows the quantity of cleaning agent to be dispensed by the automatic feeder.
- 2.3. **Runtime** shows the time in which the automatic feeder should dispense the cleaning agent.
- 2.4. **Date** shows when the cleaning agent was last calibrated.
- 2.5. Confirm **Start?** by choosing .
- 2.6. Confirm **Exit automatic mode?** by choosing . This message will only be displayed if your automatic feeder is still in automatic mode.
- 2.7. Place the calibration box into the mixer beaker and confirm the prompt **Calibration box used?** by choosing .

Cleaning agent will be dispensed into the calibration beaker.

- 2.8. The device now performs two check weighings without the user having to do anything and shows the result.
 - 2.9. Then the average value of these two control weighings is shown flashing in the **displayed line**. Confirm with . You then return to the calibration menu.
 - 2.10. **Date** now shows the current date.
 - 2.11. Remove the calibration beaker from the mixer beaker.
 - 2.12. Repeat the calibration to check your results.
3. If the automatic feeder is equipped with a second cleaning agent pump, also calibrate the **Flushing agent 2**.


 **WARNING!**

Risk of injury and death!

Never mix alkaline and acidic cleaning agents, since this may cause a dangerous chemical reaction. Dangerous gases may be produced and cause serious breathing difficulties. They may also cause explosions.

- ▶ Empty the calibration beaker and rinse it out with clean water before using it to calibrate the second cleaning agent.
-


7. Transmitter and animal management

All menus for management of the list of all transmitters and the calves registered at the feeder can be found via  > **Animal management**.

7.1 Managing the transmitters

7.1.1 Basics

7.1.1.1 Identification process at the station

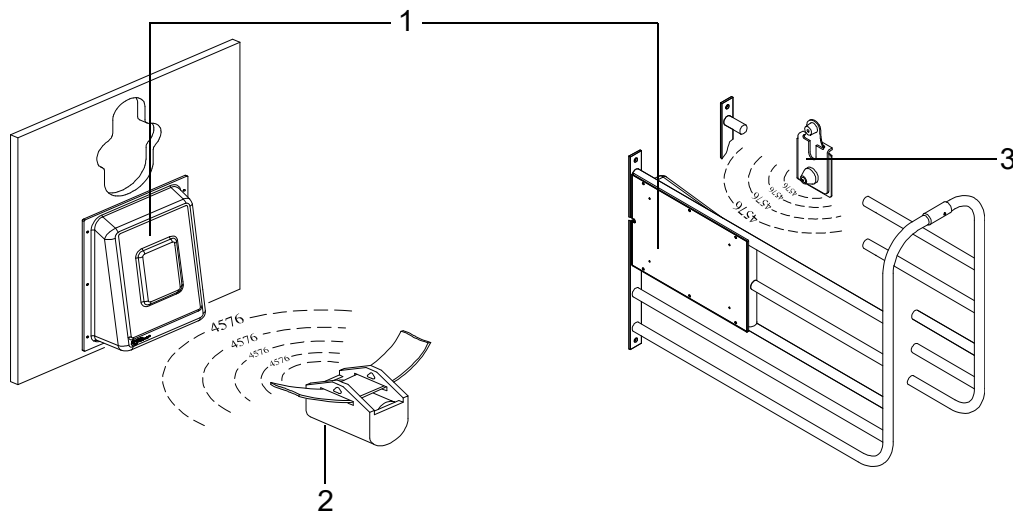

- 1 Antenna
- 2 Collar transmitter
- 3 Earmark transmitter

For identification purposes, each calf wears a collar with a transmitter or an earmark with a transmitter. The transmitter has a multi-digit number, which is also usually stamped into the transmitter housing. This **transmitter number** is sent from the transmitter to the antenna, which is part of the feeding box.

Note: Calves without collars should never be in the bay. They could push other animals out of the way and steal remaining amounts of feed.

Connection of transmitters and animal numbers

The multi-digit transmitter number is not well suited for the rapid location of individual calves. For this reason, a calf is issued an animal number along with the transmitter number. The animal wears this animal number on an easily readable collar, or the animal number is put on the earmark where it can be easily read. Up to 250 different animal numbers of up to six digits can be assigned to the calves.

7.1.2 Creating transmitter numbers

When the feeder is being commissioned, existing transmitters have to be created once in the system. When you do this, each transmitter number is assigned one animal number of no more than six digits. These animal numbers are then available and can be used to register the calves.

7.1.3 Reading transmitter numbers

When creating new transmitter numbers, it is a good idea to have these read by the feeder. This saves you from typing in the numbers and eliminates the possibility of typing errors.

You read transmitter numbers in the automatic feeder as follows:

1. Navigate via  > **Animal management** > **Transmitters** to the **New** sub-menu.

2. Hold a transmitter next to the identification unit of a feeding box.

The number of the transmitter will be read in and displayed in the line after **No. †**. At the same time, the animal number to be newly assigned will be suggested in the **Animal no.** line.

Note: You can affect the suggested animal number by selecting in the **No.** line **automatic** or **sequential** as the scheme for assigning the animal numbers (see 7.1.5 "Assigning animal numbers" - 76).

3. Check whether the suggested **animal number** is correct and if so go to the line **accept?** and press .

Note: Make sure that in **Station** you select the feeding box within which you have located the transmitter which you have identified.

4. In order to allocate the newly read transmitter number to the displayed animal number, confirm the security prompt **Create new no. xxx for animal xx?** by choosing .

7.1.4 Manually entering transmitter numbers

Instead of reading the transmitters, you can also manually type in the transmitter numbers, if necessary

You manually enter transmitter numbers as follows:

1. Navigate via  > **Animal management** > **Transmitters** to the **New** sub-menu.

2. Enter the transmitter number in the **No. †** menu and confirm it by choosing .

3. In the **Animal No.** menu, check the suggested animal number and confirm it by choosing .

4. Confirm **accept?** by choosing .

5. In order to allocate the input transmitter number to the displayed animal number, confirm the security prompt **Create new no. xxx for animal xx?** by choosing .


7.1.5 Assigning animal numbers

If the transmitter numbers are automatically read when new numbers are created, an animal number will be automatically suggested. When doing this, there are two schemes to choose from for the assignment of numbers.

7.1.5.1 Consecutive assignment of animal numbers

There is a counter which counts up for each new transmitter number as it is read. In this way, all of the transmitter numbers that are registered by the identification function are linked to consecutive animal numbers; e.g., from 1 to 50.

You set up consecutive assignment of animal numbers as follows:


1. Navigate via  > **Animal management** > **Transmitters** to the **New** sub-menu.
2. Select the **consecutive** option in **No.**
3. If necessary, in the **next** menu, specify the animal number at which you want automatic reading of transmitters to start.

Note: If you use collars, it makes sense to start with 1 and read in the transmitters in order.

7.1.5.2 Assignment of animal numbers based on transmitter numbers

More and more often, calves are already equipped with an electronic earmark transmitter when they are born and keep this earmark their whole lives. The automatic feeder program has been adapted for this type of transmitter so that the registration process of the transmitters and calves can take place completely automatically.

You set up automatic assignment of animal numbers as follows:

1. Navigate via  > **Animal management** > **Transmitters** to the **New** sub-menu.
2. Select the **automatic** option in **No.**
3. In the **Range** menu, define the part of the transmitter number that you would like to use as the animal number. The animal number can have a maximum of six digits.

For example: **5-2** means that, counting from the right, the second to the fifth digits of the transmitter number will be used as the animal number. **6-1** means that, counting from the right, the first to the sixth digits of the transmitter number will be used as the animal number.



7.1.6 Editing transmitters or animal numbers

If necessary, (e.g., if a transmitter is lost), a transmitter number can be subsequently changed or deleted.

7.1.6.1 Changing the transmitter number


Manually changing the transmitter number

You manually change a transmitter number as follows:

1. Navigate via  > **Animal management** > **Transmitters** to the **Edit** sub-menu.
2. Select the transmitter number to be changed.
3. Change the transmitter number in the **No.** menu and confirm by choosing .


Reading the new transmitter number for the change

You read a new transmitter number as follows:

1. Navigate via  > **Animal management** > **Transmitters** to the **Edit** sub-menu.
2. Select the transmitter number to be changed.
3. Confirm **read?** by choosing .
A new menu is displayed, and the transmitter number flashes in the first line.
4. Hold the transmitter that you want to read next to the identification unit.
The number is automatically accepted in the first line.
5. Confirm **accept?** by choosing .


7.1.6.2 Changing the animal number

Like the transmitter number, the animal number can also be changed.

1. Navigate via  > **Animal management** > **Transmitters** to the **Edit** sub-menu.
2. Select the animal number you would like to change.
3. In the **Animal No.** menu, change the animal number that is currently allocated to the transmitter and confirm by choosing .

7.1.6.3 Deleting transmitter numbers


You delete transmitter numbers as follows:

1. Navigate via  > **Animal management** > **Transmitters** to the **Edit** sub-menu.
2. Select the transmitter number to be deleted and confirm **Delete** by choosing .

Note: You can only delete transmitter numbers of calves that are not registered (= status: available).

7.1.7 Deleting the transmitter number when canceling an animal


Generally, the collars (or earmarks) with the respective transmitters remain at the organization and are reused after the calf is taken out of the pen and its registration is canceled. For this reason, the default setting when canceling the registration of a calf is to not delete its transmitter number. If the calf's transmitter is, however, **not** reused but rather stays with the calf, (lifelong earmark), make the following setting in the feeder:

1. Navigate via  > **Animal management** > **Cancellation** to the **Settings** sub-menu.
2. Select the **yes** option in the **Delete no.** menu

When a calf's registration is canceled, the transmitter number is also deleted along with the animal number. This prevents an accumulation of unused transmitter numbers, which would use up the available storage space.

7.1.8 Calling up the transmitter statistics

You call up a transmitter statistic as follows:

1. Navigate via  > **Animal management** > **Transmitters** to the **Information** sub-menu.
2. An overview of the transmitters created in the system is displayed.
 - 2.1. In the **Registered** menu you check the number of registered transmitters or calves.
 - 2.2. In the **Available** menu you check the number of available transmitters.
 - 2.3. In the **Free** menu you check how many transmitters you can still create.

7.2 Registering animals


Calves are only fed at the feeder if they are also registered there. You can either manually register each calf or instruct the feeder to automatically register the calves. In the latter case, the calf is registered as soon as it enters the feeding station for the first time. This means that the manual registering of the calves is not needed.

During registration, the calf is allocated to one of four groups, A to D. The calf will then be fed in accordance with the feed and concentration plans of this group.

The group to which you allocate the calves depends solely on the feed quantity and the concentration the end user wishes to dispense to the calves. In this case, it does not matter which station the calves consume their feed in or which bay the calves have been housed in.

7.2.1 Manual registration of animals

You register animals manually as follows:

1. Navigate via  > **Animal management** > **Registration** to the **Animals** sub-menu.
2. Select one of the available (not yet registered) animal numbers.
3. In **Group**, select the group to which the calf is to be allocated.
4. If you wish to reduce the total feeding duration for the calf, you can set this up under **Correction days** (see **Feeding** > **Total feeding duration** in the operator's manual).
5. Confirm **Register?** by choosing .
6. Confirm the prompt **Register animal xx in group X?** by choosing .

Note: On its registration day, the animal receives the exact amount of feed, spread over the course of the day, as intended for the first day according to the feeding plan. If you have entered correction days, the animal will receive the feed that is intended for the corresponding day.

Note: For the next manual registration, the values last set will again be shown and can be used or changed for the current animal.

7.2.2 Automatically registering animals

If an animal that is not yet registered enters the feeding station for the first time, it can then be automatically registered. For automatic registration, three different modes can be set which are described in detail in the following three sub-sections. The following table presents an overview of this.



Overview of the three modes for automatic registration

| Automatic registration mode | Transmitter number being identified | |
|-----------------------------|-------------------------------------|---|
| | available | unknown |
| deactivated | Warning unknown transmitter | Warning unknown transmitter |
| available transmitters | Animal will be registered | Warning unknown transmitter |
| all transmitters | Animal will be registered | Transmitter is created, new animal number is assigned, animal is registered |

7.2.2.1 Deactivating automatic registration

Automatic registration is deactivated by default. You can restore this setting at any time.

You deactivate automatic registration as follows:


1. Navigate via  > **Animal management** > **Registration** to the **Automatic** sub-menu.
2. Select **Mode no** and confirm by choosing . Automatic registration is then deactivated.

Note: When the registration function is deactivated, the **unknown transmitters warning** will be triggered if an unregistered calf enters a station.

7.2.2.2 Register available transmitters only automatically

Automatic registration shortens the registration process for the calves. When doing this, you can specify that only calves whose transmitter numbers are already in the system can be registered. If an available transmitter number is registered in the identification unit, the corresponding calf will be registered automatically. Calves or transmitter numbers that have not yet been created in the system will trigger the **Unknown transmitter number** warning.

Proceed as follows to set up automatic registration of available transmitters:

1. Navigate via  > **Animal management** > **Registration** to the **Automatic** sub-menu.
2. In **Mode** select the **available** option.
3. In **Group**, choose the group in which you want to automatically register the calves.


Note: The registration of calves that are to be removed should only be canceled after they have left the bay, as they will otherwise automatically be re-registered when they enter the station and will then be returned to the start of the feeding plan.

7.2.2.3 Creating transmitter numbers and automatically registering calves

To shorten the registration process even more, you can specify that calves can also be registered if their transmitter numbers are not known in the system. This eliminates the need for reading or manual entry of transmitter numbers. In this case, if an unknown transmitter number is registered in the identification unit, this transmitter number is automatically created in the system and a new animal number is issued and registered at the same time.

Note: When newly creating transmitters and animal numbers, the animal number will either be produced consecutively or as a part of the transmitter number (see 7.1.5 "Assigning animal numbers" - 76).

Proceed as follows to create transmitter numbers and automatically register calves:



1. Navigate via  > **Animal management** > **Registration** to the **Automatic** sub-menu.
2. In **Mode** select the **All** option.
3. In **Group**, choose the group in which you want to automatically register the calves.

7.3 Canceling animals or animal groups

Individual calves or a group of calves that are no longer being fed according to the plan must be removed from the pen compartment and their registration canceled. The same applies to calves whose feeding plan has expired.

7.3.1 Canceling individual animals

You cancel an individual animal's registration as follows:

1. Navigate via  > **Animal management** > **Cancellation** to the **Animals** sub-menu.
2. Select the desired animal number.
3. In the **Plan end** menu, you check how much longer the calf is to be fed according to the plan.
4. In the **MP** menu, you can check how much milk powder the calf has consumed from the start of registration to its cancellation.
5. Confirm Cancel? by choosing , to cancel the calf's registration.

NOTICE!

There is a risk of malnutrition if calves do not receive any feed.


Malnutrition can cause impaired growth and development, increased susceptibility to illness or even death of the calves.

- ▶ Inform the end user that he/she must provide the canceled calves with feed using an alternative method.

Note: If you have chosen the value All or Available for the automatic registration mode, the end user should remove unregistered calves from the bay, because otherwise they will be automatically registered again.


7.3.2 Canceling a group

You can cancel a group registration as follows:

1. Navigate via  > **Animal management** > **Cancellation** to the **Group** sub-menu.
2. Select the required group.
3. In the **Registered** menu you can see how many calves are being fed according to the corresponding plan.
4. In the **Weaned** menu you can see how many calves have finished the feeding plan and are therefore no longer receiving any feed.
5. Confirm **Cancel?** by choosing , if all calves of the group are to be canceled regardless of whether they are registered or weaned calves.
6. Confirm the security prompt **Cancel animals in group?** by choosing .

7.3.3 Canceling weaned animals


You can cancel the registration of weaned calves as follows:

1. Navigate via  > **Animal management** > **Cancellation** to the **Weaned calves** sub-menu.
2. Confirm **Cancel?** by choosing , if weaned animals are to be canceled.
3. Confirm the security prompt **Cancel animals?** with .

7.4 Changing the registration of animals

You can transfer calves registered at an automatic feeder to another group at any time.

To change a registered calf to another group, proceed as follows:

1. Navigate via  > **Animal management** to the **Change registration** sub-menu.
2. Select the desired calf.
3. Select the desired feeding group in **Group**.
4. Confirm the prompt **Change registration of animal xx into group X?** by choosing .

Note: When registration is transferred, the feeding day is retained; the calf will not be reset to the start of the feeding plan (= to plan day 1).

8. Shutdown and recommissioning

This chapter explains how to shut down the automatic feeder temporarily or permanently and recommission it.

8.1 Shutdown

You can shut down the automatic feeder temporarily or permanently.

To make the procedure easier and ensure that you do not miss any steps, see the check list **Shutting down the automatic feeder** in the appendix (see 10.3 "Shutdown checklist" - 120).

Note: If you have installed additional devices such as an **additive dispenser**, the **IFS feeding station**, the **ActivityBox** or the **CalfRail**, you must also follow the shutdown instructions in the operating manual for these devices.

8.1.1 Temporary shutdown

You can temporarily shut down the automatic feeder, for example from the end of one calving season to the start of the next.

If you are shutting down the automatic feeder for a prolonged period of more than one year, you should store the feeder in an upright position in a clean, dry and frost-free location.

In addition, observe the following rules when transporting the automatic feeder:

CAUTION!

Health hazards caused by lifting heavy loads.

► Do not move the automatic feeder by yourself.

- The automatic feeder must always be transported in an upright position.

To ensure that the automatic feeder does not become a breeding ground for germs, which could endanger the health and life of the calves when you recommission the feeder, you must thoroughly clean the automatic feeder before shutting it down.

Depending on how the automatic feeder is configured, you must run the manual or automatic cleaning programs for the mixer, heat exchanger, hoses, teat and powder container.

After cleaning, the power and water supply must be interrupted, the boiler drained, the cable glands for antennas and the Ethernet connection sealed with dummy plugs and the water drained from the magnetic valves and the volume control valve.



To shut down the automatic feeder, proceed as follows:

WARNING!

Beware of chemical burns from the cleaning agents used.

The cleaning agent can cause chemical burns to your eyes or hands.



► Always wear safety glasses and chemical-proof protective gloves when disposing of cleaning agents. Follow all the safety instructions listed in the safety data sheet for the cleaning agent and wear the specified safety equipment.

1. Start the maximum number of cleaning programs (see **Cleaning** chapter in the operating manual for the automatic feeder).
2. Take the cleaning agent lance off the cleaning agent container, flush it out with water and place it in a bucket full of water
 - 2.1. Navigate via  > **Diagnostics** to switch to the **Motors** sub-menu.
 - 2.2. Confirm **Flushing agent: start?** by choosing , to flush remnants of cleaning agent out of the system.
3. Remove the cleaning agent lance from the bucket and perform points 2.1 and 2.2 again, to flush liquids out of the system.
4. Collect the liquid separately and tip the bucket out. Dispose of this as recommended by the cleaning agent manufacturer.
5. Drain the water from the boiler, solenoid valves and the pressure-reducing valve to prevent the automatic feeder from being damaged by frost.

NOTICE!

Beware of damage to the automatic feeder.

Frozen water expands and can damage automatic feeder components that contain water, such as the solenoid valves.

- 5.1. Close the water tap that supplies water to the automatic feeder.
- 5.2. De-pressurize the hoses by dispensing water into the mixer beaker.
- 5.3. Press .
- 5.4. Confirm **Bo. water start?** by choosing .
- 5.5. Pour the liquid from the mixer into a container or the drain.



DANGER!

Fatal electric shock

The electrical components of the automatic feeder are live.

- ▶ Always switch off the automatic feeder firstly with the Main switch and disconnect the power plug before continuing.

6. Switch the automatic feeder off using the Main switch and disconnect the mains plug.
 - 6.1. Disconnect the water hose between the solenoid valve for water and the heat exchanger.
 - 6.2. Open the vent screw on the cover of the heat exchanger. As soon as air flows in, the water will drain.
 - 6.3. Let the water drain completely.
 - 6.4. Reattach the water hose and tighten the vent screw.
7. Disconnect the water hose from the water tap that supplies the automatic feeder with water and from the water connector on the automatic feeder.

8. Dispose of the water hose.

NOTICE!**Beware of the risk of infection.**

To prevent infections, use a new hose when recommissioning the unit.

9. Remove the teat from the feeding box.
10. Dispose of the teat.

NOTICE!**Beware of the risk of infection.**

To avoid infections, use a new teat when recommissioning the unit.

11. Disconnect the hose from the teat to the feeding box valve or the mixer beaker.
12. Dispose of the hose.

NOTICE!**Beware of the risk of infection.**

To prevent infections, use a new hose when recommissioning the unit.

13. Disconnect the hose that runs from the drain channel to the mixer drain valve.
14. Dispose of the hose.

NOTICE!**Beware of the risk of infection.**

To prevent infections, use a new hose when recommissioning the unit.

15. Seal the cable gland of the Ethernet connection with a dummy plug and close the antenna connections using the locks.

NOTICE!**Moisture.**

Moisture can enter the control box through the cable gland of the Ethernet connection and damage it.

16. Clean the outside of the automatic feeder using a damp cloth. Clean all areas that are not reached by the cleaning program.

NOTICE!**Pressure washers can damage the automatic feeder.**

- ▶ Only clean the automatic feeder by hand using a damp cloth.
-

17. Empty the powder container.

18. Remove the screws holding the safety grid on the powder container. Remove the safety grid.

19. Clean the powder container and dosing unit (see **Cleaning** chapter in the operating manual for the automatic feeder). To do this, use the scraper supplied.

20. Seal the cleaning agent storage container.

**WARNING!****Beware of chemical burns from the cleaning agents used.**

The cleaning agent can cause chemical burns to your eyes or hands.

- ▶ Always wear safety glasses and chemical-proof protective gloves when disposing of cleaning agents. Follow all the safety instructions listed in the safety data sheet for the cleaning agent and wear the specified safety equipment.
-

21. Cover the automatic feeder with a tarpaulin. This will protect it from dirt.

8.1.2 Permanent shutdown

If you are going to permanently shut down the automatic feeder, you must dispose of it in accordance with the law. To find out which regulations apply to you, contact your waste disposal company or a waste disposal center listed in the yellow pages.

In the appendix of this manual, you will find a list of the materials used in the construction of the automatic feeder (see 10.2 "Materials list" - 119).

1. To shut down the feeder, perform the steps for a temporarily shut down (see 8.1.1 "Temporary shutdown" - 83). You do not have to perform step 1, cleaning.
2. Dispose of any residual cleaning agent. See the data sheet of the cleaning agent for information on the disposal of the cleaning agent.

**WARNING!****Beware of chemical burns from the cleaning agents used.**

The cleaning agent can cause chemical burns to your eyes or hands.

- ▶ Always wear safety glasses and chemical-proof protective gloves when disposing of cleaning agents. Follow all the safety instructions listed in the safety data sheet for the cleaning agent and wear the specified safety equipment.
-

3. Dispose of the automatic feeder as described in the **Disposal** chapter in the operator's manual for the automatic feeder.

8.2 Recommissioning

8.2.1 Recommissioning after temporary shutdown


Proceed as follows to recommission the automatic feeder:

1. Remove the protective covers from the automatic feeder.
2. Clean the outside of the automatic feeder with a damp cloth.
3. Install the safety grid for the powder hopper attachment. Screw the screws back into the holes provided. The safety grid for the powder hopper attachment prevents you from being injured by the rotating tools in the powder hopper, for example, when adding milk powder.
4. Connect the water connector of the automatic feeder to the water tank using a clean new water hose.
5. Proceed as follows to restore the cleaning agent supply (optional) to service.
6. Install a new teat.
7. Connect the teat to the feeding box valve (rationed mode) or the mixer beaker (ad lib mode). Use a new hose for this connection.

NOTICE!

The hose must be installed at a gradient to the automatic feeder without sagging.

This makes it easier for calves to consume feed and makes it easier to drain the hose (see the illustration).

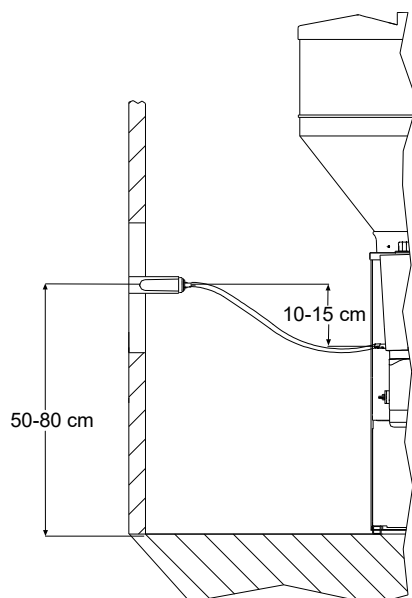

Hose with gradient between teat and feeding box valve

8. Connect the mixer drain valve to the drain channel. Use a new hose for this connection.
9. Remove the dummy plugs for the Ethernet Cable and replace them with a grommet.

10. Connect the Ethernet cable.
11. Remove the locks on the antenna connections and connect them to the antennas.
12. Plug the power plug into the power outlet.
13. Switch the automatic feeder on using the Main switch .

Fault, Boiler not filled will appear in the display of the hand terminal.

14. Press .
15. Confirm **Fill boiler?** by choosing .

The boiler is automatically filled with water.

16. Navigate via  > **Device data** to the **Time** or **Date**.sub-menu.

16.1. In the **Time** menu, you enter the time of day using the number keys

16.2. In the Date menu, you enter the time of day using the number keys.

16.3. In the **Format** menu, choose , the desired format for the date.

17. Start the maximum number of cleaning programs (see **Cleaning** chapter in the operating manual for the automatic feeder).

Clean the hoses and the powder container.

By doing this, you prevent germs that enter the automatic feeder from multiplying and infecting your calves.

18. Fill the powder container with milk substitute (MP). Use only milk substitute that is suitable for feeding calves.

NOTICE!

- ▶ Make sure that no paper or other foreign bodies enter the powder container. This could damage the dosing mechanism or impair dosing accuracy.

19. Calibrate all feed components (see 3.23 "Calibrating feed components" - 35).

20. Check the setup settings (see 5. "Setup" - 59).

8.2.2 Recommissioning after processor card replacement

After a shutdown, for example after replacing the processor board, you must set up the device data again.

Proceed as follows:

1. Switch on the automatic feeder.
2. Confirm the message **first startup press enter to start installation** by choosing .
3. The message **restore last backup?** will appear if there is a valid backup of the animal and device data in the automatic feeder. Confirm the message with .

If no data are present, follow the same steps as in commissioning (see 3. "Commissioning" - 22).

4. Read the ID chip and check the setup settings (see 5. "Setup" - 59).
5. In the **Basic settings** menu, enter the desired language, the current date and the current time of day.

This concludes the recommissioning process.

9. Faults and warnings

The automatic feeder shows fault messages or warning messages on the display to indicate faults during feeder operation.

In the event of a **fault**, automatic mode is interrupted and no feed is prepared.

NOTICE!



An interruption in feeding operation means that your calves will not receive any feed.

This can lead to malnutrition. Malnutrition can cause impaired growth and development, increased susceptibility to illness or even death of the calves.

- ▶ Inform the end user that he/she must provide the calves with feed using an alternative method if feed operation is interrupted.

In the event of a **warning**, automatic mode will not be interrupted and feeder operation will continue.

Once you have eliminated the fault, delete the fault and warning messages.



- Some fault and warning messages are deleted automatically.
- Some fault and warning messages can be deleted by pressing .
- Some fault and warning messages can be deleted by confirming **Delete fault?** or **Delete warning?** with .

9.1 Faults

9.1.1 Calibration scales

If the calibration scales were not adjusted during setup, you will see **Fault, calibration scales** in the display.

You can correct the fault as follows:


1. Confirm **Calibration scales** with .
2. In **Adjust**, press , to adjust the calibration scales.

Proceed as described in chapter 5.8 "Calibration scales" - 67.

9.1.2 Heating up

If the temperature of the boiler water is too low, **Fault heating up xx.x °C** will appear in the display. Feeder operation will be interrupted until the set minimum temperature has been reached. Make sure that the end user provides the calves with feed using an alternative method as long as feed operation is interrupted.

If heating up the boiler water does not solve the problem, act as follows to remedy the problem:

1. Navigate via  > **Device data** > **Portion** to go to the **Set temp.** or **Min. temp.** sub-menu and check the temperature settings.

2. Check that the heater is working properly.

9.1.3 Temperature too high

If the water temperature in the boiler is too high, **Fault, temperature too high** will appear in the display. Feeder operation will be interrupted until the water in the boiler has cooled to the set maximum temperature. Make sure that the end user provides the calves with feed using an alternative method as long as feed operation is interrupted.

You can correct the fault as follows:

1. Confirm **Fault, temperature too high** by choosing .
2. In **Boiler water start?**, press and keep depressed .
3. Release water from the heat exchanger's boiler into the mixer beaker until the fault message in the display disappears.
4. Confirm **Mixer: draining?** by choosing .

Check the temperature of the water supply if the boiler is supplied with preheated water.

9.1.4 Boiler not filled

When you switch on the automatic feeder, the control unit checks whether the **boiler** is filled with water. If it is not filled, feeder operation will be interrupted and the message **Fault, Boiler not filled** will appear in the display.

Feeder operation will be interrupted. Make sure that the end user provides the calves with feed using an alternative method as long as feed operation is interrupted.

You can correct the fault as follows:

1. Confirm **Fault, boiler not filled** by choosing .
2. Check the water supply.
3. In **Fill boiler?**, press .
4. Check that the water jet hits the rod electrode and the display shows **covered**.
5. Check that the shutoff valves and the drain valve are not leaking.

Note: If liquid flows into the mixer through these valves, the rod electrode cannot be grounded (see 9.1.5 "Shortage of water" - 91).

If the fault persists, proceed as specified in 9.1.5 "Shortage of water" - 91.

9.1.5 Shortage of water

If the rod electrode or the supply electrode is not grounded in the mixer beaker when water is being added and the water meter sends no pulse, a water test will be started. If the water test is not successful, then feed preparation and animal identification will be switched off.

Fault, water shortage appears in the display.

Feeder operation will be interrupted. Make sure that the end user provides the calves with feed using an alternative method as long as feed operation is interrupted.

You can correct the fault as follows:

1. Confirm **Fault, water shortage** by choosing .
2. Confirm **Boiler water start?** by choosing .
3. Check that the water jet hits the rod or point electrode (see 9.5.3 "Checking sensors" - 110).
4. Check the water supply to the automatic feeder.
5. Check whether deposits such as calcium have formed on the electrodes.
6. Confirm **Delete fault?** by choosing when you have fixed the fault.




DANGER!

Fatal electric shock.

The electrical components of the automatic feeder are live.

- ▶ Always switch off the automatic feeder firstly with the Main switch and then disconnect the power plug before changing the response sensitivity of the electrode.

Check and change the response sensitivity of the electrode.

1. Navigate via  > **Diagnostics > Sensors** to the **Elec. point** or **Elec. rod** sub-menu.
2. In the right-hand column, check the status (**free** or **covered**).
3. Confirm **Elec. point** or **Elec. rod** with .
 - 3.1. In the **Status** menu, check the status (**free** or **covered**).
 - 3.2. Confirm **Bo. water start?** by choosing .

The electrode will be triggered if **water** is dispensed into the mixer beaker.
 - 3.3. Confirm **Mixer: draining?** by choosing , to pump out the liquid again.
4. Visually inspect the electrode.
 - 4.1. If the electrode reports that it is **covered** although it is actually free, the response sensitivity of the electrode is too high.
 - 4.2. Reduce the response sensitivity of the electrode by rotating the potentiometer (see machine circuit diagram in the appendix) counterclockwise on the main board.
 - 4.3. If the electrode reports that it is **free** although it is actually covered, the response sensitivity of the electrode is too low.
 - 4.4. Increase the response sensitivity of the electrode by rotating the potentiometer (see machine circuit diagram in the appendix) clockwise on the main board.
5. Confirm **Delete fault?** by choosing when you have fixed the fault.

9.1.6 Water meter

If the rod electrode is grounded when water is dispensed but the water meter sends out no pulse, **Fault, water meter** will appear in the display.

Feeder operation can be continued in emergency mode.

You start emergency mode as follows:

1. Confirm **Fault, water meter** by choosing .
2. Confirm **Bo. water start?** by choosing .
3. Check whether pulses are shown in the display.
4. Confirm **Mixer: draining?** by choosing .
5. Confirm **Delete fault?** by choosing .
6. Confirm **emergency mode start?** by choosing .

Warning, water meter will appear in the display. The calibration values for the water boiler become invalid.

7. Calibrate the boiler water.

The automatic feeder will operate in emergency mode, the error message **Calibr. Bo. wa-ter** will disappear

You can correct the fault as follows:

1. Repair or replace the water meter if necessary.
2. Delete the **water meter warning**.

You will see the fault message **Calibr. Boiler water** in the display.

3. Calibrate water.
4. Return to automatic mode.

9.1.7 Emptying the mixer

Fault, mixer draining will appear if the mixer cannot be drained.

Feeder operation will be interrupted. Make sure that the end user provides the calves with feed using an alternative method as long as feed operation is interrupted.

 **DANGER!**

Fatal electric shock.

The electrical components of the automatic feeder are live.

- ▶ Always switch off the automatic feeder firstly with the Main switch and then disconnect the power plug before working on components of the feeder.

You can correct the fault as follows:

1. Switch the automatic feeder off using the Main switch and disconnect the mains plug.
2. Check all components carrying feed from the mixer to the mixer drain valve or from the mixer up to the teat for clogs and remove them.
3. Insert the mains plug again and switch the automatic feeder on using the Main switch .
4. Confirm **Fault, draining the mixer** by choosing .
5. Check the feed pump:
 - 5.1. Confirm **Feeding pump: start?** by choosing .
6. Check the mixer drain valve:
 - 6.1. Confirm **Mixer drain: open?** by choosing .
7. Check the rod electrode:
 - 7.1. Confirm **Bo. water start?** by choosing , to fill the mixer with water. Check in the **Diagnostics > Sensors** menu (see 9.5.3 "Checking sensors" - 110), whether the message **empty** or **covered** appears.
 - 7.2. Confirm in **Mixer draining?**, by choosing .
8. Confirm **Delete fault?** by choosing when you have fixed the fault.
9. Remove cleaning agent remnants from components carrying feed by rinsing them with water.

NOTICE!

Cleaning agent remnants that enter the feed can be hazardous to the health of calves.

- ▶ Remove cleaning agent remnants before recommissioning the automatic feeder.

10. Return to automatic mode.

9.1.8 Heating system

Fault, heating will be shown in the display if the heater is faulty.

Feeder operation will be interrupted. Make sure that the end user provides the calves with feed using an alternative method as long as feed operation is interrupted.

**DANGER!****Fatal electric shock.**

The electrical components of the automatic feeder are live.

- ▶ Always switch off the automatic feeder firstly with the Main switch and then disconnect the power plug before working on components of the feeder.

You can correct the fault as follows:

- Check whether safety temperature limiter has been triggered.
- Check the setup settings for the heating system.
 - **Setup > Machine > Heating:** electronic
- Check the temperature sensor.
If the temperature sensor is defective, replace it.
- Check that voltage is present at the heater. If necessary, check the fuses provided by the customer (solid state relay).
- Check the heating rod for continuity.
If the heating rod is defective, replace it.

**DANGER!****Fatal electric shock.**

The electrical components of the automatic feeder are live.

- ▶ Always switch off the automatic feeder firstly with the Main switch and disconnect the power plug before manually reactivating the safety temperature limiter.

You reactivate the safety temperature limiter as follows:

1. Switch the automatic feeder off using the Main switch and disconnect the mains plug.
2. Open the right side door of the automatic feeder.
3. Remove the metal cover under which the safety temperature limiter is located.
4. Press the reset button in order to reset the safety temperature limiter.
5. Reattach the metal cover.
6. Close the side door.
7. Insert the mains plug again and switch the automatic feeder on again using the Main switch .

9.1.9 Boiler temperature sensor

Fault, Temp. sensor, boiler is shown in the display if the temperature sensor of the boiler is defective.

Feeder operation will be interrupted. Make sure that the end user provides the calves with feed using an alternative method as long as feed operation is interrupted.

**DANGER!****Fatal electric shock.**

The electrical components of the automatic feeder are live.

- ▶ Always switch off the automatic feeder firstly with the Main switch and then disconnect the power plug before working on the main circuit board.

You can correct the fault as follows:

1. Switch the automatic feeder off using the Main switch and disconnect the mains plug.
2. Remove the metal cover on the back of the automatic feeder.
3. Measure the resistance of the temperature sensor on the main board.
4. Compare the measured value with the value in the table. The table can be found in the machine circuit diagram in the appendix.
5. If the measured value differs from the value in the table, you must replace the sensor.
6. Reattach the metal cover.
7. Insert the mains plug again and switch the automatic feeder on again using the Main switch .

9.1.10 Calibration

If the liquid or powder feed components and the cleaning agent have not been calibrated, **Calibration fault** will appear in your display.

Feeder operation will be interrupted. Make sure that the end user provides the calves with feed using an alternative method as long as feed operation is interrupted.

You can correct the fault as follows:

1. Confirm **Fault, calibration** by choosing .
2. Calibrate all components shown in the display (see 3.23 "Calibrating feed components" - 35).

9.1.11 ID chip

The automatic feeder is equipped with an electronic name plate (ID chip) upon which the device number and other important information for the operation of the automatic feeder is stored.

Fault, ID chip missing is shown in the display if the ID chip is defective. For the first 30 days after the fault appears, feeder operation will continue normally. After this, the automatic feeder will not be fully functional.

Make sure that the end user provides the calves with feed using an alternative method as long as feed operation is interrupted.

**DANGER!****Fatal electric shock.**

The electrical components of the automatic feeder are live.

- Always switch off the automatic feeder using the main switch and disconnect the mains plug before you work on the main board.
-

You replace the ID chip as follows:

1. Switch the automatic feeder off using the main switch and disconnect the power plug.
2. Open the flap on the back of the automatic feeder.
3. Disconnect the old ID chip from the main board (see circuit diagram provided).
4. Insert the ID chip on the main board.
5. Close the flap on the back of the automatic feeder.
6. Insert the mains plug and switch on the automatic feeder again using the main switch.
7. Choose **Setup > ID chip** to go to the **Read** sub-menu.
8. Activate the ID chip by choosing .

9.1.12 Station/drain valve

If a feeding box valve or the mixer drain valve (optional) is leaking **Fault, station/drain valve** appears in the display . The automatic feeder loses water during cleaning.

Feeder operation will be interrupted. Make sure that the end user provides the calves with feed using an alternative method as long as feed operation is interrupted.

You can correct the fault as follows:

1. Check all feeding box valves and the mixer drain valve for leaks.
 - 1.1. Clean leaky valves in order to remove any foreign objects that might have entered the system.
 - 1.2. Repair leaky valves or replace them.
2. Check the rod electrode.
 - 2.1. Navigate via > **Diagnostics > Sensors** to the **Elec. rod** sub-menu.
 - 2.2. In the right-hand column, check the status (**free** or **covered**).
 - 2.3. Confirm **Elec. rod** with .
 - 2.4. In the **Status** menu, check the status (**free** or **covered**).
 - 2.5. Confirm **Bo. water start?** by choosing .

The electrode must report that it is covered if **water** is dispensed into the mixer beaker up to the electrode.

If the rod electrode reports that it is **free**, you must readjust it (see 9.1.6 "Water meter" - 93).

If the fault persists, you must replace the rod electrode.
3. Confirm **Delete fault** by choosing , when you have fixed the fault.


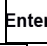










9.1.13 Uncontrolled output

The automatic feeder monitors all outputs during current operation which are responsible for the dispensing of water, milk, milk powder, additives and flushing agent as well as the mixer drain valve. If the corresponding relays are actuated for more than 60 seconds, **Fault, uncontrolled output** will appear in the display. Depending on the type of defect, one of the following fault codes will be displayed:

- **Boiler water**, if the boiler water valve is faulty.
- **Mixer drain**, if the mixer drain valve is faulty.
- **Powder**, if the motor of the milk powder conveyor is defective.
- **Additive dispenser**, if the additive dispenser is defective.

Feeder operation will be interrupted. Make sure that the end user provides the calves with feed using an alternative method as long as feed operation is interrupted.

You can correct the fault as follows:

1. Check the water valve of the boiler.
 - 1.1. Navigate via  > **Diagnostics** to switch to the **Valves** sub-menu.
 - 1.2. Confirm **Bo. water open?** by choosing , to open the water valve. The valve remains open as long as you hold down .
 - 1.3. Check that the valve opens. The valve opens when the water is dispensed.
 - 1.4. Repair the valve or replace it.
2. Check the mixer drain valve.
 - 2.1.  and press and hold , until the mixer is filled with water.
 - 2.2. Navigate via  > **Diagnostics** to switch to the **Valves** sub-menu.
 - 2.3. Confirm **Mixer drain: open?** by choosing , to open the mixer drain valve. The valve remains open as long as you hold down .
 - 2.4. Check that the valve opens. The valve opens when the water drains.
 - 2.5. Repair the valve or replace it.
3. Check the motor of the milk powder conveyor.
 - 3.1. Navigate via  > **Diagnostics** to switch to the **Motors** sub-menu.
 - 3.2. Confirm **Powder start?** by choosing , to start the motor for the milk powder conveyor.
 - 3.3. If the motor does not start, check the plug on the powder conveyor or check the power supply.
4. Check the additive dispenser.
 - 4.1. Navigate via  > **Diagnostics** to switch to the **Motors** sub-menu.
 - 4.2. Confirm **Additive dispenser start?** by choosing , to start the motor for the additive dispenser conveyor.
 - 4.3. If the motor does not start, check the plug or the power supply.

9.2 Warnings

9.2.1 Emptying the mixer

If the mixer cannot be emptied, the message **Warning, draining the mixer** will appear. For example, this can be because the drain is clogged or the feeding pump is no longer running.

DANGER!

Fatal electric shock.

The electrical components of the automatic feeder are live.

- ▶ Always switch off the automatic feeder firstly with the Main switch and then disconnect the power plug before working on components of the feeder.

You rectify the warning as follows:

1. Check all components carrying feed from the mixer to the mixer drain valve or from the mixer up to the teat for clogs and remove them.

NOTICE!

The hose which goes from the mixer drain valve to the drain channel must not be lengthened.

2. Check the feeding pump.
 - 2.1. Confirm **Mixer draining warning** by choosing .
 - 2.2. Confirm **Feeding pump: start?** by choosing .

The feeding pump will be actuated.
3. Check the mixer drain valve.
 - 3.1. Confirm **Mixer draining warning** by choosing .
 - 3.2. Confirm **Mixer drain: open?** by choosing .

The mixer will be drained.
4. Check the rod electrode.
 - 4.1. Visually check the rod electrode for deposits.
 - 4.2. Check that the rod electrode works properly (see 9.5.3 "Checking sensors" - 110).
5. Fill and drain the mixer.
 - 5.1. Confirm **Bo. water start?** by choosing .

The mixer will fill up with water.

 - 5.2. Confirm **Mixer: draining?** by choosing .

The mixer will be drained.

If the fault has been fixed, acknowledge the message **Delete warning?** in the display with .

9.2.2 Mixer temperature sensor

If the temperature sensor in the mixer beaker is faulty or the temperature of the mixed feed in the mixer beaker drops below 0°C, the **Mixer temp. sensor warning** will appear in the display.

You rectify the warning as follows:

1. Use a ohmmeter to measure the voltage at the input of the temperature sensor on the board. Compare the measured value with the value in the circuit diagram, and if it is different, replace the temperature sensor (see the machine circuit diagram).

9.2.3 Identification

If animal identification is not working, **Warning, identification** will appear in the display.




You rectify the warning as follows:

1. Check the cables leading to the antenna. Repair any damage or replace the cables or antennas.

9.2.4 Incorrect ID

All CAN nodes have a unique ID which cannot be changed. The ID is used to automatically check that the right participant reports on the CAN address. If this is not the case, it is possible for the feeder and the participant to communicate, but there will be no proper data exchange. **Warning, Incorrect ID** appears in the display.

You rectify the warning as follows:


1. Check all CAN addresses.
2. Switch the feeder on and hold the button  until the setup menu appears on the display.
3. Navigate to **Setup > Boxes** and check the **CAN addresses** of the individual CAN nodes.
4. To exit setup, repeatedly press , until the message **End setup?** appears. Confirm with .

If IDs have changed, e.g., for reasons of compatibility, you must update all CAN nodes. To do this, use an SD card or FlashManagerPlus.

9.2.5 Address used twice

If two or more nodes are linked together in a bus system, it can happen that a CAN address is issued twice. **Warning, duplicate address** appears in the display.

You rectify the warning as follows:

1. Confirm the **Warning, duplicate address** using .
The CAN participant with the duplicate address will be displayed.
2. Choose **Setup > Boxes** to open the sub-menu shown in the display with the duplicate address.

3. Assign another address which is still available to the CAN node with the duplicate address. For more information on assigning CAN addresses, see the **Setup > Address** chapter (see 5.4.3 "Automatic feeder address" - 63).

Note: If possible, use an address from the standard range of numbers for the CAN participant concerned.

4. Confirm the changes with .
5. To exit setup, repeatedly press , until the message **End setup?** appears. Confirm with .
6. Delete the warning on all feeders.

9.2.6 Unknown transmitter

The **Unknown transmitter warning** appears in your display:

- If a transmitter is detected by the identification unit for which no animal number has been assigned.
- If a transmitter number has been allocated to an animal number, but has still not been registered.

You rectify the warning as follows:

1. Confirm **Unknown transmitters warning** by choosing .
2. In **No.**, check the unknown transmitter number.
3. In **Number**, you check how often the unknown transmitter number has been identified.
4. In **Time**, you check when the transmitter was last registered by the identification system.
5. Confirm **Delete?** by choosing , if you wish to delete the transmitter number.
6. Confirm **Register** by choosing , if you want to allocate the unknown transmitter number to an animal number.

9.2.7 Calibration

If the last calibration was 120 days ago or if automatic calibration failed, the **calibration warning** will appear in your display. You will see which components you have to calibrate.

You rectify the warning as follows:

1. Calibrate all components shown in the display (see 3.23 "Calibrating feed components" - 35).
2. Confirm **delete warning?** by choosing .

Note: If you delete the warning without calibrating, the message will appear again the next day.

9.2.8 Fill up the MP container

If the automatic feeder is equipped with a powder sensor, this will output a warning if the MP in the container is lower than the sensor. If the sensor reports container empty for 10 portions in succession, **Warning, top up MP** will appear in the display.

You rectify the warning as follows:

1. Confirm the MP warning by choosing .
2. Fill the powder container with milk powder

9.2.9 Calibration scales

If the calibration scales are not working, the **calibration scales warning** will appear in your display.

NOTICE!

There is a risk of malnutrition caused by incorrectly dispensed feed portions.

Malnutrition can cause impaired growth and development, increased susceptibility to illness or even death of the calves.

- ▶ You must ensure that the end user provides his/her calves with feed using an alternative method as long as the calibration scales are not working.



DANGER!

Fatal electric shock.

The electrical components of the automatic feeder are live.

- ▶ Always switch off the automatic feeder firstly with the Main switch and then disconnect the power plug before working on components of the feeder.

You rectify the warning as follows:

1. Check that the circuit board for the mixer scales is correctly plugged into the main board of the feeder.
2. Check the load rod and the calibration unit of the mixer scales.

Note: The warning is automatically deleted when the fault has been rectified.

9.2.10 ID chip

The automatic feeder is equipped with an electronic name plate (ID chip) upon which the device number and other important information for the operation of the automatic feeder is stored.

If the ID chip is defective, the **warning ID chip still xx day** will appear in your display. After 30 days, the functionality of the feeder will be limited.

NOTICE!

An interruption in feeding operation means that your calves will not receive any feed.

This can lead to malnutrition. Malnutrition can cause impaired growth and development, increased susceptibility to illness or even death of the calves.

- ▶ Make sure that the end user provides the calves with feed using an alternative method as long as feeder operation is interrupted.

You replace the ID chip as follows:

1. Order the new ID chip, specifying the device number.

**DANGER!****Fatal electric shock**

The electrical components of the automatic feeder are live.

- ▶ Always first switch off the automatic feeder using the main switch and disconnect the mains plug before you work on the main board.

2. Switch the automatic feeder off using the main switch and disconnect the power plug.
3. Open the flap on the back of the automatic feeder.
4. Unplug the old ID chip from the main board (see circuit diagram provided).
5. Insert the new ID chip on the main board (see circuit diagram provided).
6. Close the flap on the back of the automatic feeder.
7. Insert the mains plug and switch on the automatic feeder again using the main switch.
8. Choose **Setup > ID chip** to go to the **Read** sub-menu.
9. Activate the ID chip by choosing .

9.2.11 Duplicate animal number

If the same number was assigned twice during the fully automated registration process, **Warning, Duplicate animal no.** will appear in your display.

You change the duplicate animal number as follows:

1. Confirm **Duplicate animal no. warning** by choosing .

The **Duplicated** menu in Animal control appears (see the **Animal checking > Duplicated** chapter in the operator's manual).

2. In **No.**, the full transmitter number of the animal appears.
3. In **Animal no.**, change the automatically assigned number.
4. In **Time** and **Date**, check when the duplicate animal number appeared.

5. Once you have changed the animal number, confirm **confirm?** by choosing .

Note: Only when you have changed the animal number will your confirmation take effect and the warning be deleted.

9.2.12 Machine capacity

When there is no more storage space available for animal numbers or transmitter numbers, the **Warning, Machine capacity** will appear.

Confirm **Machine capacity** by choosing , to obtain detailed information.

- **system limit 250 animals** means: No more free animal numbers are available.
- **Transmitter storage full** means: No more storage space available for further transmitter numbers.

You rectify the warning "system limit 250 animals" as follows:

1. Cancel the registration of one or more animals in the **Animal control** menu (see the operator's manual).

NOTICE!

When you have canceled an animal's registration it will not receive any feed.

This can lead to malnutrition. Malnutrition can cause impaired growth and development, increased susceptibility to illness or even the death of your calves.

- ▶ The end user must use an alternative method to supply their calves with feed.

2. Confirm **delete warning?** by choosing .

You rectify the warning "transmitter storage full" as follows:

1. Navigate via  > **Animal management** > **Transmitters** to the **Edit** sub-menu.

2. Select the transmitter number to be deleted and confirm **Delete** by choosing .

Note: You can only delete transmitter numbers of calves that are not registered (= status: available).

3. Confirm **delete warning?** by choosing .

9.2.13 Check SD card

The **Check SD card** warning appears in the display:

- If data is to be saved manually, but no SD card is present.
- If data is to be saved manually, but the SD card is currently write-protected.
- If data is to be saved automatically but the SD card is full.
- If data is to be saved automatically but the SD card is currently write-protected.

9.3 Other faults and messages

9.3.1 Automatic feeder

9.3.1.1 Starting program

The message **Smart Vxx.xx starting program** appears when the control program of the automatic feeder starts.

Wait until the automatic feeder is ready to operate.

9.3.1.2 Initialization of the feeder

The message **first startup Press enter to start installation** will appear in the display in the following cases:

- When the automatic feeder starts for the first time.
- If the processor card must be replaced due to a hardware defect.

Follow the instructions on the screen. The following steps can be performed in the course of the initialization:

- Restoration of the last backup (if available).
- Entry of the language for the user interface.
- Entry of the current date and time.

9.3.2 Hand terminal

9.3.2.1 CAN bus off

If a short circuit or electromagnetic discharges negatively affect the CAN cable, the message **terminal Vxx.xx CAN bus off** will appear in the display.

You can correct the fault as follows:

Check the CAN bus for short circuits and other faults and correct them.

9.3.2.2 CAN bus heavy

The following faults trigger the message **terminal Vxx.xx CAN bus heavy**:

- Short circuit.
- Terminating resistor not set.
- Break in the data line.
- CAN cable incorrectly attached.
- No connection for automatic feeder control unit.

You can correct the fault as follows:

- Check the CAN bus for short circuits.
- Check that the terminating resistor has been properly set.
- Check whether the data line has been interrupted.
- Check that the CAN cables are correctly connected.
- Check that the data line is correctly wired and that the feeder control is working.



9.3.2.3 Waiting

The following faults prevent the hand terminal from initializing:

- The CAN bus address of the terminal is not the same as the one defined in setup of the of the automatic feeder.
- The feeder control unit is not active.

The message **terminal Vxx.xx waiting** appears.

You can correct the fault as follows:

1. Start search mode: Press   when you switch on the feeder and keep this key depressed.
2. When the display reappears, you must check that the feeder controller is working.

9.3.2.4 Searching

When the hand terminal is in search mode, the message **terminal Vxx.xx searching** will appear.



You can correct the fault as follows:

- Check that the feeder is working.
- If the message is not automatically hidden in about 10 seconds, you must check the feeder control.

9.3.3 Boot loader

9.3.3.1 Waiting for update

The following faults trigger the message **boot loader Vxx.xx waiting for update:**

- The automatic feeder's control program is not able to run.
Update the program using an SD card or the FTP Manager.
- The boot loader was (accidentally) activated while switching on.
If when the automatic feeder was being started the   was accidentally depressed

9.3.3.2 Flash programming

The message **boot loader Vxx.xx flash programming** will appear whilst the program is being updated.

Wait until the update has been completed.

9.3.3.3 Starting program

The message **boot loader Vxx.xx starting program** will appear when the boot loader for the automatic feeder starts.

Wait until the program has started.

9.4 Service messages

A service message will appear in the automatic feeder's display every four months. This message indicates the maintenance (regular service) that must be performed. Compliance with these maintenance intervals is the only way to ensure the long life and reliability of the automatic feeder.

The following regular services (RS) have been defined:

- RS1 must be performed every 4 months.
- RS2 must be performed every 12 months.
- RS3 must be performed every 36 months.

Using **Setup > Service > last**, check when the last regular service were performed and in **Type** which regular service it was (RS1, RS2 or RS3).

Using **Setup > Service > next**, check when the next regular service is due and check in **Type** to see which regular service will be carried out (RS1, RS2 or RS3).


9.4.1 Service work

For each regular service, there are various service packages (sets of spare parts) with the spare parts required, which will differ, depending on the type of feeder and type of service. After replacing the parts subject to wear, you must also check that the feeder is working properly, for example, the calibration. The service work is described in the installation information for the sets of spare parts.

You can collect the corresponding service packages (sets of spare parts) via a regular service configuration tool which can be found in the dealer area of Förster-Technik's web site (www.foerster-technik.de).

FÖRSTER
TECHNIK
Automatisch bewässern


Konfigurator Regelservice-Pakete

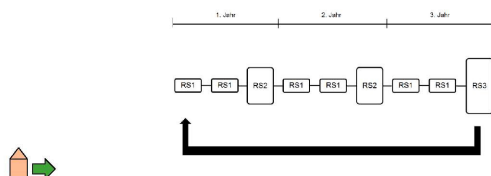

After performing the regular service, go to **Setup > Service > Serv. performed?** to confirm the **Accept today's date as the date of regular date?** message with .

Note: This service message will be shown on the display for three days and will then disappear until the next regular service is due. It can be deleted earlier by pressing however, it will be regenerated every day within these three days.

9.5 Diagnosis

The **Diagnostics** menu helps you to find faults in the event of technical problems. You can reach this menu via . A diagnosis can be performed for the following parts of the automatic feeder:






- Valves
- Motors
- Heating system
- Sensors
- Calibration scales
- Stations
- Check
- Version
- Setup
- Software
- Remote maintenance





9.5.1 Checking valves/motors

In this menu, you check actuators (valves and motors) and their actuation.

9.5.1.1 Valves


Check the valves as follows:

1. Navigate via  > **Diagnostics** to switch to the **Valves** sub-menu.
2. Confirm **Bo. water open?** by choosing , to open the water valve. The valve remains open as long as you hold the key down.
3. In the **Gully valve 2** menu, press . A new menu in which you can check the gully valve will open.
 - 3.1. Confirm **Water to the gully** by choosing , to rotate the valve towards the gully, or confirm **Water to the mixer** by choosing , to rotate the valve towards the gully.

The check (✓) behind the selected line show the last position to which the valve was switched.
 - 3.2. In the **Boiler water: open?** Menu, press , until the mixer is filled with water.
 - 3.3. Confirm **Water circulation** by choosing , to pump the water around the circuit or into the gully. The direction can be detected at ✓.
4. Confirm **Mixer drain: open?** by choosing , to open the mixer drain valve. The valve remains open as long as you hold down .
5. Check that the valve opens.

9.5.1.2 Motors

Check the motors as follows:

1. Navigate via  > **Diagnostics** to switch to the **Motors** sub-menu.
2. Confirm **Mixer: start?** by choosing , to start the mixer.
3. Confirm **Powder start?** by choosing , to start the powder conveyor.
4. In the **flushing agent 1** menu, press .
 - 4.1. Confirm **check?** by choosing , to check the cleaning agent pump.
 - 4.2. Confirm **Flushing agent: start?** by choosing , to start the cleaning agent pump.
Check that cleaning agent flows from the outlet.
5. In the **start flushing agent 2?** menu, press .
 - 5.1. Confirm **check?** by choosing , to check the cleaning agent pump.
 - 5.2. Confirm **Flushing agent: start?** by choosing , to start the cleaning agent pump.
Check that cleaning agent flows from the outlet.



WARNING!

Hazardous or irritant materials!


- ▶ Collect the cleaning agent residues and additive residues and dispose of them safely. When doing this be sure to comply with the manufacturer's instructions and national regulations for the use and disposal of the cleaning agent and additive being used. In addition a mixer cleaning must then be performed.

-
6. Confirm **Feeding pump: start?** by choosing , to start the feeding pump.

9.5.2 Checking the heating

In this menu, you check the boiler heating system.

Check the boiler heating system as follows:

1. Navigate via  > **Diagnostics** to switch to the **Heating system** sub-menu.
2. Confirm **switch on?** by choosing .
3. In the **Boiler** menu, you check the temperature.
4. Keep the in **switch on?** Depressed, the boiler will then heat up. If the temperature rises, that means the heater is working.


9.5.3 Checking sensors

In this menu, you check the sensors of the following components:

- Point and rod electrode.
- Button for the manual feeding pump (active/inactive).
- Mixer and boiler (temperatures of the liquids in the boiler and in the mixer beaker).
- Water meter

9.5.3.1 Point and rod electrode

Check the electrodes as follows:


1. Navigate via  > **Diagnostics** to the **Elec.** sub-menu. **point** or **Elec. rod** sub-menu.
2. In the right-hand column, check the status (**free** or **covered**)
3. Confirm **Elec. point** or **Elec. rod** with .
 - 3.1. In the Status menu, check the status (**free** or **covered**).
 - 3.2. Confirm **Bo. water start?** by choosing .

The electrode will be triggered if **water** is dispensed into the mixer beaker.

- 3.3. Confirm **Mixer: draining?** by choosing , to pump out the liquid again.


9.5.3.2 Button for the manual feeding pump

Check the button as follows:

1. Navigate via  > **Diagnostics** > **Sensors** to the **MP button** sub-menu.
2. In the right-hand column, check the status (active or inactive).

9.5.3.3 Temperature in the mixer and boiler


Check the temperature of the liquid in the mixer or boiler as follows:

1. Navigate via  > **Diagnostics** > **Sensors** to the **Boiler** or **Mixer** sub-menu.
2. Check the temperature in the right-hand column.

9.5.3.4 Water meter

In this menu, you check the water meter.


Check the water meter as follows:

1. Navigate via  > **Diagnostics** > **Sensors** to the **Water meter** sub-menu.
 2. In **Pulses**, you check the pulses from the water meter.
 3. Confirm **Boiler water** with .
- If the number of pulses increases, the water meter is responding.
4. Confirm **Mixer: draining?** by choosing , to pump out the liquid again.

9.5.4 Calibration scales

In this menu, you check the calibration scales.

Check the calibration scales as follows:


1. Navigate via  > **Diagnostics** to switch to the **Calibration scales** sub-menu.
2. Confirm **check?** by choosing , to check the calibration scales.
3. Confirm **adjust?** by choosing , to tare the calibration scales.

9.5.5 Checking stations

In this menu, you check the feeding box(es).

- You check that the identification system of the feeding box is working.
- You can open the feeding box valve.
- In the display, you can view the control unit assigned to the feeding box.


You check the identification system of a feeding box as follows:

1. Navigate via  > **Diagnostics** > **Boxes** > **Feed** to the **Feeding box 1** or **Feeding box 2** sub-menu.
2. To check the identification (antenna test), hold a transmitter near the antenna.
3. In **No. ‡**, you check the transmitter number.

If the transmitter number is not recognized, proceed as follows:

1. Check in the setup whether the correct identification system is configured.
2. Check that the data lines between antenna and automatic feeder are undamaged.
3. Check the setup for the allocation of the station that is causing identification problems.

You check the feeding box valve as follows:

1. Navigate via  > **Diagnostics** > **Boxes** to the **Feeds** sub-menu.
2. Confirm **open?** for the valve concerned by choosing .
3. Check that the valve opens.



9.5.6 Monitoring

In this menu, you check the following faults:

- How often the automatic feeder was without power (**power failures**).
Note: Switching on and off are also considered to be power failures.
- In **Watchdog**, the software is monitored.
- How often the feeder control unit had to be restarted after a program error (**Reset**).
- How often the connection to the **terminal** was faulty.
- How often an error occurred in connection with the **database**.

- How often the automatic feeder received no response from the **identification** system.
- How often the minimum temperature in the heat exchanger was not met (**heating**).
- How often the water test was negative (**water shortage**).
- How often the mixer could not be drained via the mixer drain valve (**mixer draining**).
- How often the **heating** function was faulty.
- How often erroneous values were provided by the **water meter**.
- How often faults occurred during automatic flushing of the mixer (**Flushing**).
- How often the test of the boiler was run unsuccessfully (**boiler not filled**).
- How often implausible values were reported by the temperature sensors in **Boiler** and **Mixer**.
- How often the **temperature** of the boiler water was **too high**. e.g., if the automatic feeder was supplied with hot water.
- How often the **supply electrode** was grounded before mixing a feeding portion.
- How often a CAN node is registered with the incorrect CAN address (**incorrect ID**).
- How often the automatic feeder could not switch to automatic mode because, for example, the liquid and powder feed components were not calibrated (**calibration**).
- How often the same address has been assigned in the CAN bus to devices (**duplicate address**).
- How often a fault has occurred in connection with the **ID chip**.
- How often **Unknown transmitter** was detected by the identification system.
- How often it has been indicated that an animal number has already been assigned (**duplicate animal no.**).
- How often the **flushing agent** empty indicator was displayed.
- How often the automatic feeder tried to establish a connection to the cloud (**Cloud connect retry/Cloud reconnect**)

You check the faults as follows:




1. Navigate via  > **Diagnostics** to switch to the **Checking** sub-menu.
2. Select the fault that occurred.
 - 2.1. In **Number**, you check how many times the fault occurred.
 - 2.2. In **since**, you check when the entries were last deleted.
 - 2.3. In **last on** or **last at** you can determine the day on which or the time at which a certain event last occurred.
3. Confirm **Delete?** by choosing  to delete the fault message.

9.5.7 Version

In the **Version** menu, you can check version numbers. The following units have a version number:

- Feeder
- Processor
- ID chip
- Terminal
- Identifications at existing feeding stations.
- Peripheral device


Check the version as follows:

1. Navigate via  > **Diagnostics** to switch to the **Version** sub-menu.
2. Then use   Go to the desired sub-menu and read the version number.

9.5.8 Setup

In this menu you can only view the settings. To make changes, you must open the setup menu (see 5. "Setup" - 59 and following pages)

You check the setup settings as follows:


1. Navigate via  > **Diagnostics** to switch to the **Setup** sub-menu.
2. Go to the desired sub-menu and check the settings.

9.5.9 Software

This menu is only intended for the manufacturer's development department.

9.5.10 Remote maintenance

During remote maintenance, the automatic feeder is operated via the CalfCloud.

1. Navigate via  > **Diagnostics** to switch to the **Remote maintenance** sub-menu.
2. In **start?**, you permit remote maintenance of the automatic feeder.
3. In **end?**, you break off remote maintenance of the automatic feeder.
4. In **Status**, you can see the current status of the connection to the cloud. The possible statuses are online, offline or reconnecting.
5. In **Service-ID** you can view the unique service identification number of the automatic feeder.

Note: Remote maintenance starts when the service ID is entered into the cloud. The service ID is valid until 23:59:59 hours.


10. Appendix

Note: The following checklists and overviews also include additional equipment. If this equipment is not fitted in your specific case, skip the irrelevant items on the list.

10.1 Checklist for commissioning and recommissioning

Note: Before each initial startup or restart of the automatic feeder, you must carefully read and observe the operating manual, particularly the safety information.




| General tasks | OK? |
|---|--------------------------|
| Inform the end user that the automatic feeder must be installed in a frost-proof location or must be fitted with frost protection equipment. | <input type="checkbox"/> |
| Inform the end user that he/she must ensure appropriate lightning protection (e.g., lightning protection system for the entire building). | <input type="checkbox"/> |
| Tell end users that the automatic feeder must be protected from rain and moisture. | <input type="checkbox"/> |
| Tell the end user that the water should be of drinking water quality. Excessive calcium and/or iron and/or manganese concentrations may cause premature wear. | <input type="checkbox"/> |
| Tell end users that the hose which goes from the mixer drain valve to the drain shaft may not be lengthened. | <input type="checkbox"/> |
| Tell end users that the feeder and cables must be protected against exposure to sunlight. | <input type="checkbox"/> |
| Set up the automatic feeder on an even surface. | <input type="checkbox"/> |
| Remove the wing nut from the mixer. | <input type="checkbox"/> |
| Cut the discharge hose short to length. | <input type="checkbox"/> |
| Electrically ground the automatic feeder. | <input type="checkbox"/> |
| Connect water supply. | <input type="checkbox"/> |
| Connect drain. | <input type="checkbox"/> |
| Install feeding box and feeding station. | <input type="checkbox"/> |
| ⊕ Attach pushbutton/remote control. | <input type="checkbox"/> |
| Connect antennas and Ethernet cable. | <input type="checkbox"/> |
| ⊕ Install concentrate station (including antennas) and fill concentrate container. | <input type="checkbox"/> |
| ⊕ Install animal scales: install scales controller(s), install weighing platforms in the stands. | <input type="checkbox"/> |
| Install suction hoses. | <input type="checkbox"/> |
| Install safety grid for the powder hopper attachment. | <input type="checkbox"/> |
| Fill up MP container. | <input type="checkbox"/> |
| ⊕ Installing external cleaning agent supply | <input type="checkbox"/> |
| Test the switch setting of the vapor barrier. | <input type="checkbox"/> |

| | |
|--|--------------------------|
| Connect power supply. | <input type="checkbox"/> |
| Switch on automatic feeder. | <input type="checkbox"/> |
| Fill boiler with water. | <input type="checkbox"/> |
| Reinstall device data. | <input type="checkbox"/> |
| Setup | OK? |
| Switch the automatic feeder off and again at main switch whilst holding down  . | <input type="checkbox"/> |
| Check the following settings: | |
| Language: | <input type="checkbox"/> |
| Check time/date, set if necessary. | <input type="checkbox"/> |
| Machine: | |
| Assign number and address. | <input type="checkbox"/> |
| Determine base size. | <input type="checkbox"/> |
| Heating system electronic/none. | <input type="checkbox"/> |
| Equipment: | |
| Mixer drain fitted yes/no. | <input type="checkbox"/> |
| ⊕ Additive dispenser 1/2 powder or liquid fitted yes/no. | <input type="checkbox"/> |
| ⊕ Flushing agent pump fitted yes/no. | <input type="checkbox"/> |
| ⊕ Flushing agent sensor no/rod. | <input type="checkbox"/> |
| Circulation valve fitted no. | <input type="checkbox"/> |
| ⊕ Air valve (pulsating compressed air cleaning) fitted yes/no. | <input type="checkbox"/> |
| Gully valve 2 fitted yes/no. | <input type="checkbox"/> |
| Mixer temperature sensor fitted yes/no. | <input type="checkbox"/> |
| Water meter fitted yes/no. | <input type="checkbox"/> |
| Point electrode fitted yes/no. | <input type="checkbox"/> |
| Identification: | |
| Set type. | <input type="checkbox"/> |
| Set squelch value. | <input type="checkbox"/> |
| ID chip | <input type="checkbox"/> |
| ⊕ Calibration scales: | |
| activate yes/no | <input type="checkbox"/> |
| adjust. | <input type="checkbox"/> |
| Stations: | |
| Activate internal feeding box(es), controlled by feeder. | <input type="checkbox"/> |

| | |
|--|--------------------------|
| <p>⊕ Configure single IFS feeding box(es) / set extras, if any. For IFS feeding box(es), assign CAN bus addresses: To do this, put IFS (feeding box) into search mode and then, via search? assign the address.</p> | <input type="checkbox"/> |
| <p>⊕ Configure quadruple IFS feeding box(es) and issue CAN bus addresses: To do this, put compact IFS unit into search mode and then allocate address via search? assign the address. For each of the four pumps, enter the assignment to the station and its equipment.</p> | <input type="checkbox"/> |
| <p>⊕ Configure the CalfRail and issue a CAN bus address: To do this, put CalfRail unit into search mode and then, allocate address via search? assign the address.</p> | <input type="checkbox"/> |
| <p>⊕ Configure IFS concentrate station 1(...). Select concentrate feeder type. Issue CAN bus addresses: To do this, put IFS (C-station) into search mode and then, via search? assign the address.</p> | <input type="checkbox"/> |
| <p>⊕ Configure scales controller(s) 1/x. To do this, set the CAN address on the scales controller circuit board via HEX switch and enter the set address in setup. Activate any weighing units (1/2).</p> | <input type="checkbox"/> |
| Terminal: | |
| Assign address. | <input type="checkbox"/> |
| Communication: | |
| Institute yes/no | <input type="checkbox"/> |
| Printer no/serial/CAN. | <input type="checkbox"/> |
| Configure gateway, parameters. | <input type="checkbox"/> |
| Configure network. | <input type="checkbox"/> |
| Device data | OK? |
| Operating modes: | |
| Set rationed or ad lib mode. | <input type="checkbox"/> |
| Set portion: | |
| Set the set and minimum temperature. | <input type="checkbox"/> |
| Set output pause. | <input type="checkbox"/> |
| Set mixer draining and mixer OFF delay | <input type="checkbox"/> |
| Check time and date . | <input type="checkbox"/> |
| Assign the function keys | <input type="checkbox"/> |
| Specify the animal list . | <input type="checkbox"/> |
| Define the station parameters: | |
| Drain time. | <input type="checkbox"/> |
| Switch auto-calibration on or off, specify the time of auto-calibration. | <input type="checkbox"/> |
| ⊕ Teat slider (close/open after xx min). | <input type="checkbox"/> |

| | |
|---|--------------------------|
| ⊕ CalfProtect (open after xx min). | <input type="checkbox"/> |
| Calibration | OK? |
| MP | <input type="checkbox"/> |
| Boiler water | <input type="checkbox"/> |
| ⊕ Additive 1/2 | <input type="checkbox"/> |
| Flushing agent | <input type="checkbox"/> |
| ⊕ Concentrate stations | <input type="checkbox"/> |
| ⊕ Hose pumps | <input type="checkbox"/> |
| ⊕ Settings for automatic calibration of MP/water. | <input type="checkbox"/> |
| ⊕ Settings for automatic calibration of the hose pump. | <input type="checkbox"/> |
| Registration | OK? |
| Antenna test | <input type="checkbox"/> |
| Set the scheme for the transmitter number assignment: consecutive, automatic. | <input type="checkbox"/> |
| Reading transmitter numbers. | <input type="checkbox"/> |
| Set registration mode: no, automatic, available transmitter numbers. | <input type="checkbox"/> |
| Register the animals. | <input type="checkbox"/> |
| Plans | OK? |
| Feed: | |
| Feeding plans | <input type="checkbox"/> |
| Concentrate plans | <input type="checkbox"/> |
| Quantity limitation: check minimum saved amount/maximum saved amount. | <input type="checkbox"/> |
| ⊕ Check the maximum speed of the hose pumps and adjust them if necessary. | <input type="checkbox"/> |
| Weaning | <input type="checkbox"/> |
| ⊕ Concentrate: | |
| Concentrate plan | <input type="checkbox"/> |
| Portion size | <input type="checkbox"/> |
| Quantity limitation: check minimum saved amount/maximum saved amount. | <input type="checkbox"/> |
| Activate accustoming quantity yes/no. | <input type="checkbox"/> |
| Check amount/threshold and adjust if necessary. | <input type="checkbox"/> |
| Activate carryover: yes/no | <input type="checkbox"/> |

| | |
|--|--------------------------|
| Change date of individual animals | OK? |
| Group | <input type="checkbox"/> |
| Feed | <input type="checkbox"/> |
| Concentration | <input type="checkbox"/> |
| ⊕ Concentrate | <input type="checkbox"/> |
| ⊕ Additive 1 / additive 2 | <input type="checkbox"/> |
| Weight | <input type="checkbox"/> |
| Plan day (correction days) | <input type="checkbox"/> |
| Cleaning | OK? |
| Check or make settings: | |
| Temperature, flushing water. | <input type="checkbox"/> |
| ⊕ Flushing agent amount. | <input type="checkbox"/> |
| Flush the teats: | <input type="checkbox"/> |
| Drainage mode | <input type="checkbox"/> |
| Cleaning circuit | <input type="checkbox"/> |
| ⊕ Air (pulsating compressed air cleaning) | <input type="checkbox"/> |
| Perform cleaning. | <input type="checkbox"/> |
| Recommissioning | OK? |
| Set up the automatic feeder. | <input type="checkbox"/> |
| Clean outside of automatic feeder with damp cloth. | <input type="checkbox"/> |
| Fit powder hopper attachment safety grid. | <input type="checkbox"/> |
| Connect water connection of automatic feeder to milk tank using new hose. | <input type="checkbox"/> |
| Commission the cleaning agent supply. | <input type="checkbox"/> |
| Fitting a new teat. | <input type="checkbox"/> |
| Connect teat to feeding box valve (rationed mode) or to mixer beaker (ad lib mode) using new hose. (Install hose with downwards gradient to automatic feeder). | <input type="checkbox"/> |
| Connect mixer drain valve and the drain channel using a hose. The hose may not be extended. | <input type="checkbox"/> |
| Replace the dummy plug with the cable gland for the Ethernet cable, and connect the Ethernet cable. | <input type="checkbox"/> |
| Remove locks of antenna connections and connect antenna cable. | <input type="checkbox"/> |
| Connect power plug to installed socket and switch on the automatic feeder. | <input type="checkbox"/> |
| On the hand terminal, acknowledge the message Fault, HE not filled by pressing <input type="button" value="Enter"/> . Press | <input type="checkbox"/> |


| | |
|---|--------------------------|
|  and confirm Boiler: fill by choosing  . | <input type="checkbox"/> |
| Input the time and date using  > Device data > Date and Time. | <input type="checkbox"/> |
| Run cleaning programs. | <input type="checkbox"/> |
| Fill milk powder (MP). | <input type="checkbox"/> |
| Perform calibration. | <input type="checkbox"/> |
| Check setup settings. | <input type="checkbox"/> |

10.2 Materials list

The materials used in the automatic feeder include:


- Brass, Enzidor®
- Silicon carbide
- Carbon
- V2A, V4A
- Plastics: PET, TPE, silicone, PVC, NBR, ABS, PUR
- Viton
- Vulcanized fiber, graphite-loaded
- Rubber
- Bronze

10.3 Shutdown checklist

| Shutdown | OK? |
|---|--------------------------|
| Perform flushing. | <input type="checkbox"/> |
| Stop the cleaning agent supply and drain the cleaning agent from the system. | <input type="checkbox"/> |
| Drain water from boiler, solenoid valves, pressure valve, and volume control valve. | <input type="checkbox"/> |
| 1) Close water tap. | |
| 2) On the hand terminal choose  > Bo. water > Start? Dispense water into the mixer beaker. | |
| 3) Switch off the automatic feeder and disconnect the power plug. | |
| 4) Disconnect water hose between water solenoid valve and boiler. | |
| 5) Open vent screw on boiler cover and drain boiler. | |
| 6) Reattach water hose and tighten vent screw. | |
| Disconnect and dispose of water hose. | <input type="checkbox"/> |
| Tip out liquid in mixer. | <input type="checkbox"/> |
| Disconnect hose between teat and feed station valve or mixer. Replace hoses and teats. | <input type="checkbox"/> |
| Disconnect hose between mixer drain valve and drain channel. | <input type="checkbox"/> |
| Close cable glands of Ethernet Connection with dummy plugs. | <input type="checkbox"/> |
| Close antenna connection with locks. | <input type="checkbox"/> |
| Clean outside of automatic feeder with damp cloth. | <input type="checkbox"/> |
| Empty milk powder container. | <input type="checkbox"/> |
| Remove powder container safety grid. | <input type="checkbox"/> |
| Basic cleaning of milk powder container and dosing unit. | <input type="checkbox"/> |
| Seal off the cleaning agent. | <input type="checkbox"/> |

10.4 Standard feeding plans

Standard Feeding Plan Group A

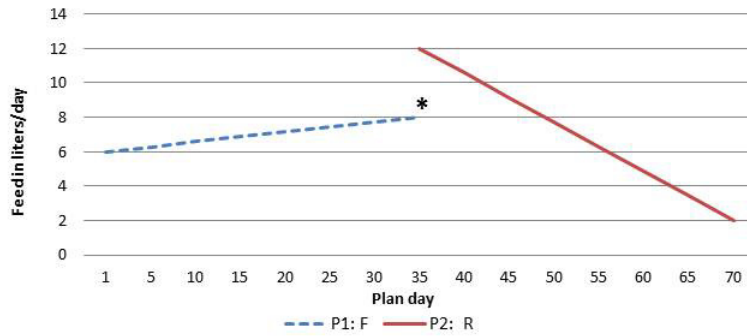

Standard Feeding Plan

P1: 35 days from 6 to 8 L **F**
 P2: 35 days from 12 to 2 L **R**

Total: 70 days

Standard Concentration Plan

P1: 70 days from 150 to 150 g/L

Standard Quantity Limitation Plan


P1: 10 days: 1.5 L (Min) 2.0 L (Max)
 P2: 25 days: 2.0 L (Min) 2.5 L (Max)
 P3: 35 days: 2.0 L (Min) 3.0 L (Max)

F = 40FIT feeding

R = Restricted feeding

* This quantity is not intended as a maximum quantity but as a reference value to calculate an alarm level.

Standard Feeding Plan Group B

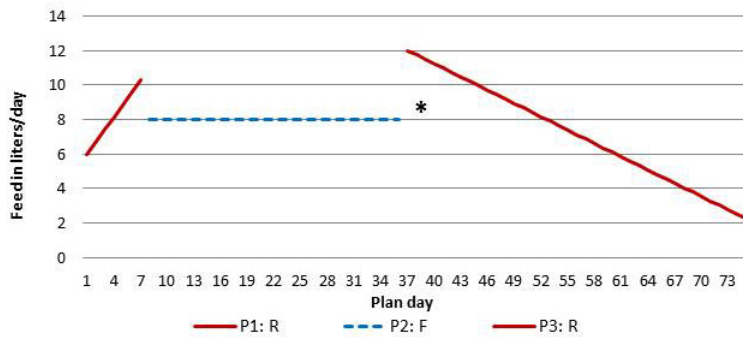

Standard Feeding Plan

P1: 7 days from 6 to 10 L **R**
 P2: 28 days from 8 to 8 L **F**
 P3: 40 days from 12 to 2 L **R**

Total: 75 days

Standard Concentration Plan

P1: 75 days from 150 to 150 g/L

Standard Quantity Limitation Plan


P1: 10 days: 1.5 L (Min) 2.0 L (Max)
 P2: 25 days: 2.0 L (Min) 2.5 L (Max)
 P3: 40 days: 2.0 L (Min) 3.0 L (Max)

F = 40FIT feeding

R = Restricted feeding

* This quantity is not intended as a maximum quantity but as a reference value to calculate an alarm level.

Standard Feeding Plan Group C

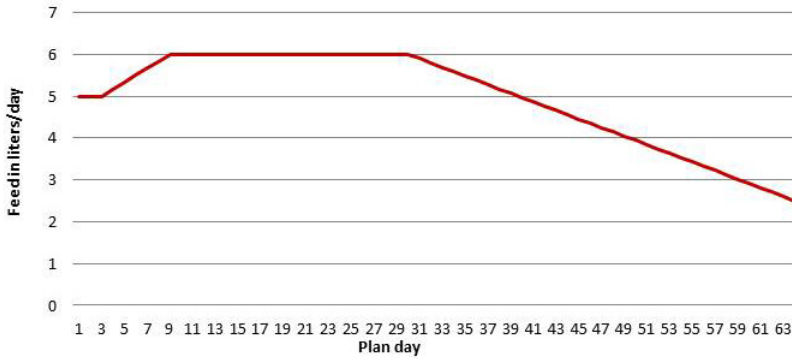

Standard Feeding Plan
 P1: 2 days from 5.0 to 5.0 L
 P2: 6 days from 5.0 to 6.0 L
 P3: 21 days from 6.0 to 6.0 L
 P4: 35 days from 6.0 to 2.5 L


Total: 64 days = 316 L

Standard Concentration Plan
 P1: 64 days from 150 to 150 g/L

Total: 64 days = 47.4 kg MP

Standard Quantity Limitation Plan
 P1: 14 days: 1.5 L (Min) 2.0 L (Max)
 P2: 14 days: 2.0 L (Min) 2.5 L (Max)
 P3: 36 days: 2.5 L (Min) 3.0 L (Max)

Standard Feeding Plan Group D

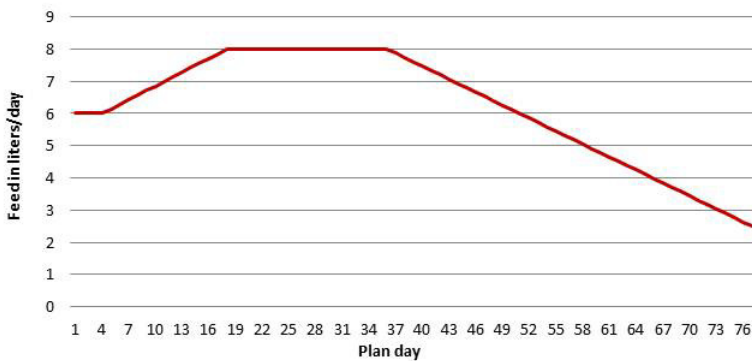

Standard Feeding Plan
 P1: 3 days from 6.0 to 6.0 L
 P2: 14 days from 6.0 to 8.0 L
 P3: 18 days from 8.0 to 8.0 L
 P4: 42 days from 8.0 to 2.5 L

Total: 77 days = 478 L

Standard Concentration Plan
 P1: 77 days from 150 to 150 g/L

Total: 77 days = 71.7 kg MP

Standard Quantity Limitation Plan
 P1: 14 days: 1.5 L (Min) 2.0 L (Max)
 P2: 14 days: 2.0 L (Min) 2.5 L (Max)
 P3: 49 days: 2.5 L (Min) 3.0 L (Max)


10.5 CAN bus addresses

Standard addresses


The following chart shows an example of address assignment based on default values. On the following page, you can assign completely customized addresses. Copy the template if needed.

Note: You can assign a number only once.

Note: If possible, do not change the standard addresses.

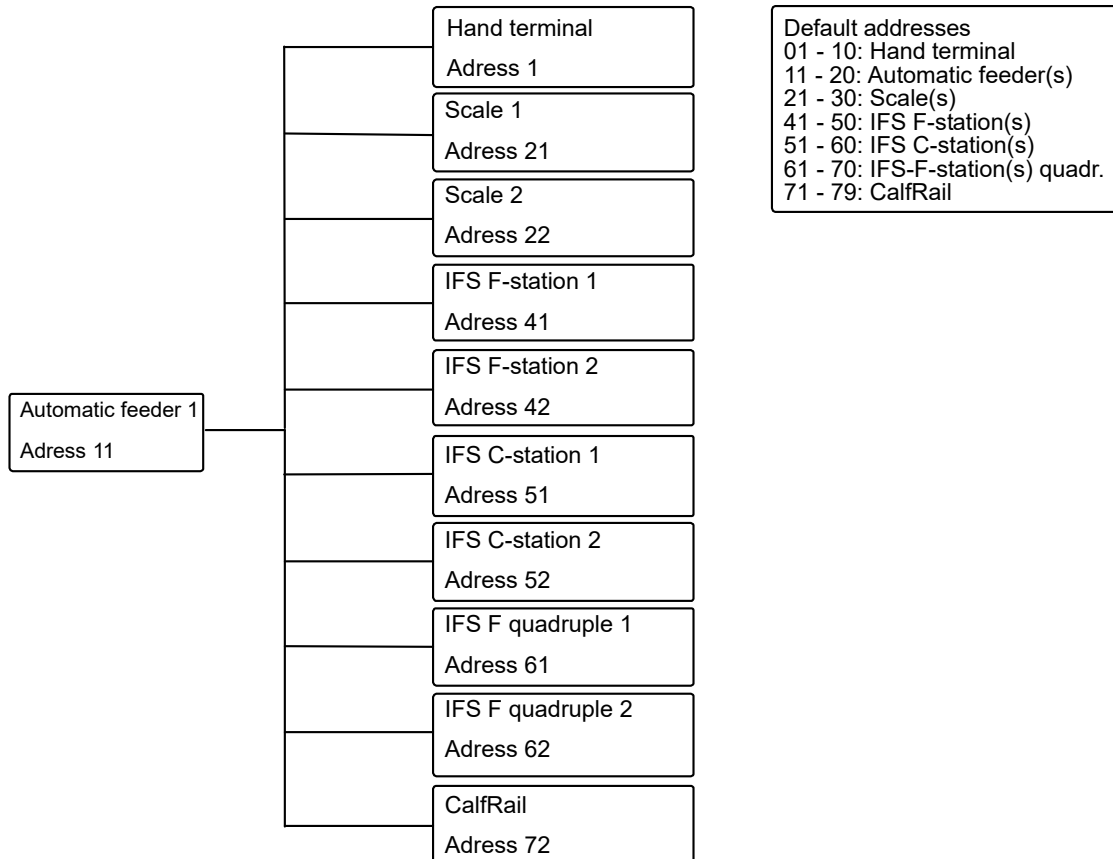

Template for custom address assignment

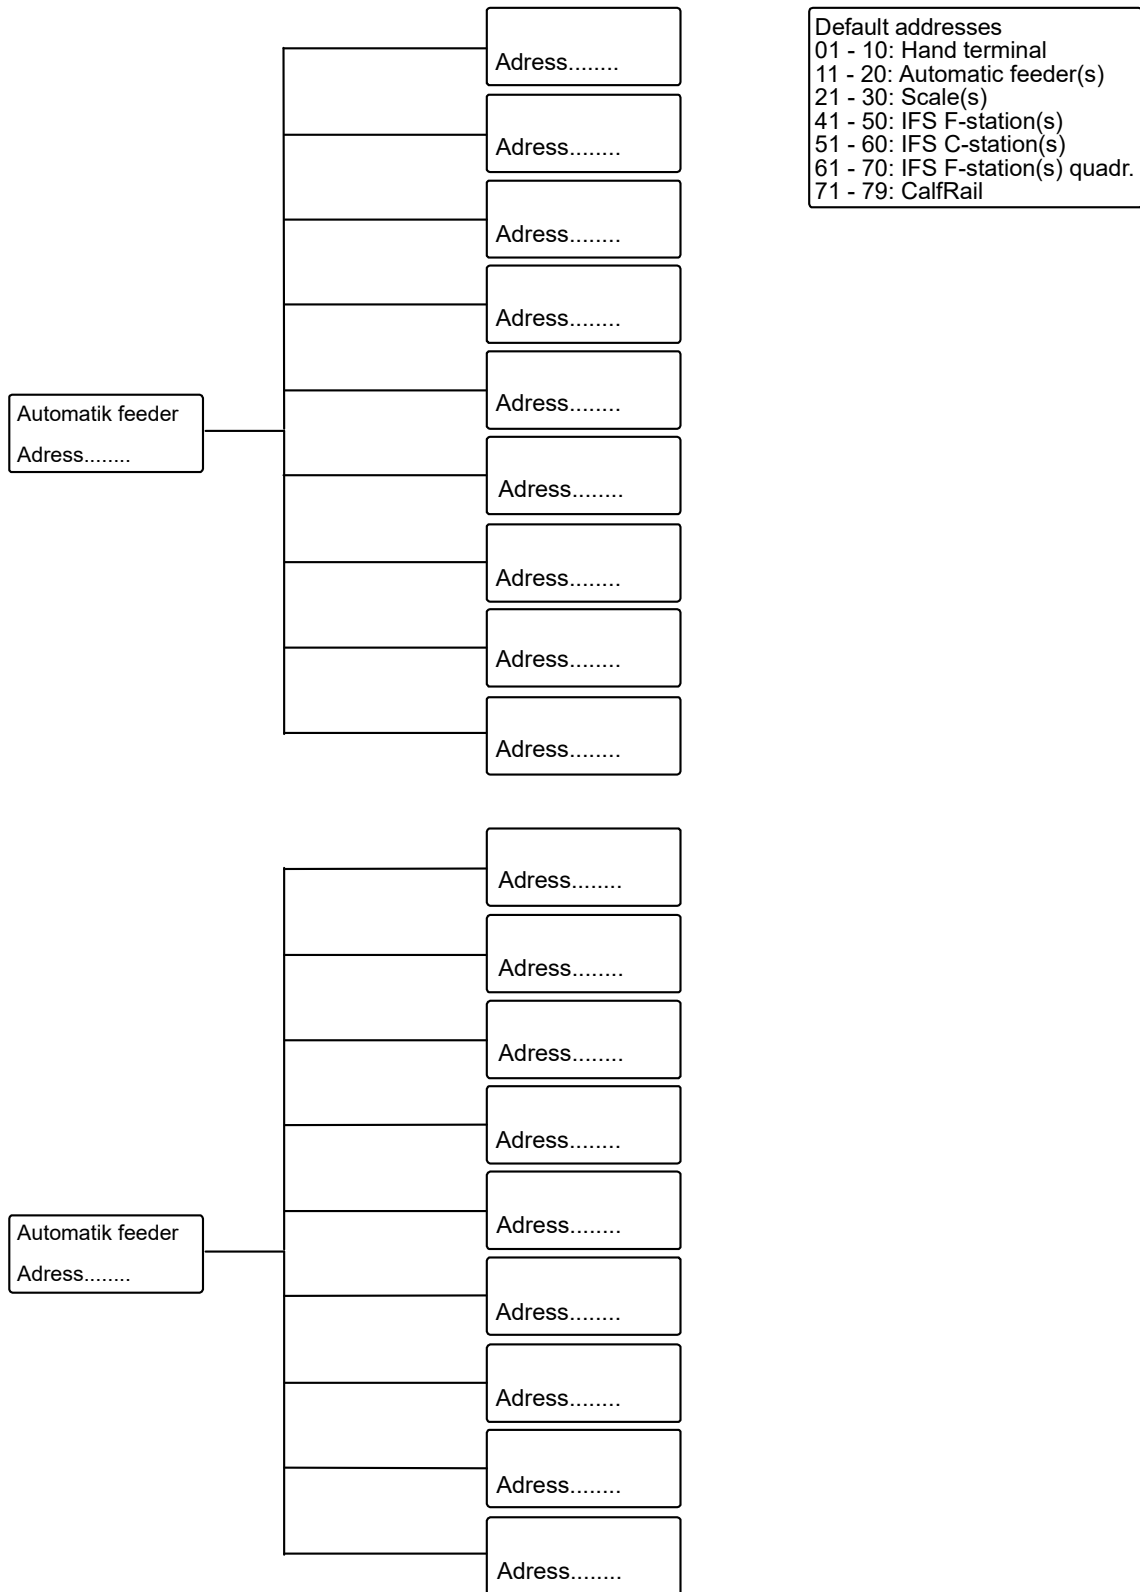

10.6 Checking components for compliance with national regulations

All electrical components must be checked regularly for electrical safety in accordance with the intervals and test methods defined in the national regulations.

If any faults or damage are detected during the inspection, the faulty components have to be replaced before the automatic feeder can be used again.

Index**A**

Ad lib mode 45
Alarm 42
Angle brackets 41
Animal control 43
Animal list 35 39 50
Arrows 41
Auto LED 40
Automatic feeder address 63
Automatic feeder number 62
Automatic feeder versions 7
Automatic mode 40

B

Base size 63
Boiler 12
Boiler valve 64

C

CalfCloud 54 57
Calibrating with calibration scales
 Cleaning agents 73
 liquid components 72
 powder components 73
Calibrating without calibration scales
 liquid components 71
 powder components 72
Calibration 71
Calibration scales
 activate 67
 adjustment 67
CAN bus addresses 123
Cancel 81
 Canceling a group 82
 Group 82
 Individual animal 81
 Weaned animals 82
Canceling animals 81
Change registration 82 82
Changing the registration of animals 82
Checking components 35
Checking components by means of measurements 125
cleaning agent lance 31

cleaning agent supply pipe 31

Cloud 42

Communication

 Cloud 69

 Gateway 70

 MultiReader 70

 Network 69

 Printer 69

 Restart 70

D

Data backup 52

 with cloud 54

 with SD card 53

Data restoration 53

Date 62

Deleting the transmitter number 78

Device data

 Portion output for entitlement less than 250 ml 47

Diagnostics

 Check 111

 Heating system 109 111

 Material list 119

 Motors 109

 Remote maintenance 113

 Sensors 110

 Setup 113

 Software 113

 Stations 111

 Valves 108

 Version 113

Dimensions 12

Dispensing pause 47

Disposal 13

Drain time station parameters 35

Drink-out time 49

E

Electrical connection 11

Electrical connection provided by the customer 23

Equipment

 Additive dispenser 64

- Air valve 66
- Circulation valve 65
- Flushing agent 1 64
- Flushing agent 2 65 65
- Flushing agent sensor 65
- Mixer drain valve 64
- Mixer temperature sensor 66
- Point electrode 66
- Water meter 66
- Extra portion 44
- F**
- Faults
 - Boiler not filled 91
 - Boiler temperature sensor 95
 - Calibration 96
 - Calibration scales 90
 - Draining the mixer 93
 - Heating system 94
 - Heating up 90
 - ID chip 96
 - Shortage of water 91
 - Station/drain valve 97
 - Temperature too high 91
 - Uncontrolled output 98
 - Water meter 93
- Feeder type 62
- Feeding button 25
- Front and right side view of automatic feeder 8
- Function keys 50
- G**
- Grounding symbol 18
- H**
- Hand terminal 38
- Hazard description 17
- Hazards
 - Chemical burns 16
 - Corrosion 16
 - Excessive physical strain 16
 - Infection 16
 - Loss of stability 16
 - Poisoning 16
- Heating system 64 66
- Heating system diagram 11
- I**
- ID chip 67
- Identification 27 66
- Identification range 27
- Initial start-up
 - Calibration 71
 - Connecting antenna cables 27
 - Connecting the Ethernet cable 28
 - External cleaning agent supply 31
 - Filling the boiler 33
 - Filling the powder container 30
 - Installing feeding station 24
 - Installing stand partitions 25
 - Installing the antennas 26
 - Installing the pushbutton 26
 - Installing the safety grid. 29
 - Setting offline mode 34
 - Squelch values and identification ranges 27
 - Switching on the automatic feeder 33
 - Switching on the vapor barrier 30
 - Water connection 24
- Instruction notices 18
- Intended use 15
- Internal data backup 52
- L**
- Language 62
- M**
- Main menu 44
- Managing the transmitters 75
- Manual functions 38 44
- Marking 42 42
- Material damage 16
- Milk powder container 13
- Minimum temperature 46
- Mixer draining 48
- Mixer run-on 49
- N**
- Name plate 9
- Navigation 42
- New installation 55
- O**
- Offline mode 40

P

Plan tendency 42
Potential equalization 23
Powder sensor 65
Prohibitory signs 18
Pushbutton 25

R

Rationed mode 45
Rear view of automatic feeder 9
Recommissioning
 After changing a circuit board 88
 after temporary shutdown 87

Registering animals 79

Registration

 automatically 80 80 80
 manual 79 79

Reinstalling everything 33 55

Reset 33

Residual current circuit breaker 23

Rod electrode 41

S

Safety devices 20

 Protective grid for powder hopper attachment 20

 Safety temperature limiter 20

Safety notices 18

Safety signs

 Warning signs 18

Scraper next to the milk powder outlet 21

SD card 53

Sensor 75

Service messages 107

Service technician 15

Service work 107

Set temperature 46

Setting portion 34 46

Setting the date 46

Setting the feeding box 68

Setting the operating mode 44

Setting the time 46

Setting up the automatic feeder 22

Setup 59 67

Shutdown 83

 Permanent shutdown 86

 Temporary shutdown 83

Sleep mode 42

Software update 56

Square brackets 41

Squelch 66

Squelch values 27

Stations 68

Switching on the automatic feeder 33

Symbols 41

T

Terminal

 Address 68

 Contrast 68

 Sleep mode 68

Time 62

Transmitter numbers 75

Transmitters

 Assigning animal numbers 76

 Calling up the transmitter statistics 79 79

 Changing the animal number 78

 Changing the transmitter number 77

 Creating transmitter numbers 75

 Deleting transmitter numbers 78

 Editing transmitters or animal numbers 77

 Manually entering transmitter numbers 76

 Reading transmitter numbers 76

Type of automatic feeder 62

Type of heating system 64

V

vapor barrier 30

W

Warnings

 Calibration 101

 Calibration scales 102

 Check SD card 104

 Duplicate address 100

 Duplicate animal number 103

 Emptying the mixer 99

 ID chip 102

 Identification 100

 Incorrect ID 100

 Machine capacity 104

 Mixer temperature sensor 100

Unknown transmitter 101
Water connection 12
Water pressure 24
Weight 12

EC declaration of conformity

according to the EU Machinery Directive 2006/42/EG, Annex II, 1.A

Manufacturer:

Förster-Technik GmbH,
Gerwigstr. 25
78234 Engen

Person residing within the Community authorised to compile the relevant technical documentation:

Müller Barbara
Förster-Technik GmbH,
Gerwigstr. 25
78234 Engen

Description and identification of the machinery:

Make: Automatic feeder

Type: TAK5- VS2-*, TAP5-VS2-*, VDW5-VS2-*, TAK5-CS2-*, TAP5-CS2-*, TAK5- VS1-*, TAP5-VS1-*, VDW5-VS1-*, TAK5-CS1-*, TAP5-CS1-*, VDW5-CS1-*, TAK5- VH2-*, TAP5-VH2-*, VDW5-VH2-*, TAK5-CH2-*, TAP5-CH2-*, VDW5-CH2-*, TAK1-KU2-*, TAK5-KR3-*, TAP1-ZM2-*, TAP2-ZM2-*, VDW1-WA2-*, TAP7-AH2-*

Function: Automatic preparation, heating, and dosing of liquid feeds for young animal feeding

It is expressly declared that the machinery fulfils all relevant provisions of the following EU Directives:

2006/42/EG Directive 2006/42/EG of the European Parliament and of the Council of 17 May 2006 on machinery, and amending Directive 95/16/EG (recast)

2014/30/EU Directive 2014/30/EU of the European Parliament and of the Council of 26 February 2014 on the harmonisation of the laws of the Member States relating to electromagnetic compatibility (recast)

Reference to the harmonised standards used, as referred to in Article 7(2):

EN ISO 12100:2010-11 Safety of machinery - Electrical equipment of machines - Part 1: General requirements (ISO 12100:2010)

EN 60335-1:2012/A11:2014 Household and similar electrical appliances - Safety - Part 1: General requirements IEC 60335-1:2010 (modified)

EN 61000-6-2:2005/AC:2005 Electromagnetic compatibility (EMC) - Part 6-2: Generic standards - Immunity for industrial environments

EN 61000-6-3:2007/A1:2011/AC:2012 Electromagnetic compatibility (EMC) - Part 6-3: Generic standards - Emission standard for residential, commercial and light-industrial environments

Engen, 23.06.2017



Place, date

Signature
Markus Förster
CEO